

FAX-L200/L280

FAX-L240/L290

PARTS

CATALOG

REVISION 1

| | | | |
|-----------------|----------|------|-----|
| FAX-L200 | H12-2033 | 230V | EC |
| FAX-L200 | H12-2034 | 230V | UK |
| FAX-L200 | H12-2035 | 230V | GER |
| FAX-L200 | H12-2036 | 230V | CHN |
| FAX-L200 | H12-2037 | 230V | FRN |
| FAX-L200 | H12-2038 | 230V | AUS |
| FAX-L200 | H12-2039 | 230V | AE |
| FAX-L200 | H12-2489 | 230V | KOR |
| FAX-L240 | H12-2513 | 230V | EC |
| FAX-L240 | H12-2514 | 230V | UK |
| FAX-L240 | H12-2515 | 230V | GER |
| FAX-L240 | H12-2517 | 230V | FRN |
| FAX-L280 | H12-2043 | 230V | EC |
| FAX-L280 | H12-2044 | 230V | UK |
| FAX-L280 | H12-2045 | 230V | GER |
| FAX-L280 | H12-2046 | 230V | CHN |
| FAX-L280 | H12-2047 | 230V | FRN |
| FAX-L280 | H12-2048 | 230V | AUS |
| FAX-L280 | H12-2049 | 230V | AE |
| FAX-L290 | H12-2503 | 230V | EC |
| FAX-L290 | H12-2504 | 230V | UK |
| FAX-L290 | H12-2505 | 230V | GER |
| FAX-L290 | H12-2507 | 230V | FRN |
| HANDSET KIT 3 | H12-3701 | 230V | AE |
| TELEPHONE 6 KIT | H12-3708 | 230V | AUS |
| TELEPHONE 6 KIT | H12-3823 | 230V | EU |
| TELEPHONE 6 KIT | H12-3824 | 230V | UK |

Canon

JUNE 2002

HY8-30AM-010

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the content of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new editions of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names described in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

Copyright © 2002 by Canon Inc.

CANON INC.

Office Imaging Consumer Products Quality Assurance Dept. 1

5-1 Hakusan 7-Chome, Toride-city, Ibaraki 302-8501, Japan

DTP System

The data contained on this manual were created using Windows NT computers.

Document creation and page layout were performed using Adobe® PageMaker® 6.5.

Logos and illustrations were created using Adobe® Illustrator® 9.0J.

I. CONTENTS

1. ILLUSTRATION INDEX
2. PARTS LAYOUT & PARTS LIST
3. TOOL
4. LUBRICATIONS
5. NUMERICAL INDEX

II. ABOUT THIS MANUAL

1. ILLUSTRATION INDEX

For illustration index, the parts layout illustrations in this parts catalog are listed in abbreviated form in order of illustration number to identify the pages they appear on. To find an illustration of a part, see the ILLUSTRATION INDEX.

2. PARTS LAYOUT & PARTS LIST

Parts layout illustration

a) Parts search

Find a part from the parts layout illustration and find its key number from the parts list to identify the part number and name.

Further, screws, nuts, washers, grip rings, pins and spacers are mentioned in the parts list.

Note: If parts have the same or similar shape but different specifications, their key number is assigned to several part numbers and names in the parts list.

b) Parts replacement procedure

The parts layout illustrations are arranged according to the disassembly procedure of the product. When a unit in the illustration can be disassemble further, a reference illustration page of the disassembly will be included.

Parts where grease is to be applied are displayed as "Lubrication". When replacing parts, or if grease has accidentally been wiped off, refer to "4". (Lubrications), and reapply the grease.

The letters (A , B etc.) in the illustration indicate the connection locations of cables and screws.

Parts list

a) FIGURE & KEY No.

The FIGURE & KEY No. column corresponds to the key numbers assigned to the parts in the parts layout illustration.

It also corresponds to the part locations printed on the PC board.

b) PART NUMBER

The PART NUMBER column gives the part numbers corresponding to the key numbers. To order a part, indicate the part number clearly.

Note: Parts marked NPN are not service parts.

c) RANK

The service parts with N in the RANK column are order parts.

d) QTY

The QTY column gives the number of parts in the corresponding components layout illustration.

e) DESCRIPTION

The DESCRIPTION column gives the part names in English.

To order a part, indicate the part name, too.

3. TOOL

This is a list of tools used for servicing products.

 
 
 
 
4. LUBRICATIONS





Where grease is to be applied in order to allow moving parts to work smoothly, and to increase conductivity, the type and amount of grease to be used will be mentioned.

5. NUMERICAL INDEX

All the parts listed in this parts catalog are arranged in order of part number. You can identify part locations and names from the NUMERICAL INDEX.

1. ILLUSTRATION INDEX
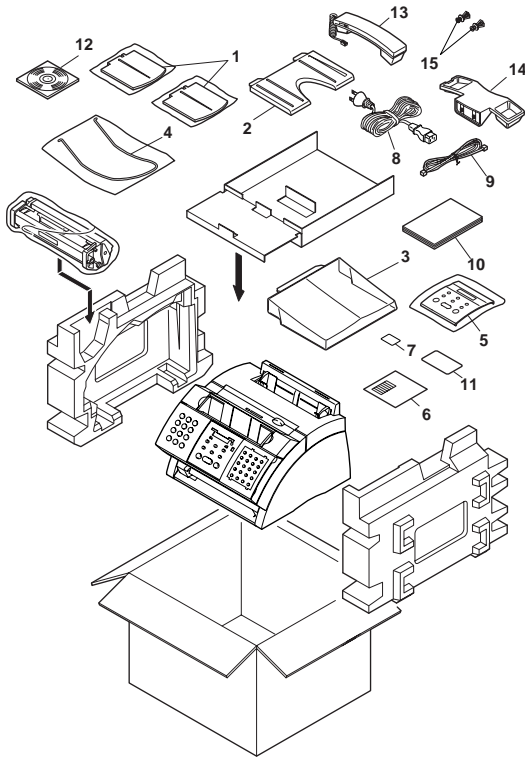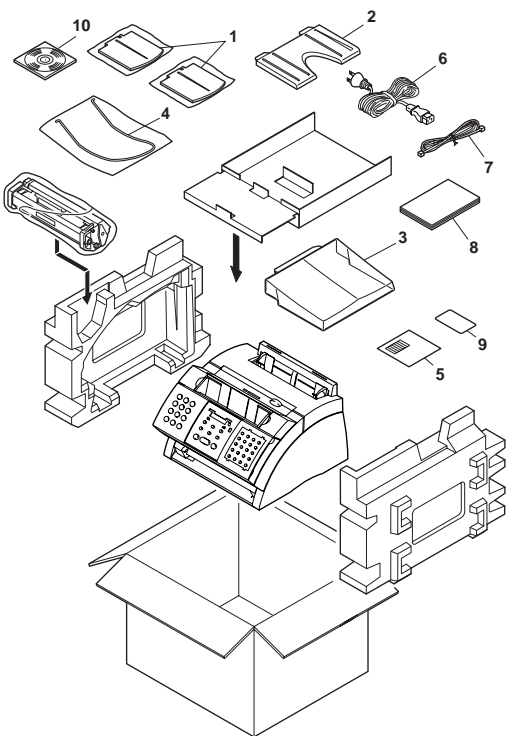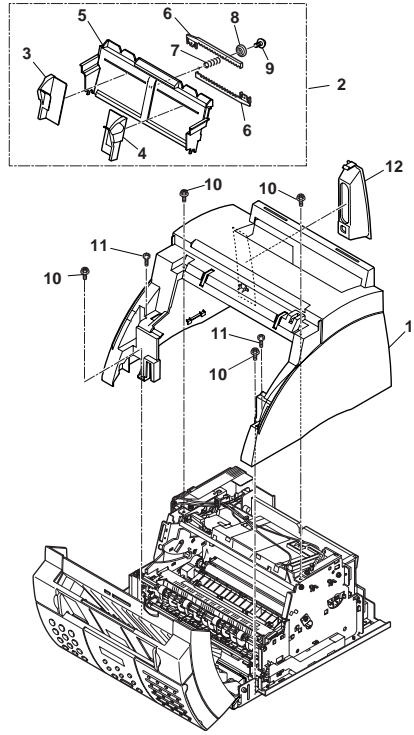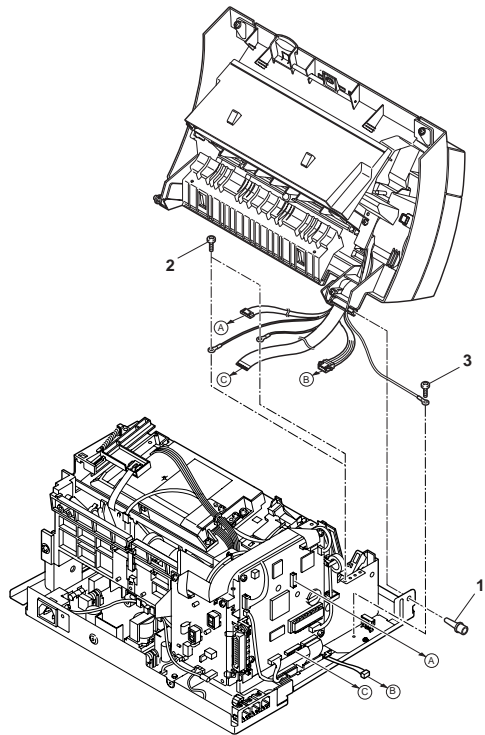
| | | | | | |
|---|--|-----------------|--|---|-----------------|
| FIGURE 1A | PACKAGE CONTENTS (FAX-L200/L280) | See Page 2-1 | FIGURE 1B | PACKAGE CONTENTS (FAX-L240/L290) | See Page 2-3 |
|  | | |  | | |
| FIGURE 2 | COVERS & TRAY ASS'Y | See Page 2-5 | FIGURE 3A | READING ASS'Y & MAIN FRAME (FAX-L200/L280) | See Page 2-7 |
|  | | |  | | |
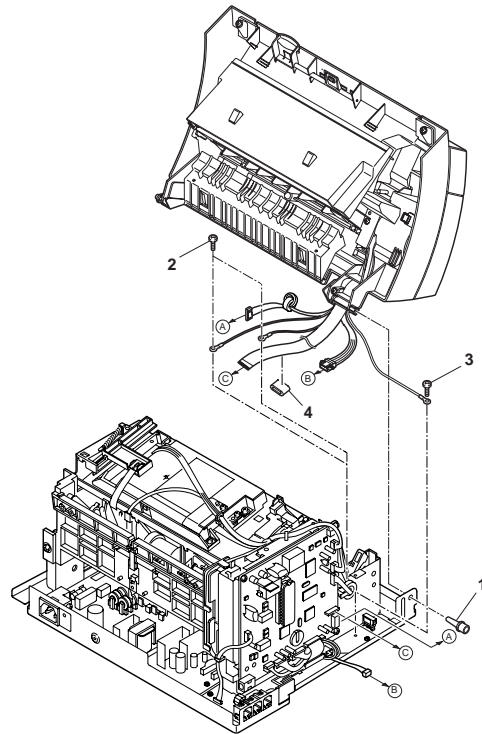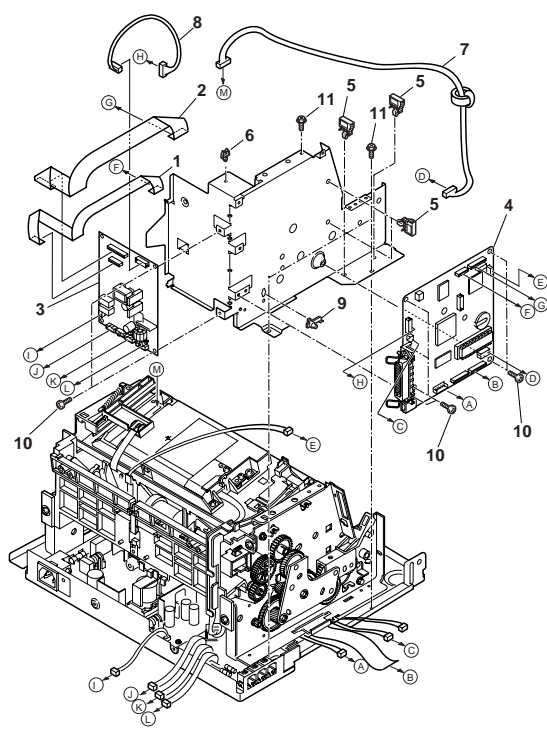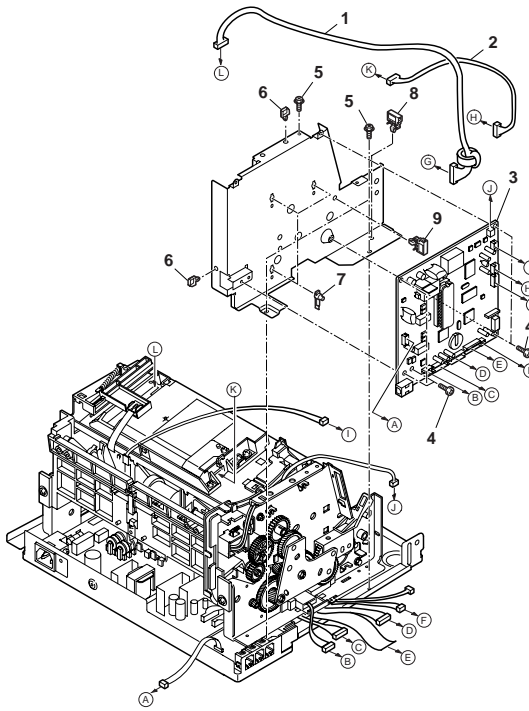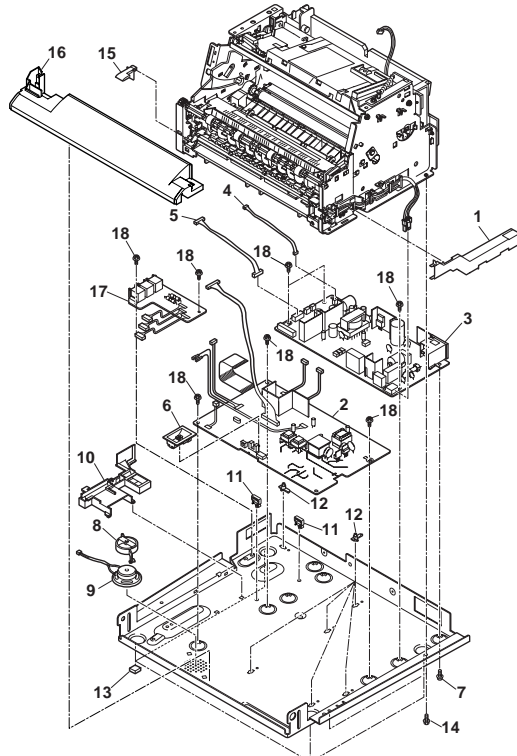    
| | | | | | |
|---|---|--|------------------|---|------------------|
| FIGURE 3B | READING ASS'Y & MAIN FRAME (FAX-L240/L290) | See Page 2-9 | FIGURE 4A | CIRCUIT BOARDS & MAIN FRAME (FAX-L200/L280) | See Page 2-11 |
|  | |  | | | |
| FIGURE 4B | CIRCUIT BOARDS & MAIN FRAME (FAX-L240/L290) | See Page 2-13 | FIGURE 5A | CIRCUIT BOARDS & BOTTOM PLATE (FAX-L200/L280) | See Page 2-15 |
|  | |  | | | |

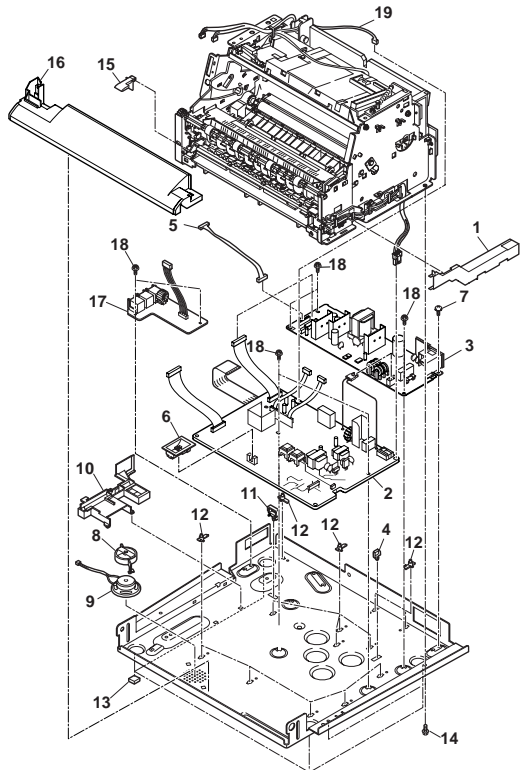 
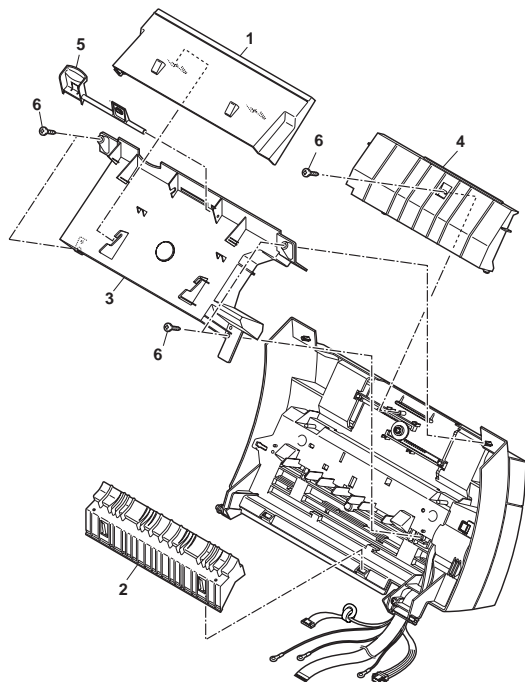 
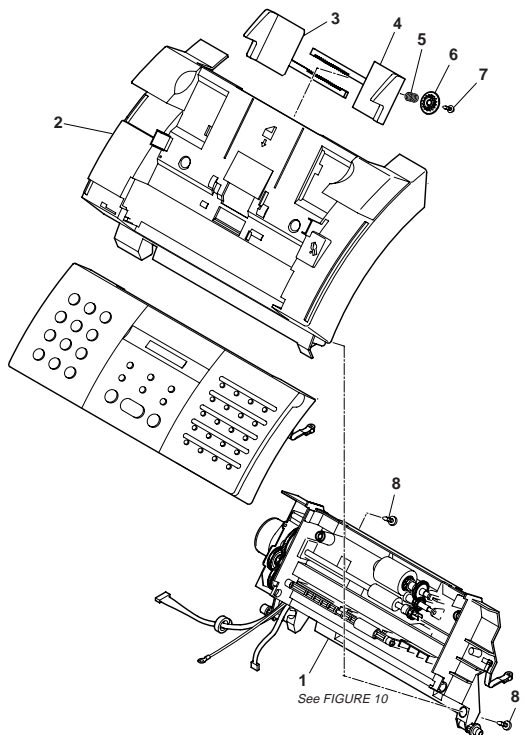 
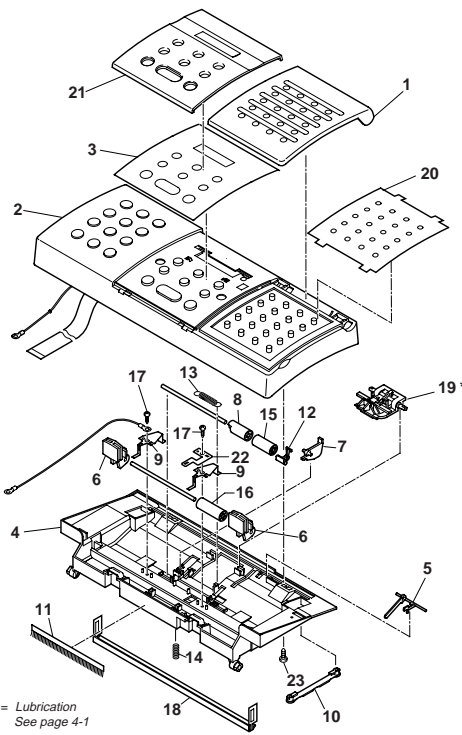 
| | | | |
|--|--------------------------|--|--------------------------|
| <p>FIGURE 5B CIRCUIT BOARDS & BOTTOM PLATE (FAX-L240/L290)</p> | <p>See Page 2-17</p> | <p>FIGURE 6 READING ASS'Y 1</p> | <p>See Page 2-19</p> |
|  | |  | |
| <p>FIGURE 7 READING ASS'Y 2</p> | <p>See Page 2-21</p> | <p>FIGURE 8 OPERATION PANEL ASS'Y & ADF UPPER</p> | <p>See Page 2-23</p> |
|  <p>See FIGURE 10</p> | |  <p>* = Lubrication See page 4-1</p> | |

FIGURE 9 OPERATION PANEL ASS'Y

See Page
2-27

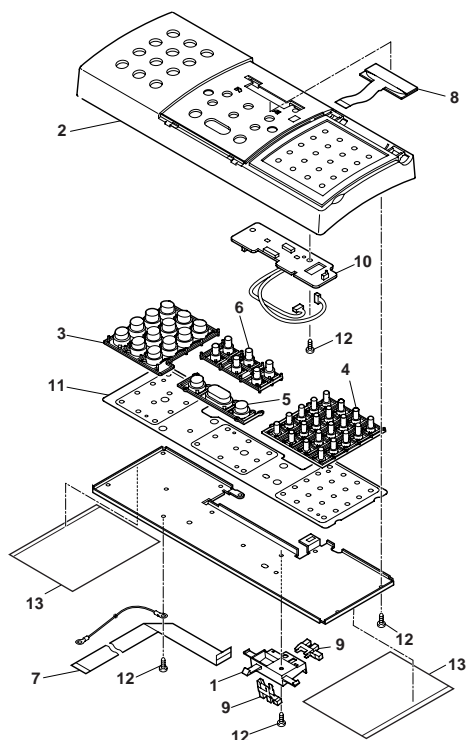 


FIGURE 10 ADF LOWER

See Page
2-29

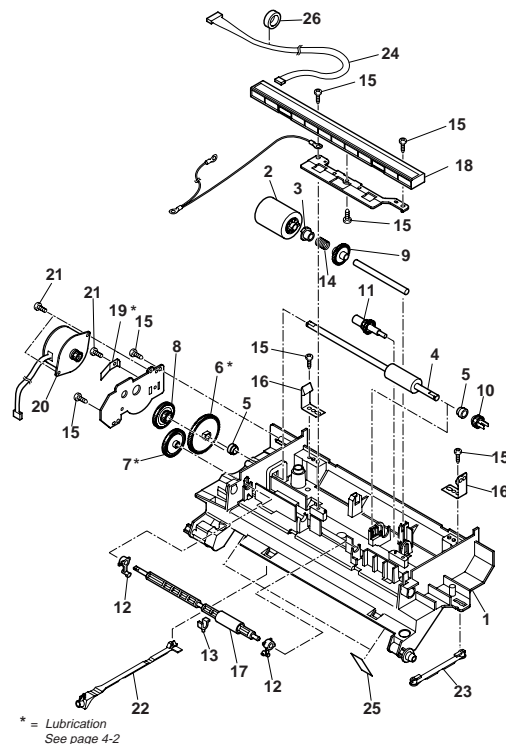 


FIGURE 11 SCANNER ASS'Y

See Page
2-31

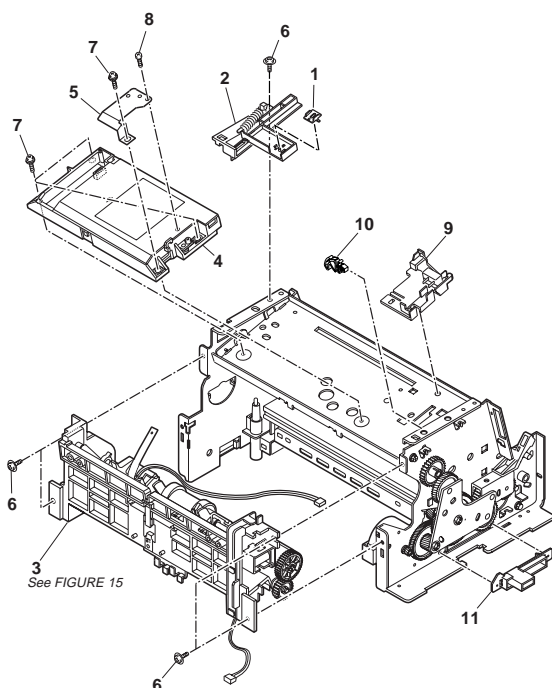 


FIGURE 12 FIXING SECTION 1

See Page
2-33

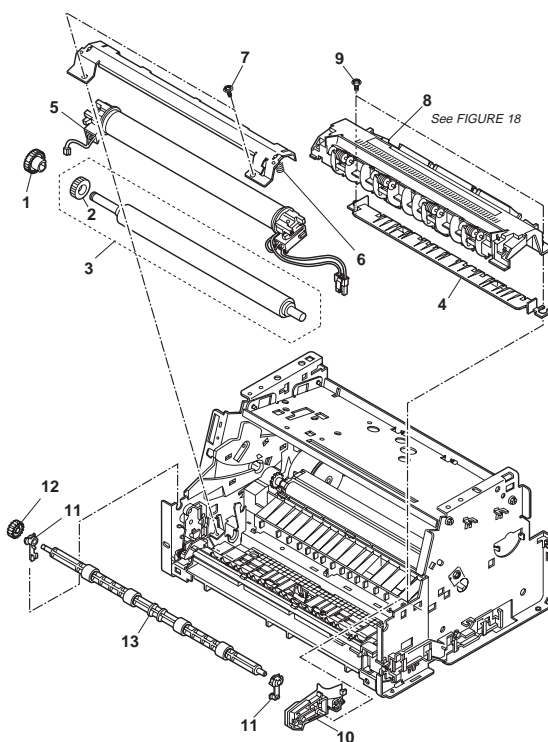 


FIGURE 13 DRIVE GEARS

See Page
2-35

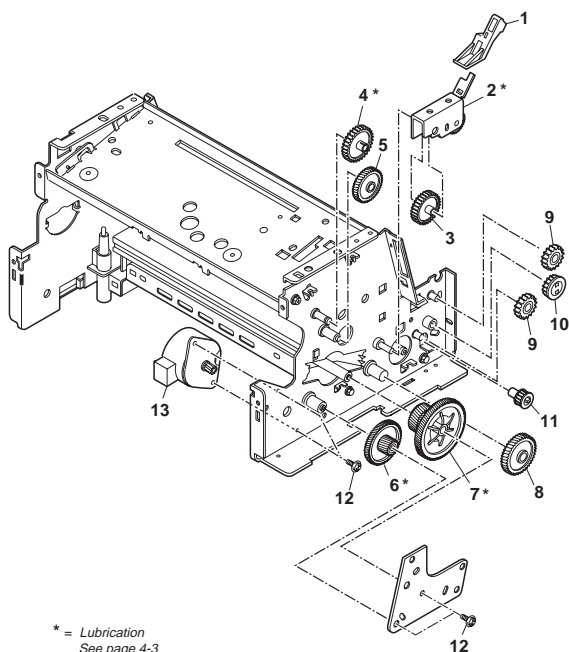 


FIGURE 14 FIXING SECTION 2

See Page
2-37

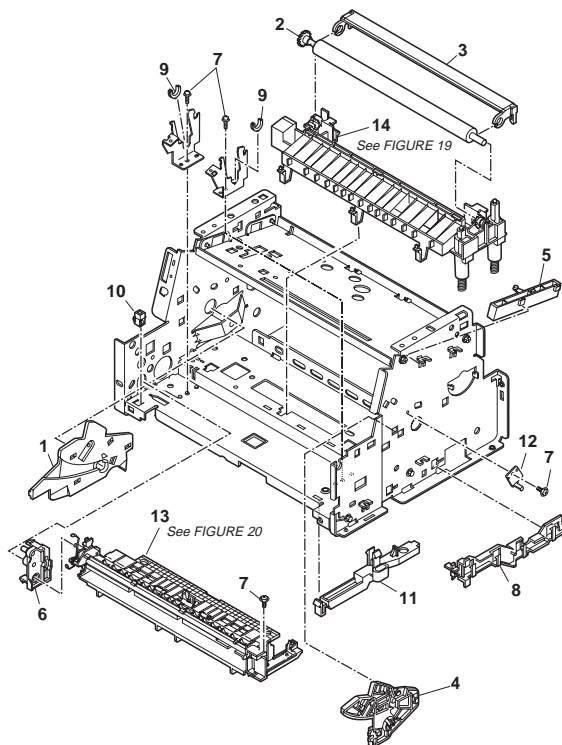 


FIGURE 15 PAPER FEED SECTION

See Page
2-39


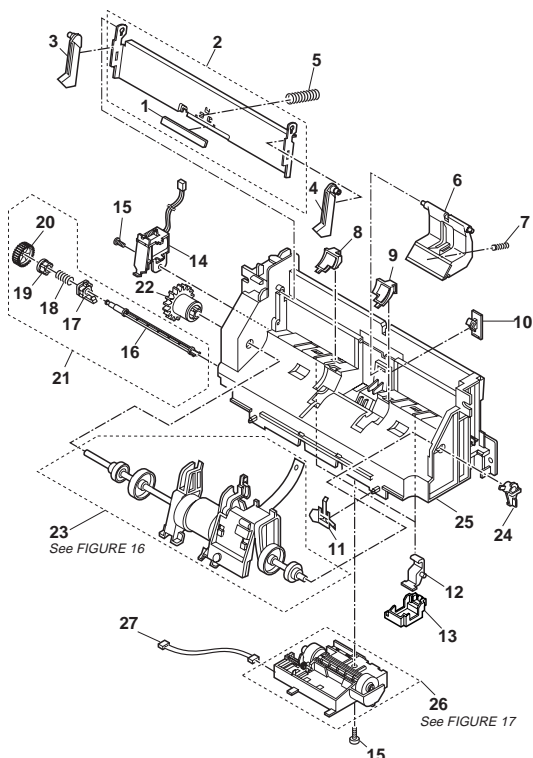 


FIGURE 16 PICK-UP ROLLER ASS'Y

 See Page
2-41

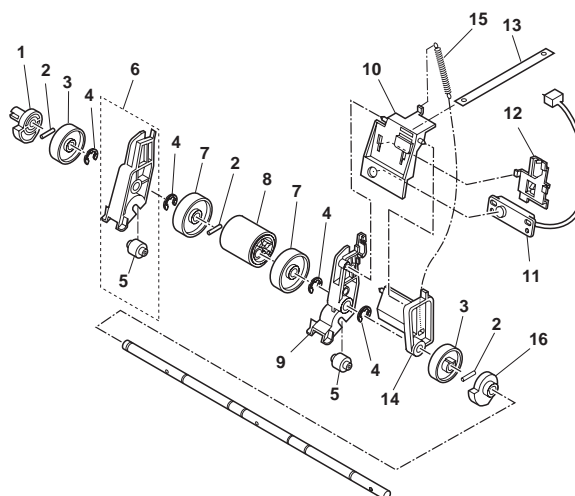

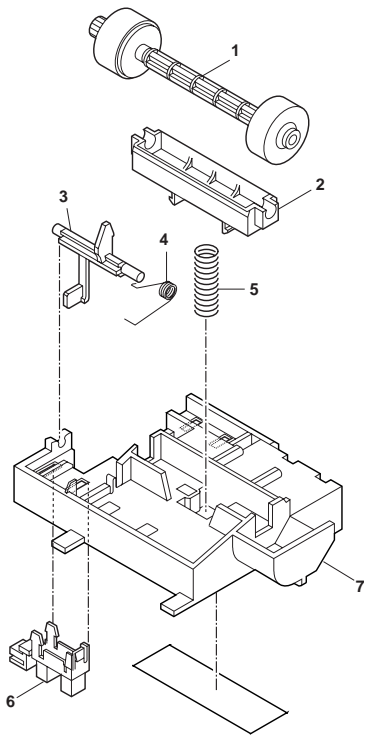 
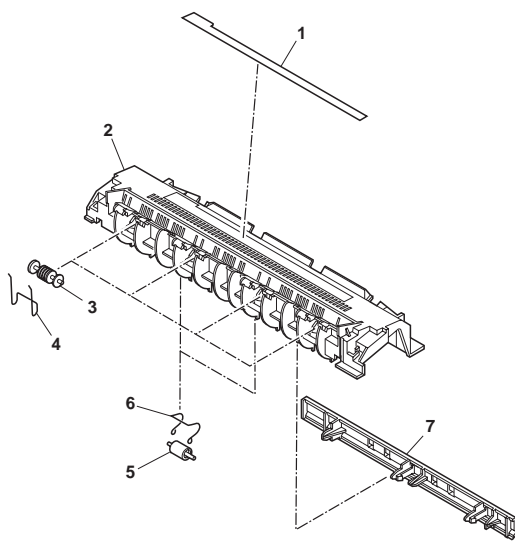 
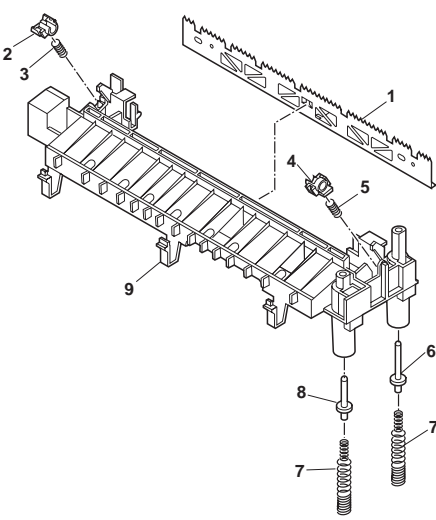 
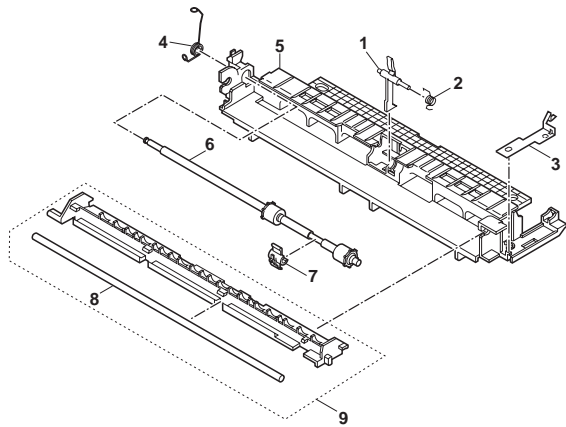 
| | | | |
|---|------------------|--|------------------|
| FIGURE 17 FEEDER ASS'Y | See Page 2-43 | FIGURE 18 DELIEVRY ASS'Y | See Page 2-45 |
|  | |  | |
| FIGURE 19 TRANSFER BLOCK ASS'Y | See Page 2-47 | FIGURE 20 SEPARATION GUIDE ASS'Y (RECORDING) | See Page 2-49 |
|  | |  | |

FIGURE 21 SCNT BOARD ASS'Y
(FAX-L200)

See Page
2-51

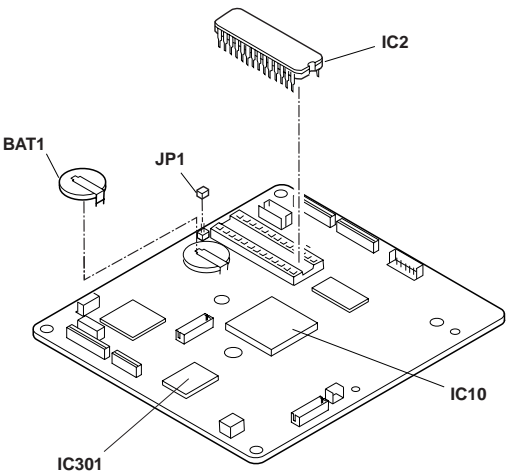 


FIGURE 22A SCNT BOARD ASS'Y
(FAX-L280)

See Page
2-53

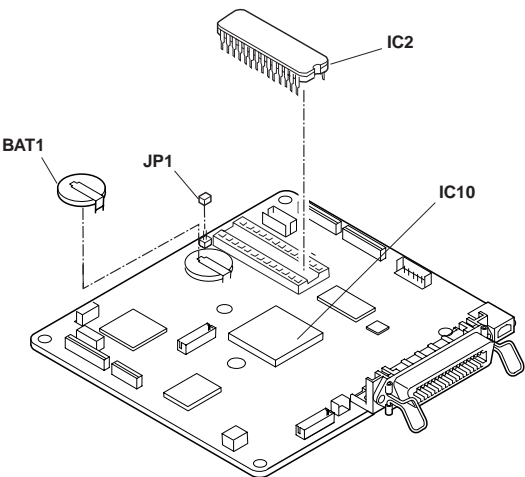 


FIGURE 22B SCNT BOARD ASS'Y
(FAX-L240/L290)

See Page
2-55


 
 
 
 
 
 
 
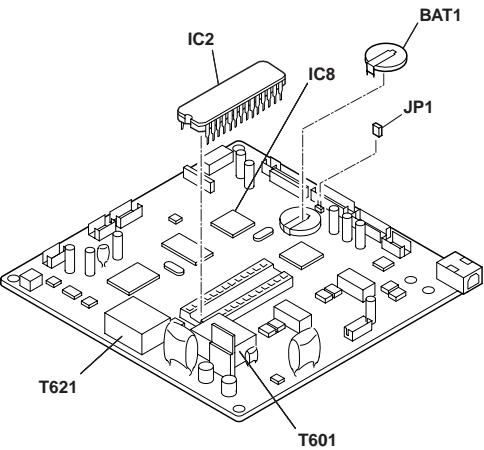 


FIGURE 23A PCNT BOARD ASS'Y
(FAX-L200/L280)

 See Page
2-57

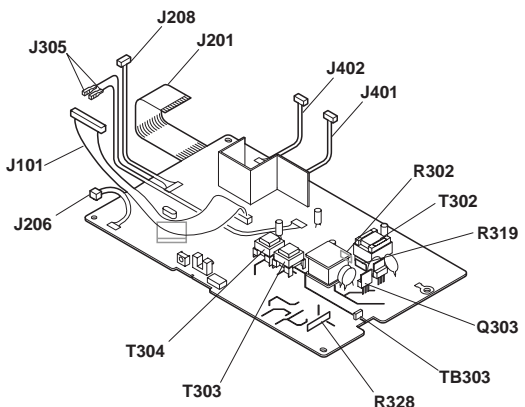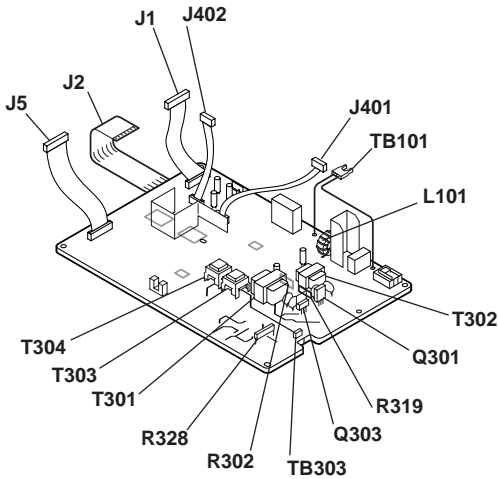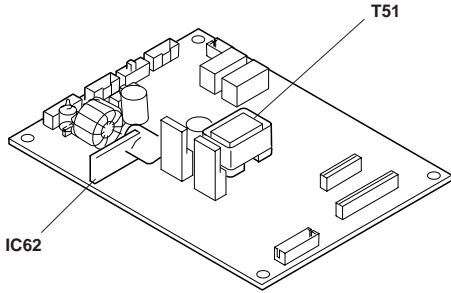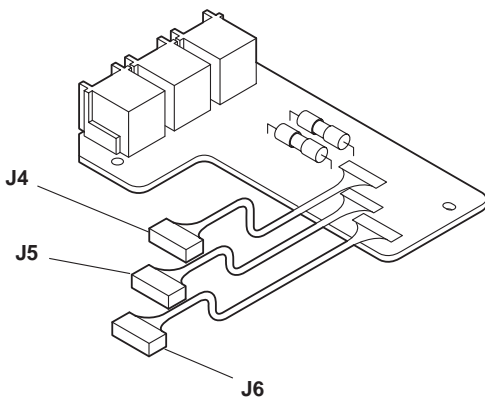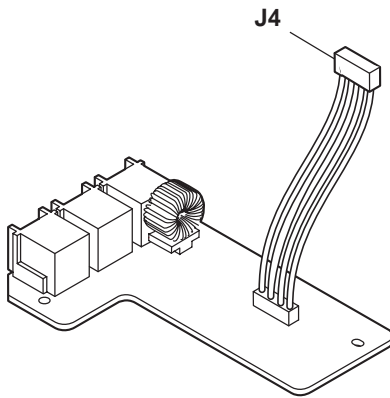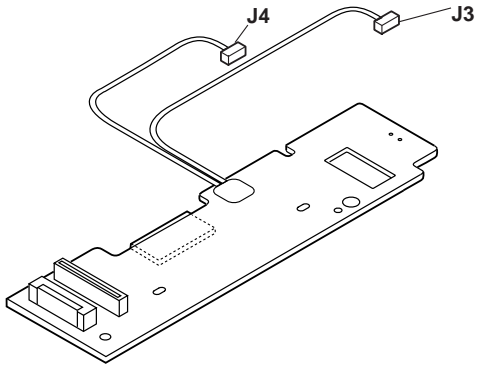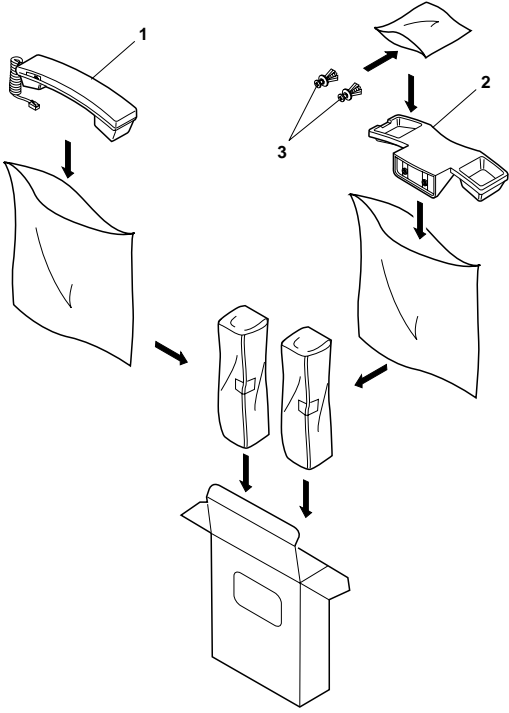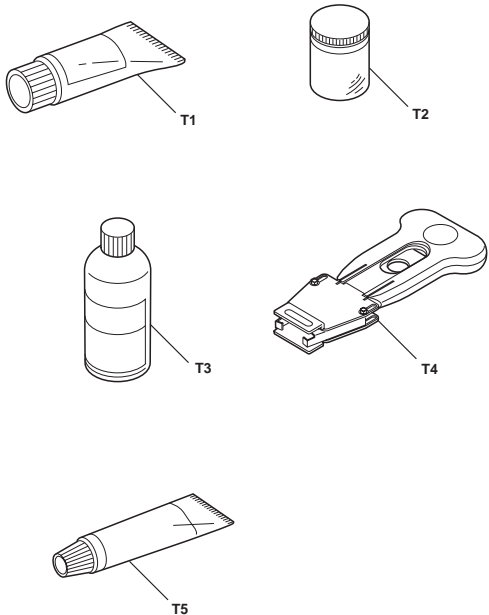


| | | | | | |
|---|--|--|-------------------|--|------------------|
| FIGURE 23B | PCNT BOARD ASS'Y (FAX-L240/L290) | See Page 2-59 | FIGURE 24 | NCU BOARD ASS'Y (FAX-L200/L280) | See Page 2-61 |
|  | |  | | | |
| FIGURE 25A | MODULAR BOARD ASS'Y (FAX-L200/L280) | See Page 2-63 | FIGURE 25B | MODULAR BOARD ASS'Y (FAX-L240/L290) | See Page 2-65 |
|  | |  | | | |

| | | | |
|---|------------------|---|------------------|
| FIGURE 26 OPCNT BOARD ASS'Y | See Page 2-67 | FIGURE 27 HANDSET KIT 3 TELEPHONE 6 KIT | See Page 2-69 |
|  | |  | |
| FIGURE 28 TOOLS | See Page 3-1 | | |
|  | | | |


2. PARTS LAYOUT & PARTS LIST

 FIGURE 1A PACKAGE CONTENTS (FAX-L200/L280)

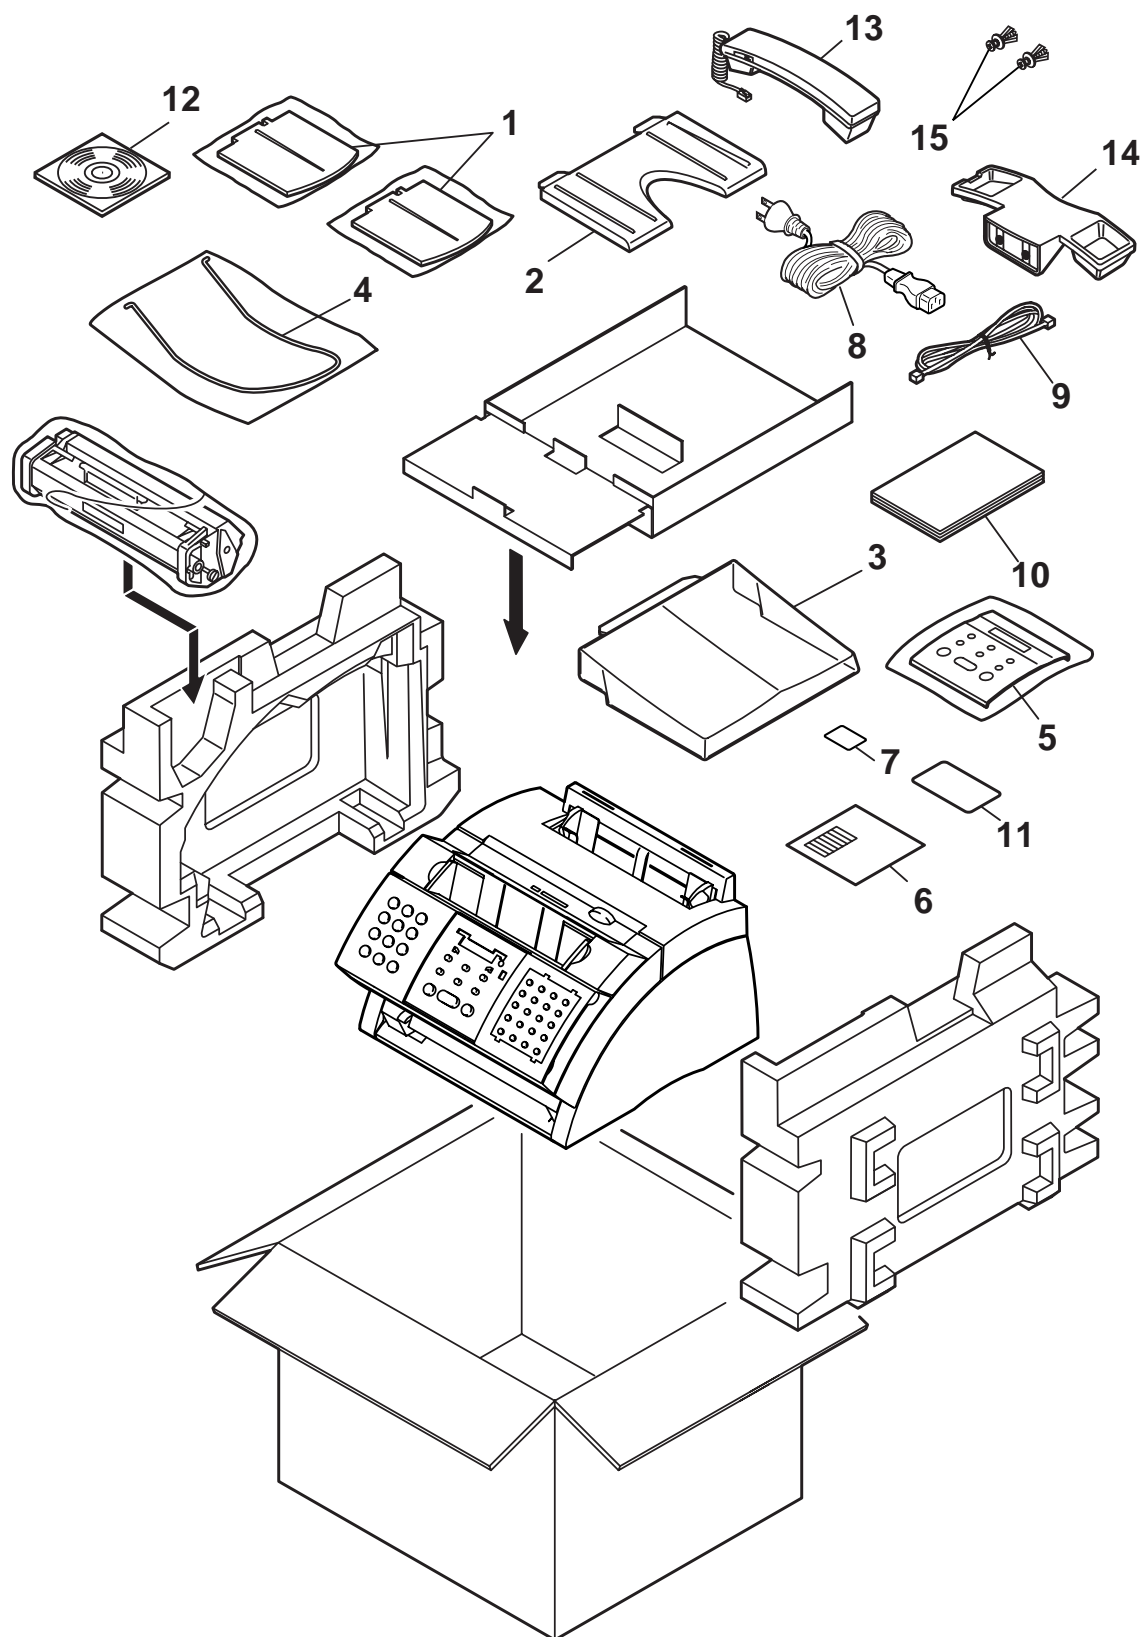


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|------------------------------|--------------------------|
| 1A- 1 | HB1-4818-000 | | 2 | TRAY, SUPPORT | |
| 2 | HB1-4819-000 | | 1 | TRAY, MULTI-PURPOSE | |
| 3 | HB1-4820-000 | | 1 | COVER, MULTI-PURPOSE TRAY | |
| 4 | HB1-4821-000 | | 1 | SUPPORT, DOCUMENT | |
| 5 | HB1-4822-000 | | 1 | COVER, OPERATION | FAX-L280(EC) |
| | HB1-4855-000 | | 1 | COVER, OPERATION | FAX-L200(EC) |
| 6 | HB1-5127-000 | | 1 | LABEL, DESTINATION | |
| 7 | HA2-0868-000 | | 1 | LABEL, MERCURY | UK |
| 8 | RH2-5344-000 | | 1 | POWER SUPPLY CORD | CHN |
| | WT3-5020-000 | | 1 | CORD, POWER | GER FRN AE FAX-L200(KOR) |
| | WT3-5023-000 | | 1 | CORD, POWER | AUS |
| | WT3-5058-000 | | 1 | CORD, POWER | UK |
| 9 | HH2-1914-000 | | 1 | MODULAR CORD, 6P | UK |
| | HH2-2074-000 | | 1 | MODULAR CORD (GERM) | GER |
| | HH2-2219-000 | | 1 | MODULAR CORD | FRN |
| | HH2-2478-000 | | 1 | MODULAR CORD, 2P | AUS |
| | HH2-2824-000 | | 1 | MODULAR CORD, 2P | AE CHN |
| 10 | HT1-2166-000 | N | 1 | USER'S GUIDE (ENGLISH) | UK AUS AE |
| | HT1-3099-000 | N | 1 | USER'S GUIDE (MODELE FRANCE) | FRN |
| | HT1-5075-000 | N | 1 | USER'S GUIDE (DEUTSCH) | GER |
| | HT1-6044-000 | N | 1 | USER'S GUIDE (CHINESE) | CHN |
| 11 | HB1-4854-000 | | 1 | LABEL, WARNING | |
| 12 | HH4-3660-000 | N | 1 | CD-ROM, DRIVER SOFTWARE | FAX-L280(UK GER FRN) |
| | HH4-3661-000 | N | 1 | CD-ROM, DRIVER SOFTWARE | FAX-L280(AUS AE CHN) |
| 13 | HH7-2593-000 | | 1 | HANDSET UNIT | CHN |
| 14 | HB1-4978-000 | | 1 | HOLDER, HANDSET CRADLE | CHN |
| 15 | WT2-5465-000 | | 2 | RIVET | CHN |
| | | | | | |
| | | | | | |

 FIGURE 1B PACKAGE CONTENTS (FAX-L240/L290)

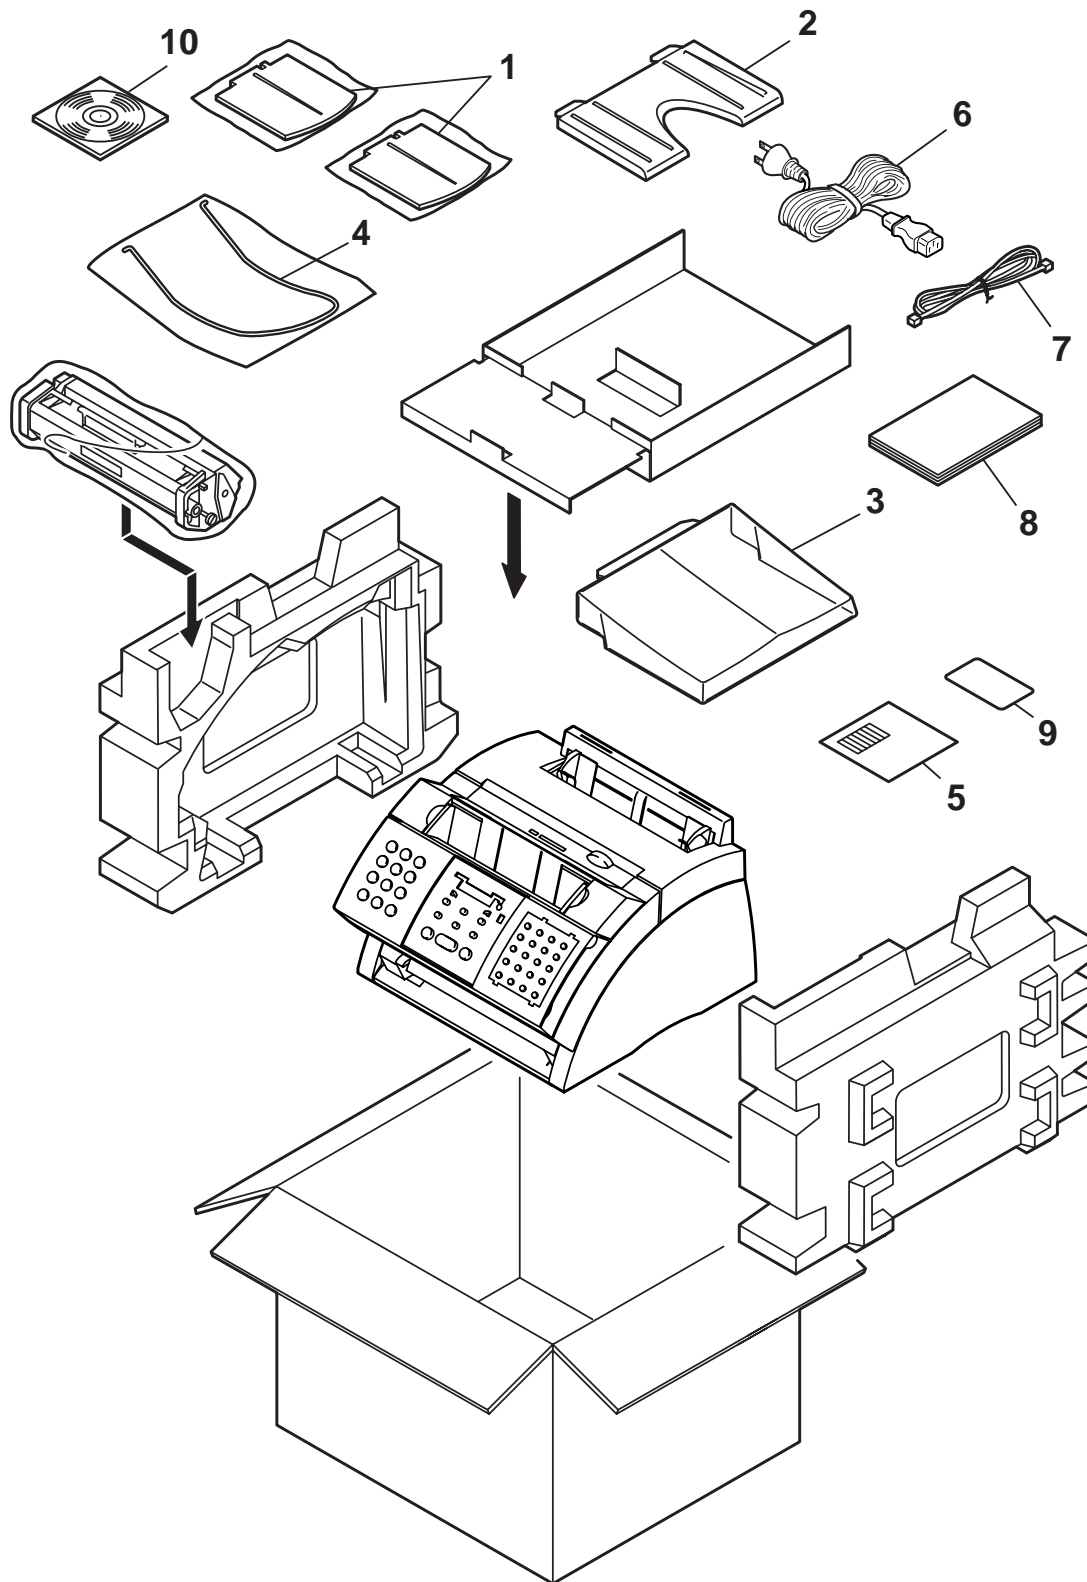


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|------------------------------|----------------|
| 1B- 1 | HB1-4818-000 | | 2 | TRAY, SUPPORT | |
| 2 | HB1-4819-000 | | 1 | TRAY, MULTI-PURPOSE | |
| 3 | HB1-4820-000 | | 1 | COVER, MULTI-PURPOSE TRAY | |
| 4 | HB1-4821-000 | | 1 | SUPPORT, DOCUMENT | |
| 5 | HB1-5127-000 | | 1 | LABEL, DESTINATION | |
| 6 | WT3-5020-000 | | 1 | CORD, POWER | GER FRN |
| | WT3-5058-000 | | 1 | CORD, POWER | UK |
| 7 | HH2-1914-000 | | 1 | MODULAR CORD, 6P | UK |
| | HH2-2074-000 | | 1 | MODULAR CORD (GERM) | GER |
| | HH2-2219-000 | | 1 | MODULAR CORD | FRN |
| 8 | HT1-2194-000 | N | 1 | USER'S GUIDE (ENGLISH) | UK |
| | HT1-3104-000 | N | 1 | USER'S GUIDE (MODELE FRANCE) | FRN |
| | HT1-5080-000 | N | 1 | USER'S GUIDE (DEUTSCH) | GER |
| 9 | HB1-4854-000 | | 1 | LABEL, WARNING | |
| 10 | HH4-3721-000 | N | 1 | CD-ROM, DRIVER SOFTWARE | FAX-L290 |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 2 COVERS & TRAY ASS'Y

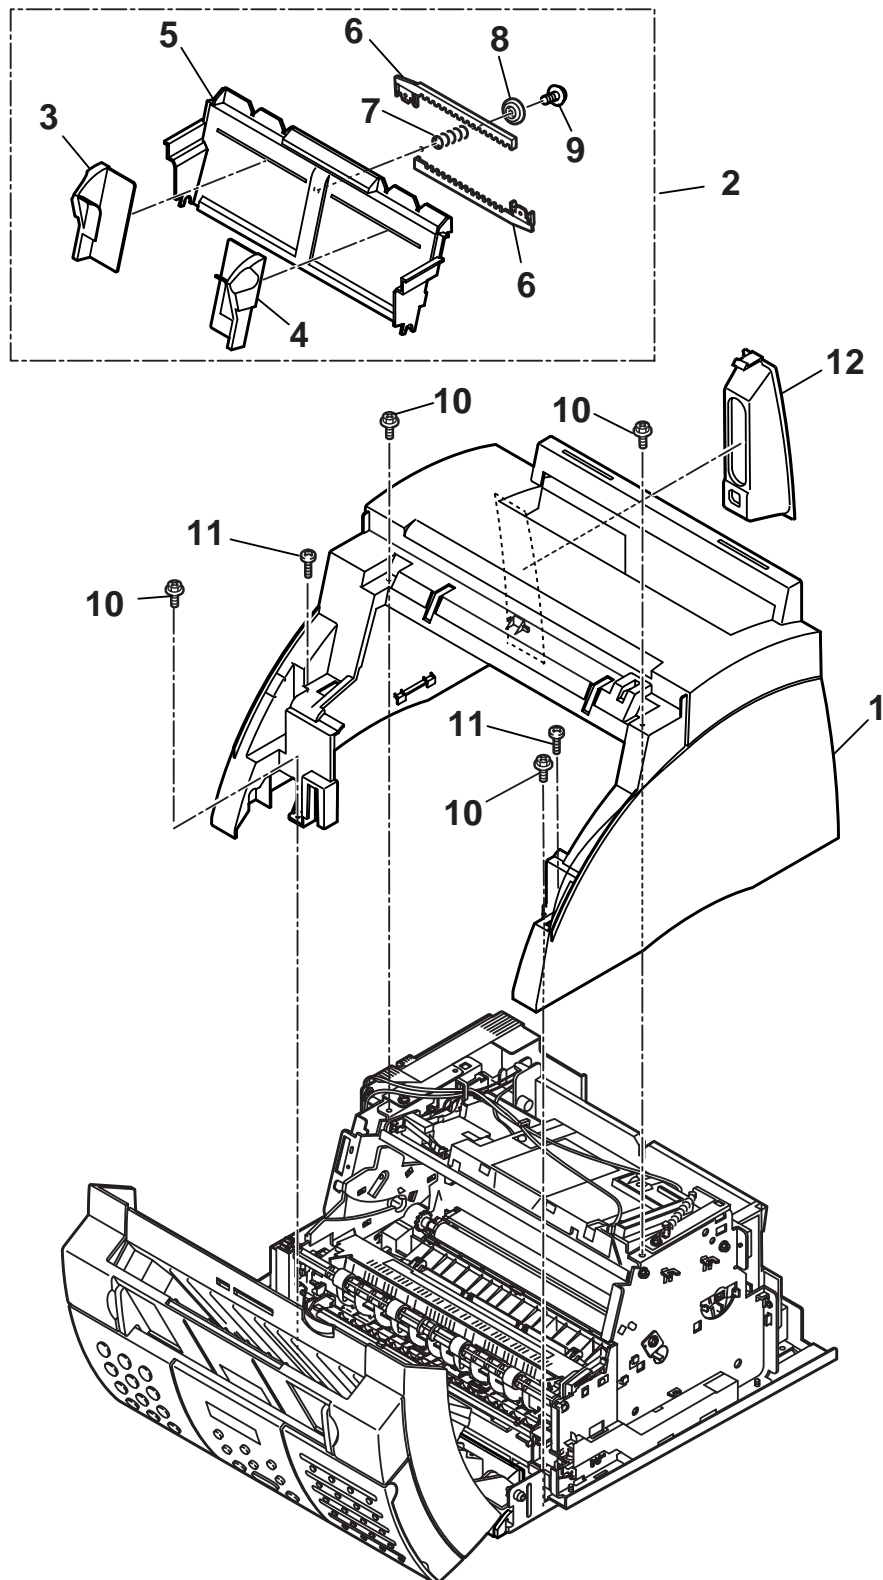


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|--------------------------------|----------------|
| 2- 1 | HB1-4813-000 | | 1 | COVER, MAIN | FAX-L280/L290 |
| | HB1-4814-000 | | 1 | COVER, MAIN | FAX-L200/L240 |
| 2 | HG5-2549-000 | | 1 | AUTO PAPER FEED ASS'Y | |
| 3 | HB1-4827-000 | | 1 | GUIDE, AUTO PAPER FEED, LEFT | |
| 4 | HB1-4828-000 | | 1 | GUIDE, AUTO PAPER FEED, RIGHT | |
| 5 | HB1-4826-000 | | 1 | TRAY, AUTO PAPER FEED | |
| 6 | HB1-3008-000 | | 2 | RACK | |
| 7 | HS5-2141-020 | | 1 | SPRING, SLIDER | |
| 8 | HS5-0254-000 | | 1 | GEAR, Z16 | |
| 9 | XB4-7300-807 | | 1 | SCREW, TAP TIGHT, BINDING HEAD | |
| 10 | XA9-0931-000 | | 4 | SCREW, RS, M3X12 | |
| 11 | XB4-7301-409 | | 2 | SCREW, TAPPING M3X14 | |
| 12 | HB1-4816-000 | | 1 | COVER, CONNECTOR | FAX-L280 |
| | HB1-5514-000 | | 1 | COVER, CONNECTOR | FAX-L290 |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 3A READING ASS'Y & MAIN FRAME
(FAX-L200/L280)

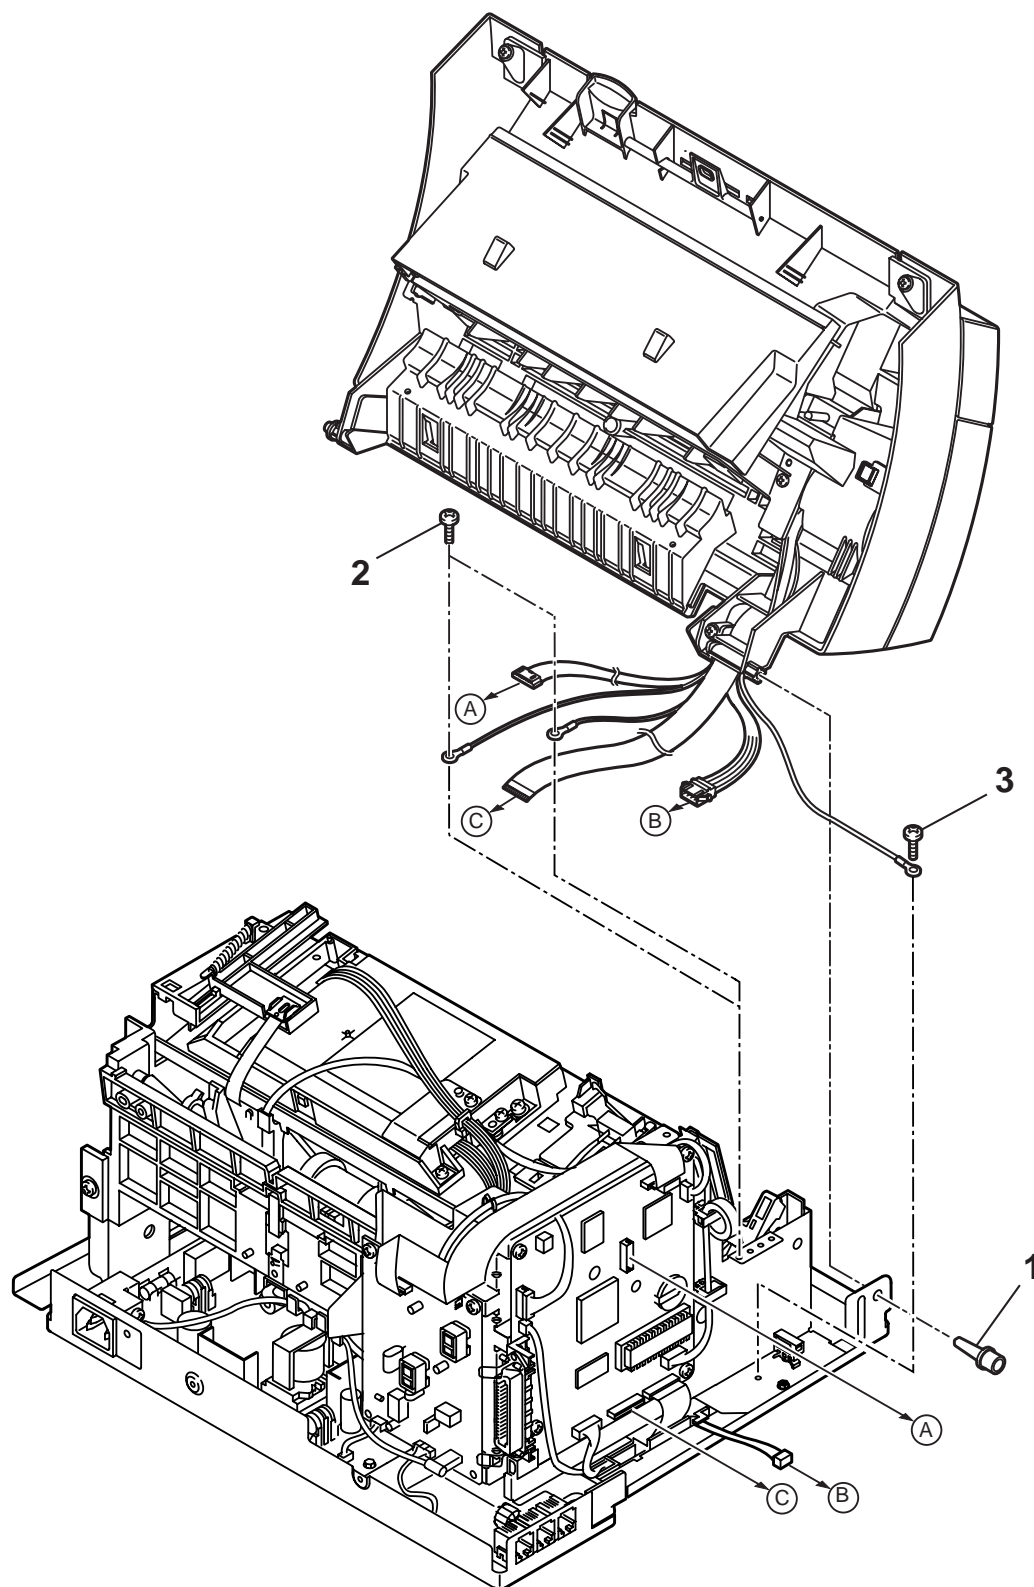


[illegible]

 FIGURE 3B READING ASS'Y & MAIN FRAME
(FAX-L240/L290)

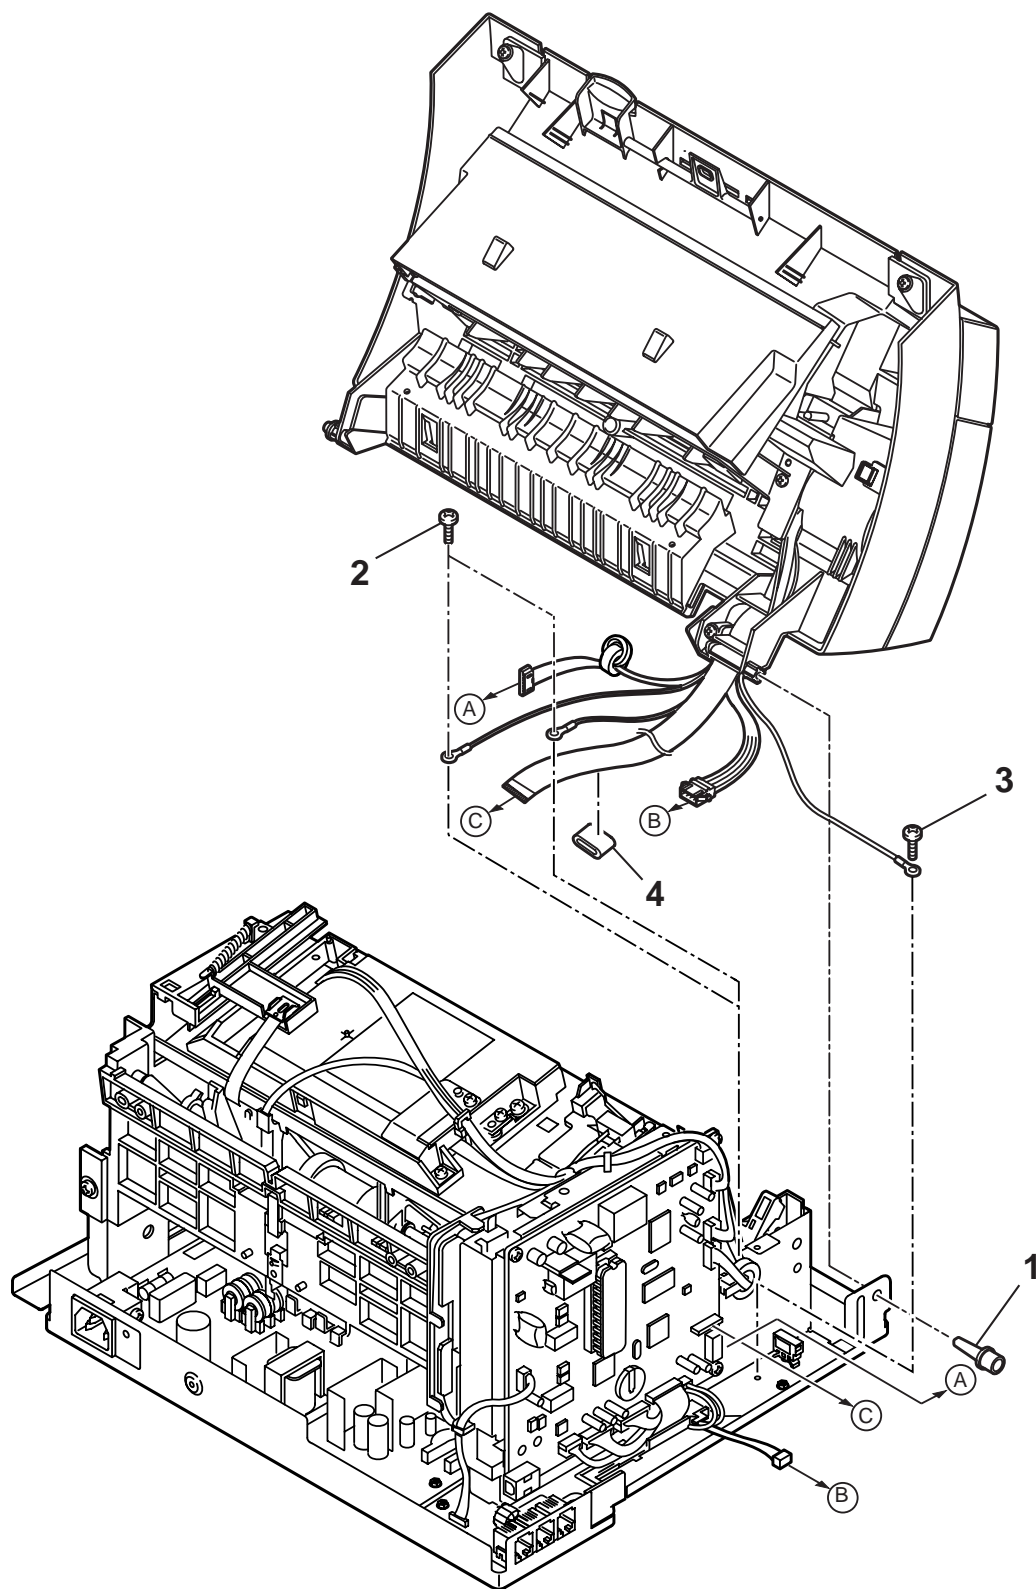


[illegible]

 FIGURE 4A CIRCUIT BOARDS & MAIN FRAME
(FAX-L200/L280)

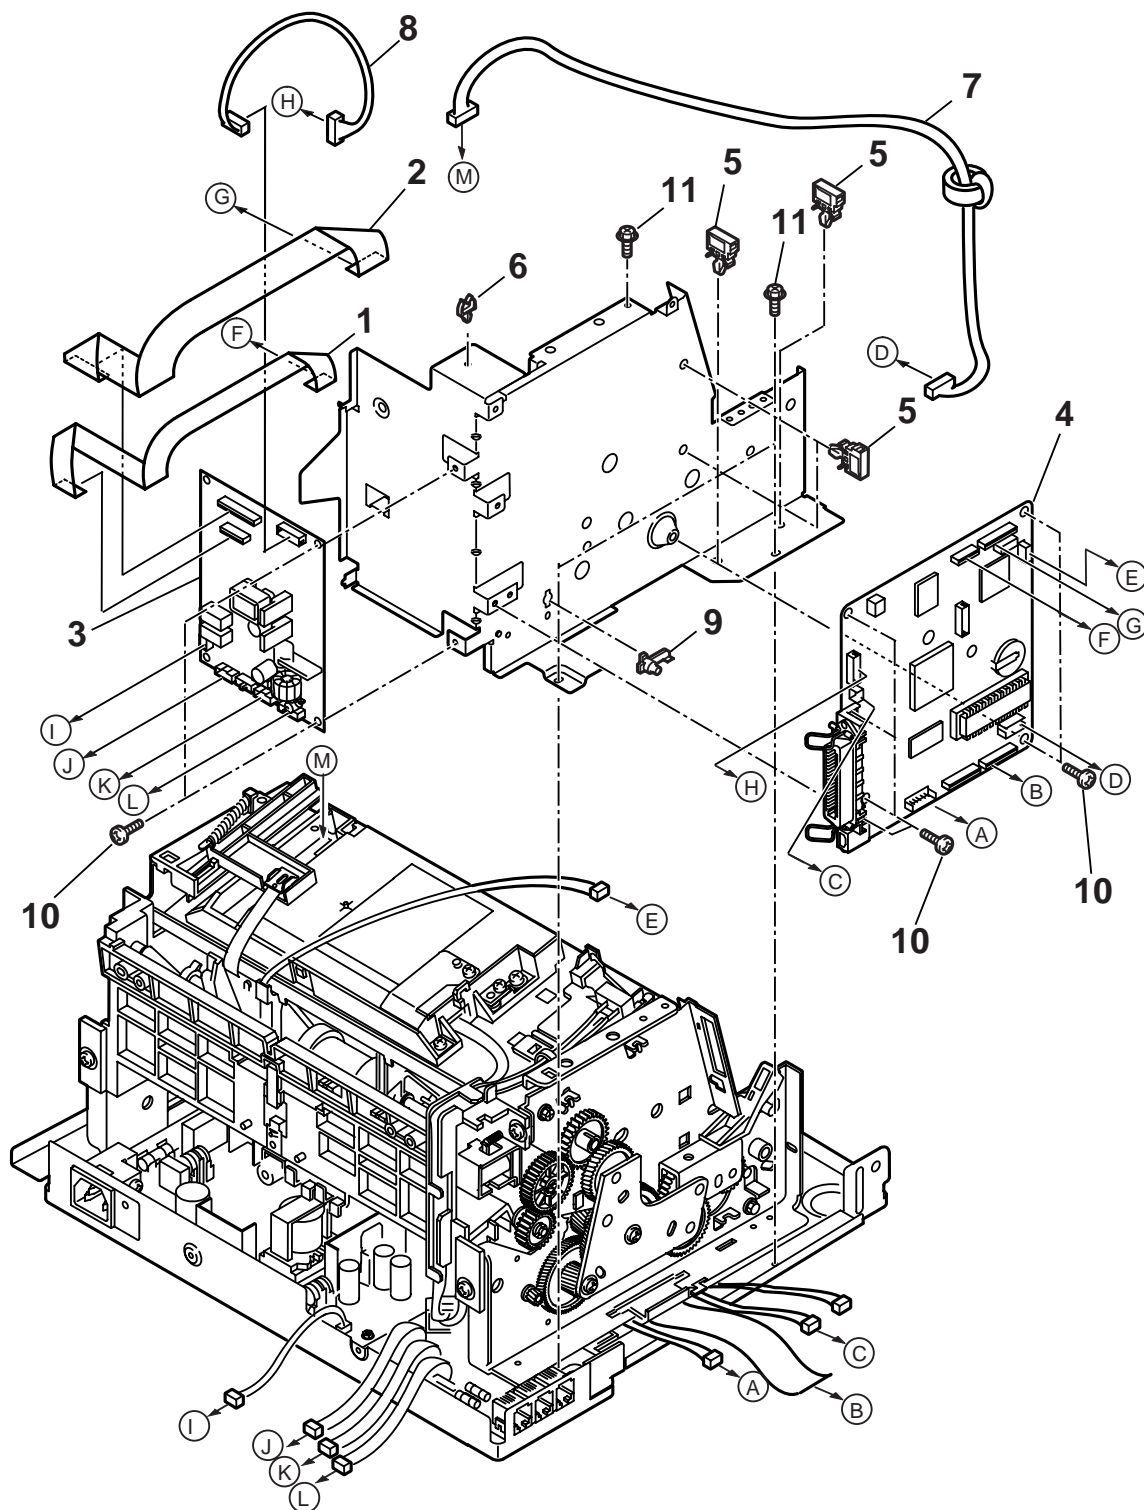


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------|--|
| 4A- 1 | HH2-3056-000 | | 1 | CABLE, FLAT, 14P | EC UK GER FRN AUS AE CHN FAX-L200(KOR) FAX-L280 |
| 2 | HH2-3057-000 | | 1 | CABLE, FLAT, 23P | |
| 3 | HG5-2587-000 | | 1 | NCU BOARD ASS'Y | |
| | HG5-2598-000 | | 1 | NCU BOARD ASS'Y | |
| 4 | HG5-2565-030 | | 1 | SCNT BOARD ASS'Y | |
| | HG5-2566-050 | | 1 | SCNT BOARD ASS'Y | FAX-L200(EC UK GER FRN AUS AE CHN) FAX-L200(KOR) |
| | HG9-0757-000 | | 1 | SCNT BOARD ASS'Y | |
| 5 | WT2-0317-000 | | 4 | CLIP, CABLE | |
| 6 | WT2-5026-000 | | 1 | CLIP, CABLE | |
| 7 | HG5-2699-000 | | 1 | CABLE WITH CONNECTOR, 6P | |
| 8 | HG5-2573-000 | | 1 | CABLE WITH CONNECTOR, 6P | |
| 9 | HB1-4361-000 | | 1 | SPACER | |
| 10 | XB1-2300-807 | | 8 | SCREW, CROSS-RECESS, FCH | |
| 11 | XA9-0863-000 | | 3 | SCREW, TAP M3X6 | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 4B CIRCUIT BOARDS & MAIN FRAME
(FAX-L240/L290)

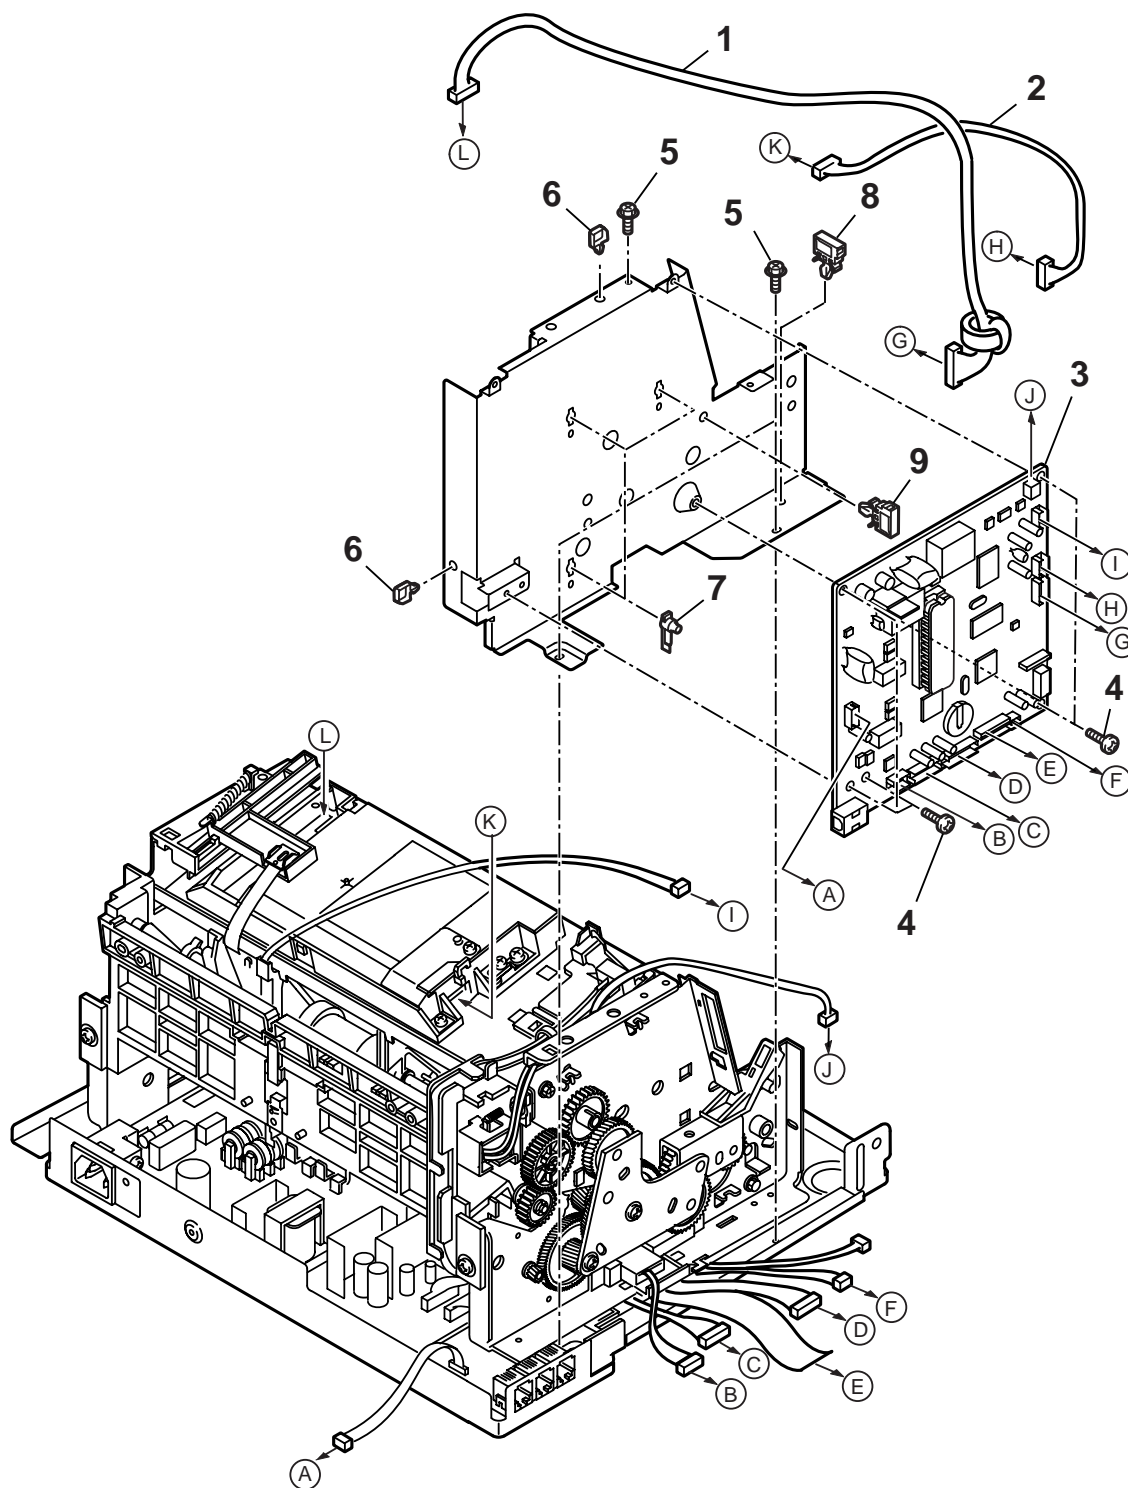


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------|----------------------|
| 4B- 1 | HG5-2982-000 | | 1 | CABLE WITH CONNECTOR, 6P | FAX-L240 FAX-L290 |
| 2 | HG5-2983-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| 3 | HG5-2966-000 | | 1 | SCNT BOARD ASS'Y | |
| | HG5-2967-000 | | 1 | SCNT BOARD ASS'Y | |
| 4 | XB1-2300-807 | | 5 | SCREW, CROSS-RECESS, FCH | |
| 5 | XA9-0863-000 | | 2 | SCREW, TAP M3X6 | |
| 6 | WT2-5694-000 | | 2 | CLIP, CABLE | |
| 7 | HB1-4361-000 | | 3 | SPACER | |
| 8 | WT2-5719-000 | | 1 | CLIP, CABLE | |
| 9 | WT2-0317-000 | | 1 | CLIP, CABLE | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 5A CIRCUIT BOARDS & BOTTOM PLATE
(FAX-L200/L280)

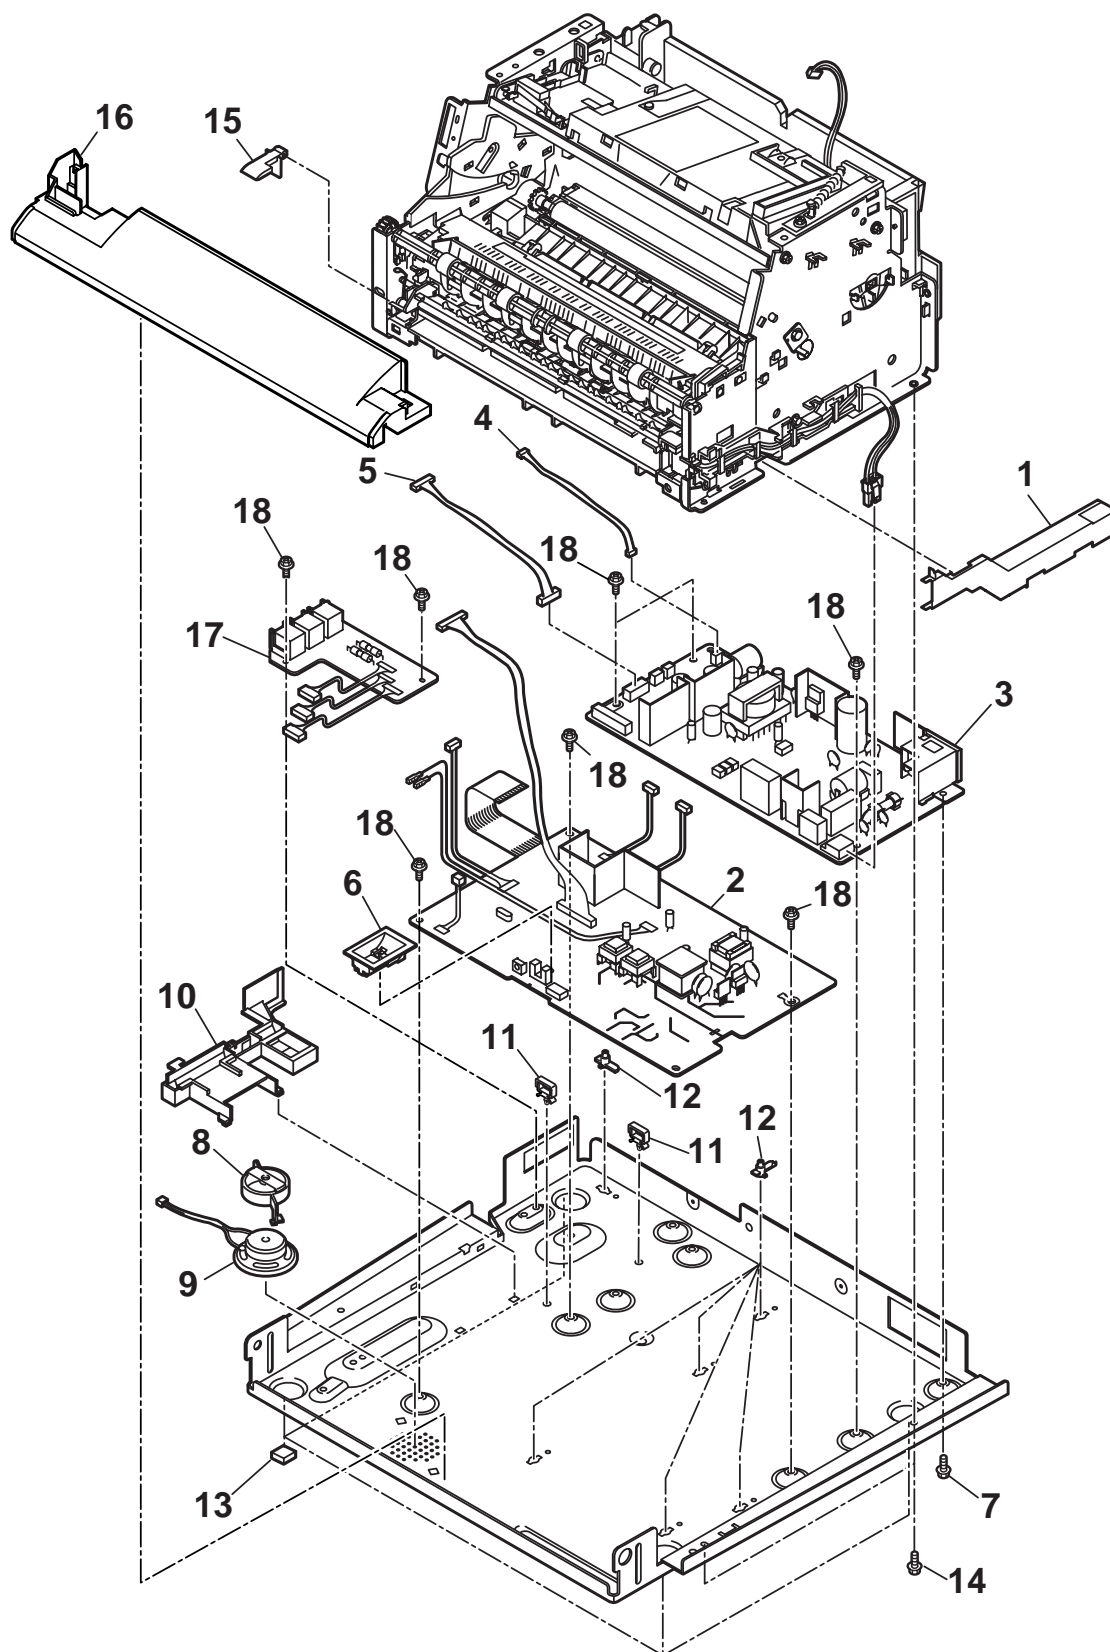


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------|--|
| 5A- 1 | RB1-7344-020 | | 1 | COVER, AC CABLE | EC UK GER FRN AE CHN FAX-L200(KOR) AUS |
| 2 | HG5-2563-000 | | 1 | PCNT BOARD ASS'Y | |
| 3 | HH3-5365-000 | | 1 | POWER SUPPLY UNIT | |
| | HH3-5371-000 | | 1 | POWER SUPPLY UNIT | |
| | HH3-5380-000 | | 1 | POWER SUPPLY UNIT | |
| 4 | HG5-2582-000 | | 1 | CABLE WITH CONNECTOR, 2P | |
| 5 | HG5-2567-000 | | 1 | CABLE WITH CONNECTOR, 7P | |
| 6 | RB2-6220-000 | | 1 | COVER, WATERPROOF | |
| 7 | XB2-7300-607 | | 1 | SCREW, M3X6 | |
| 8 | HB1-3023-000 | | 1 | HOLDER, SPEAKER | |
| 9 | HG5-2561-000 | | 1 | SPEAKER UNIT | |
| 10 | HB1-4824-000 | | 1 | GUIDE, CABLE | |
| 11 | WT2-0317-000 | | 2 | CLIP, CABLE | |
| 12 | HB1-4361-000 | | 6 | SPACER | |
| 13 | HB1-5069-000 | | 4 | FOOT, PRINTER | |
| 14 | XB3-6300-800 | | 4 | SCREW, RS, M3X8 | EC UK GER FRN AUS AE CHN FAX-L200(KOR) |
| 15 | HB1-4817-000 | | 1 | LEVER, FLAPPER | |
| 16 | HB1-4815-000 | | 1 | COVER, FRONT | |
| 17 | HG5-2562-000 | | 1 | MODULAR BOARD ASS'Y | |
| | HG5-2597-000 | | 1 | MODULAR BOARD ASS'Y | |
| 18 | XA9-0863-000 | | 8 | SCREW, TAP M3X6 | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 5B CIRCUIT BOARDS & BOTTOM PLATE
(FAX-L240/L290)

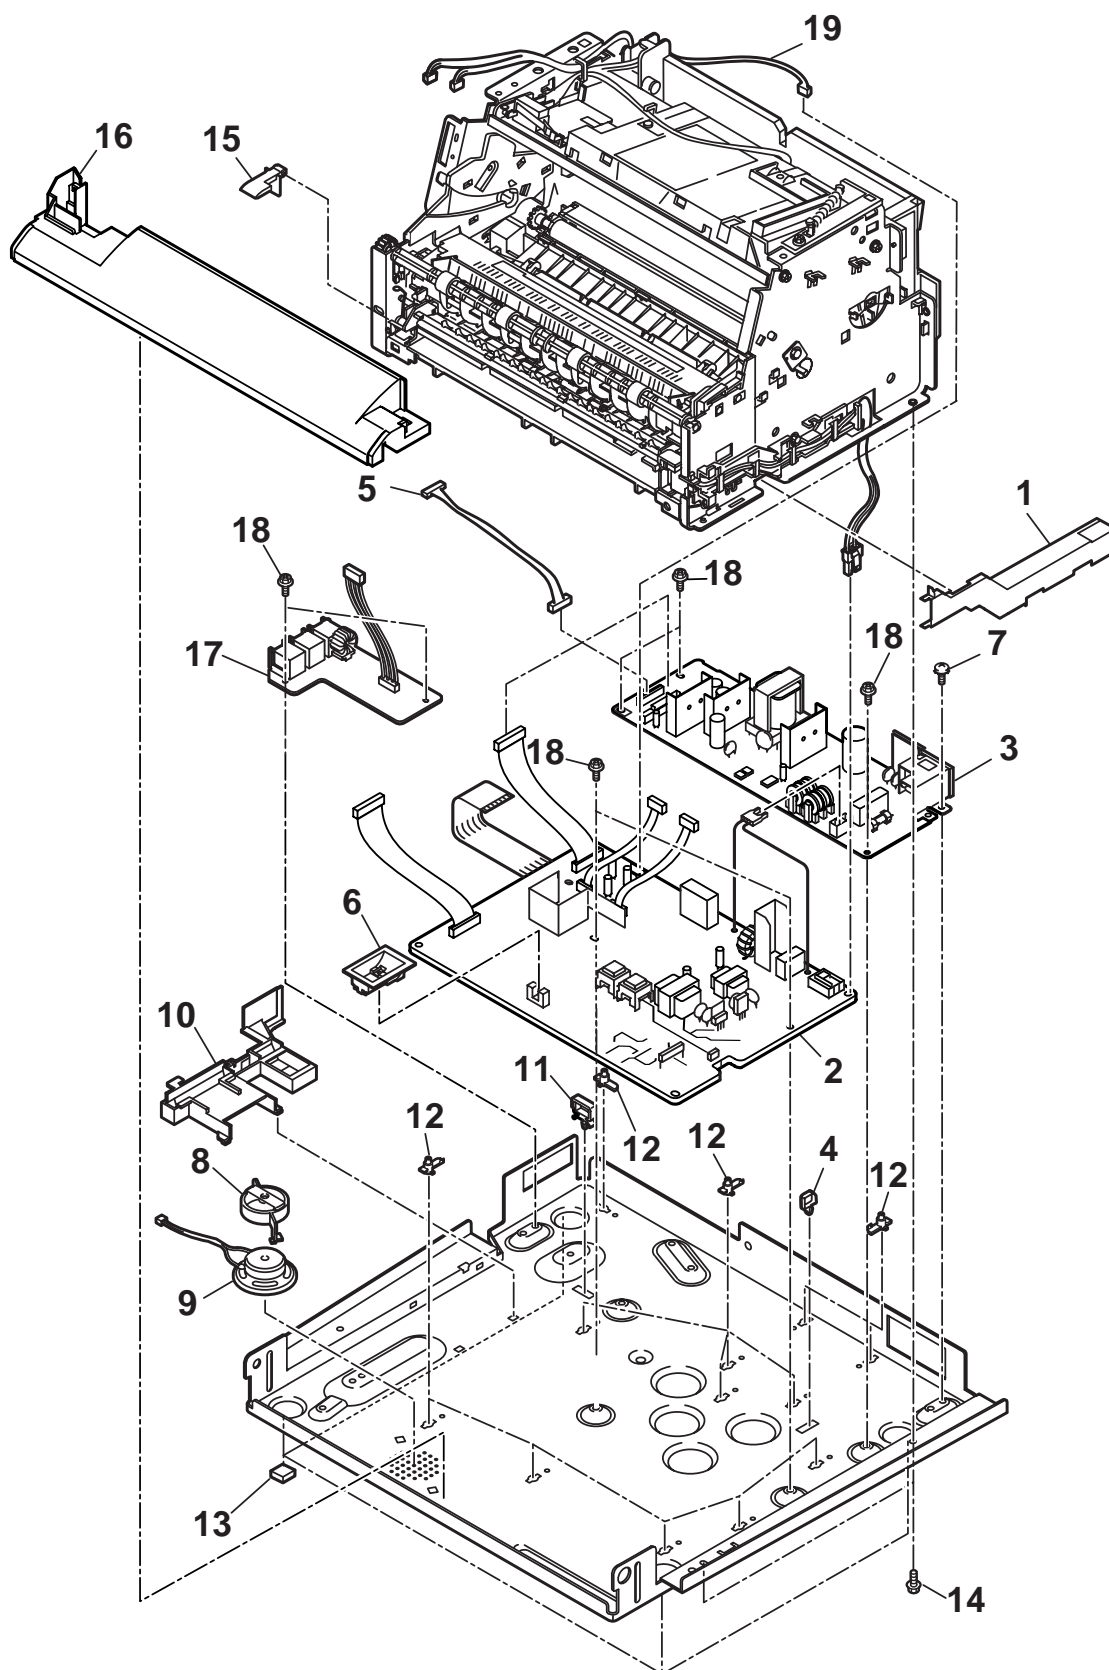


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|--------------------------|----------------|
| 5B- 1 | RB1-7344-020 | | 1 | COVER, AC CABLE | |
| 2 | HG5-2968-000 | | 1 | PCNT BOARD ASS'Y | |
| 3 | HH3-5389-000 | | 1 | POWER SUPPLY UNIT | |
| 4 | WT2-5694-000 | | 1 | CLIP, CABLE | |
| 5 | HG5-2981-000 | | 1 | CABLE WITH CONNECTOR, 9P | |
| 6 | RB2-6220-000 | | 1 | COVER, WATERPROOF | |
| 7 | XA9-1238-000 | | 1 | SCREW W/WASHER, M3X8 | |
| 8 | HB1-3023-000 | | 1 | HOLDER, SPEAKER | |
| 9 | HG5-2986-000 | | 1 | SPEAKER UNIT | |
| 10 | HB1-4824-000 | | 1 | GUIDE, CABLE | |
| 11 | WT2-0317-000 | | 1 | CLIP, CABLE | |
| 12 | HB1-4361-000 | | 12 | SPACER | |
| 13 | HB1-5069-000 | | 4 | FOOT, PRINTER | |
| 14 | XB3-6300-800 | | 4 | SCREW, RS, M3X8 | |
| 15 | HB1-4817-000 | | 1 | LEVER, FLAPPER | |
| 16 | HB1-4815-000 | | 1 | COVER, FRONT | |
| 17 | HG5-2969-000 | | 1 | MODULAR BOARD ASS'Y | |
| 18 | XA9-0863-000 | | 7 | SCREW, TAP M3X6 | |
| 19 | HG5-2984-000 | | 1 | CABLE WITH CONNECTOR, 3P | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 6 READING ASS'Y 1

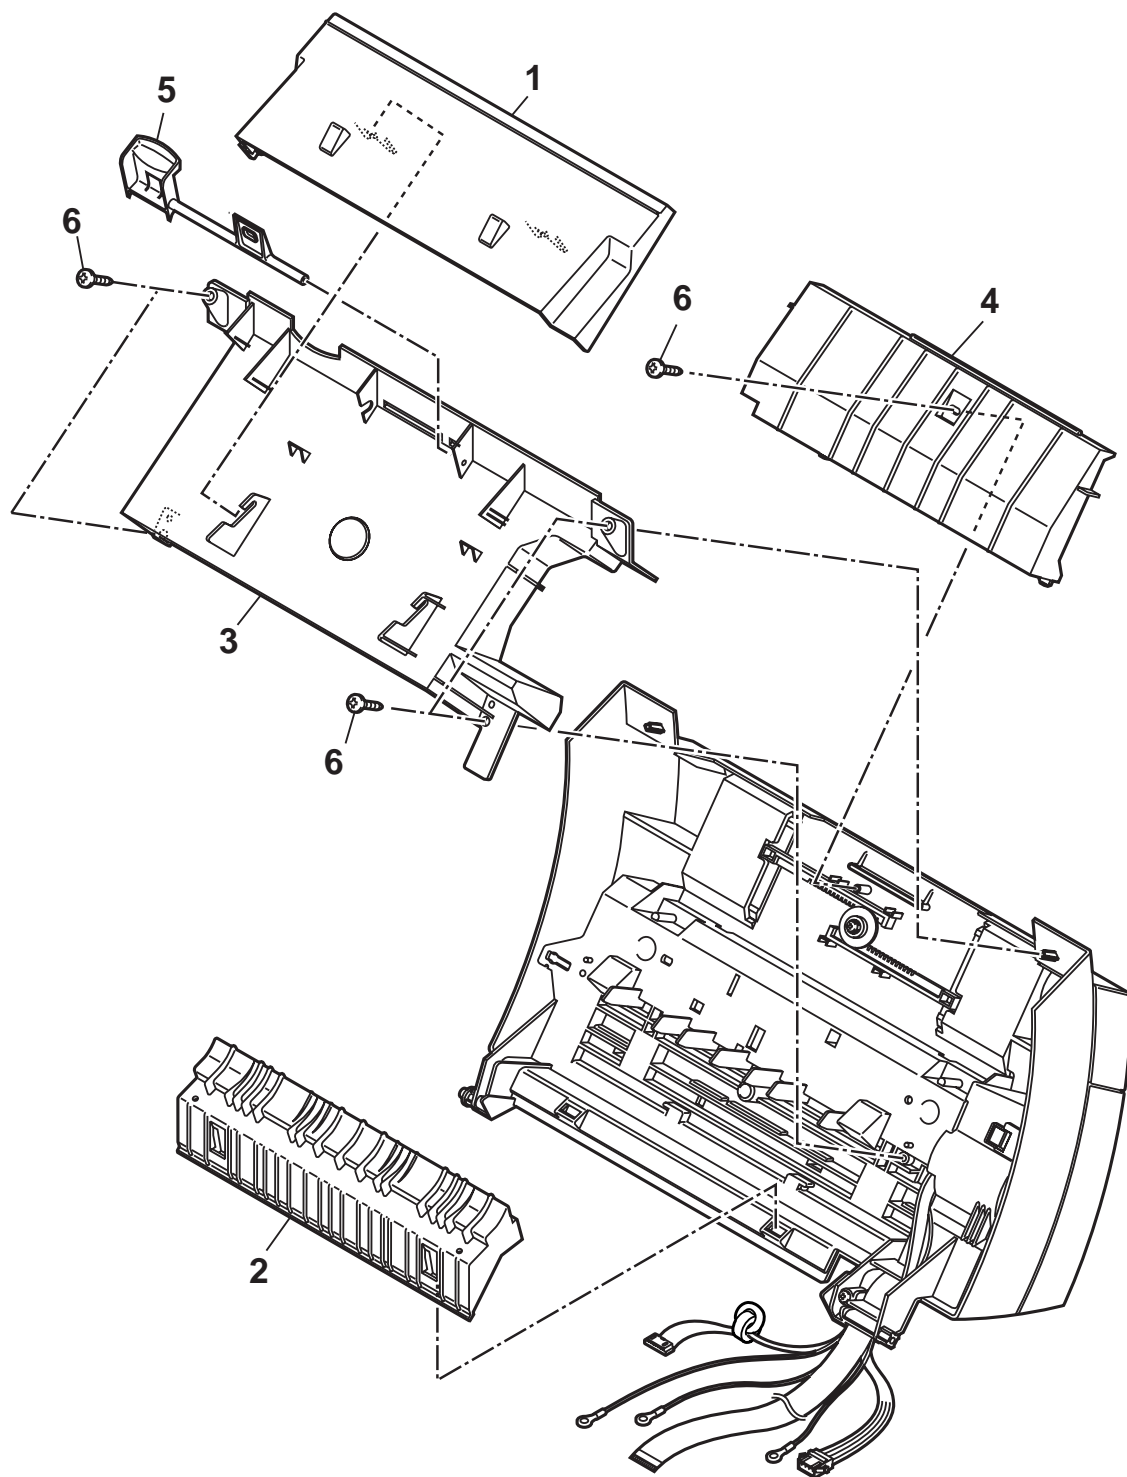


[illegible]

 FIGURE 7 READING ASS'Y 2

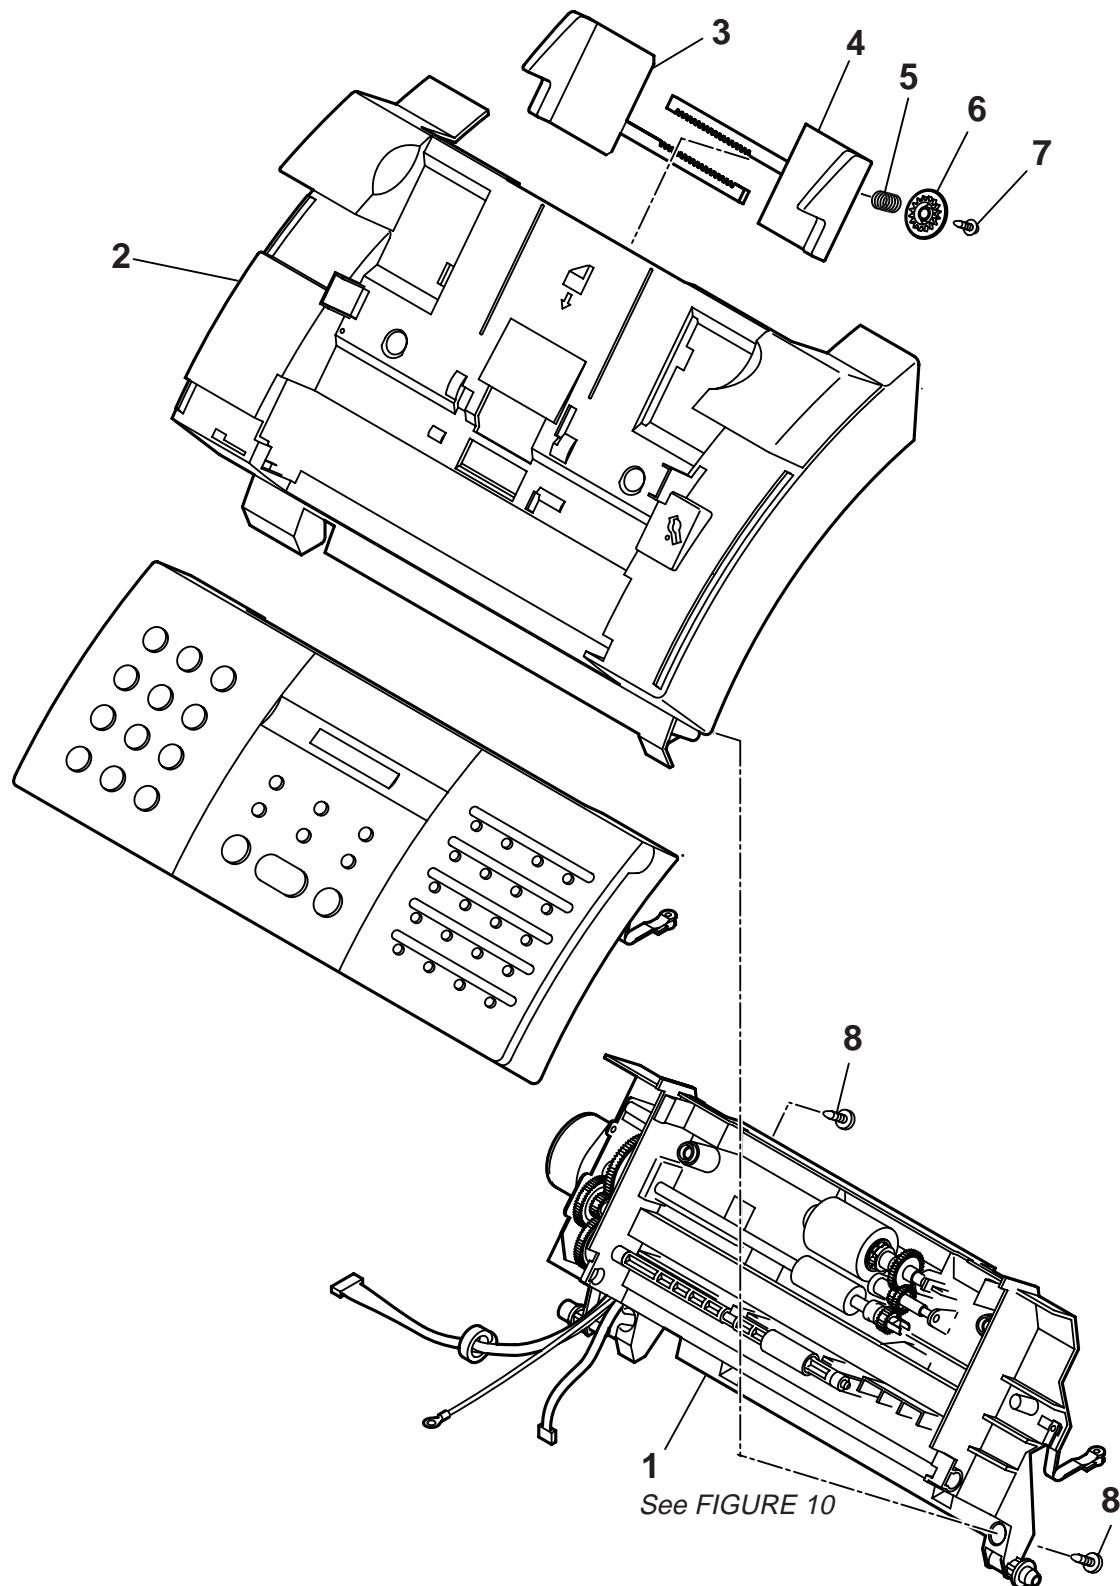

| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|------------------------------|----------------|
| 7 - 1 | NPN | | 1 | ADF UNIT | |
| 2 | HB1-4831-000 | | 1 | COVER, CARTRIDGE | |
| 3 | HB1-4833-000 | | 1 | GUIDE, DOCUMENT FEED, LEFT | |
| 4 | HB1-4834-000 | | 1 | GUIDE, DOCUMENT FEED, RIGHT | |
| 5 | HS5-2141-020 | | 1 | SPRING, SLIDER | |
| 6 | HS5-0254-000 | | 1 | GEAR, Z16 | |
| 7 | XB1-2300-807 | | 1 | SCREW, CROSS-RECESS, FCH | |
| 8 | XB4-7401-007 | | 2 | SCREW, PAN HEAD SELF-TAPPING | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 
FIGURE 8 OPERATION PANEL ASS'Y & ADF UPPER

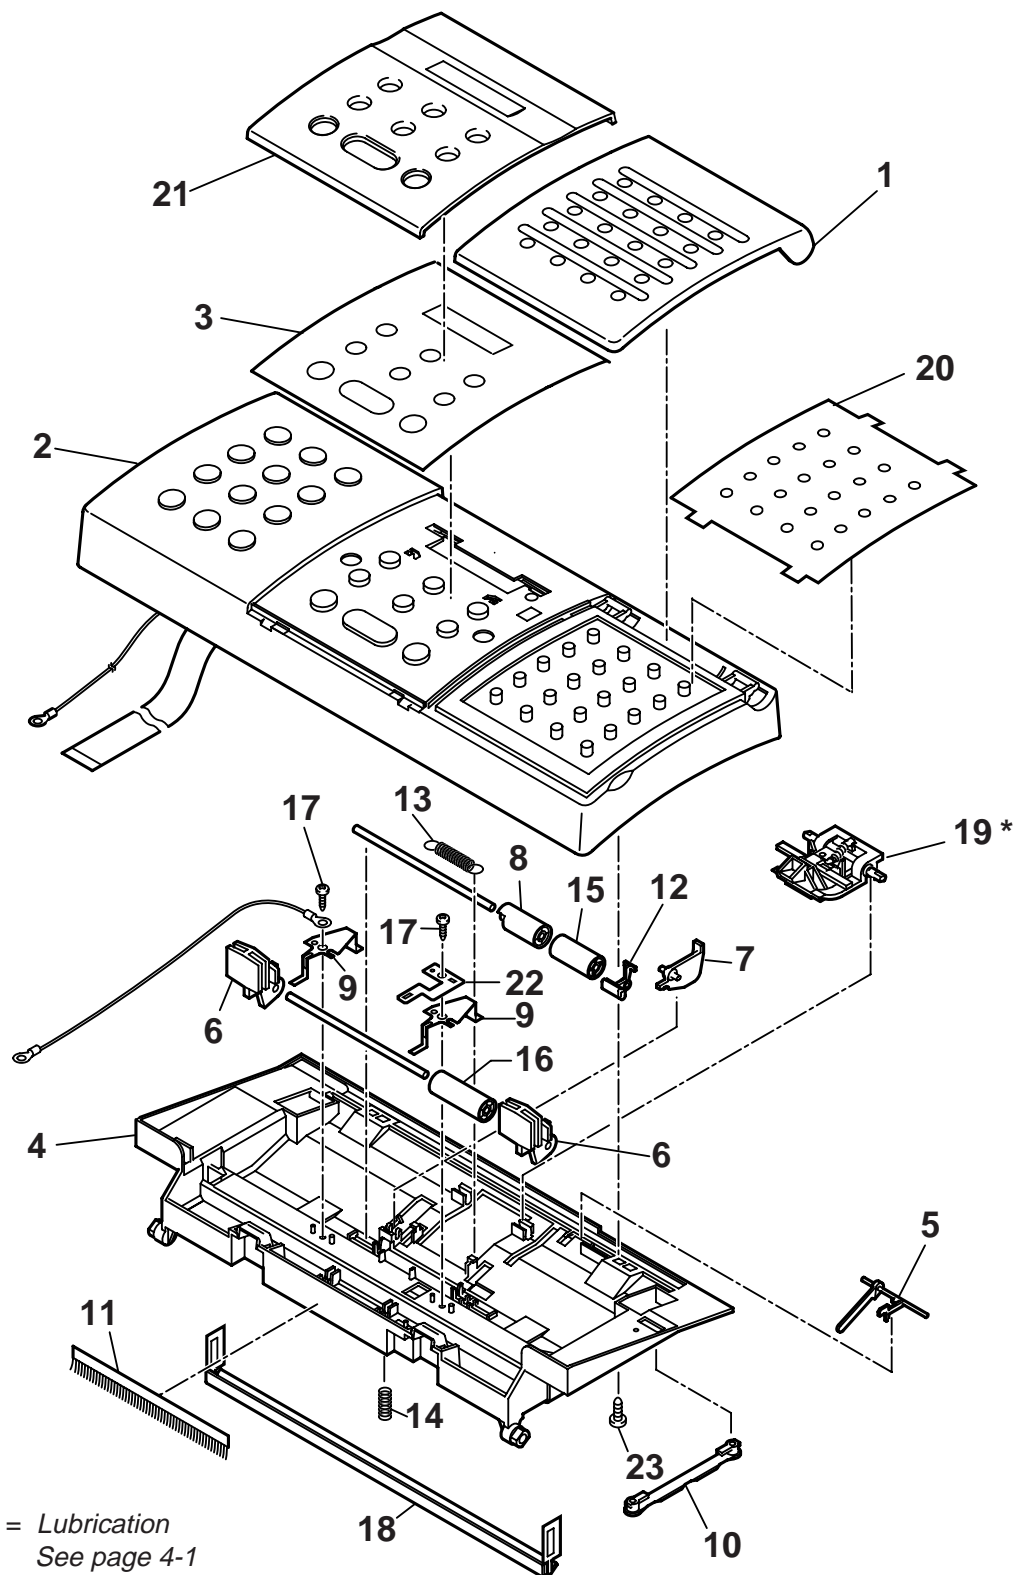

| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------------|--------------------------|
| 8- 1 | HB1-4848-000 | | 1 | COVER, ONE TOUCH DIAL | |
| 2 | HG5-2557-000 | | 1 | OPERATION PANEL ASS'Y | FAX-L200/L280 |
| | HG5-2989-000 | | 1 | OPERATION PANEL ASS'Y | FAX-L240/L290 |
| 3 | HB1-4852-000 | | 1 | SHEET, OPERATION PANEL | FAX-L200/L280(UK AUS AE) |
| | HB1-4859-000 | | 1 | SHEET, OPERATION PANEL | FAX-L200/L280(GER) |
| | HB1-4861-000 | | 1 | SHEET, OPERATION PANEL | FAX-L200/L280(FRN) |
| | HB1-5070-000 | | 1 | SHEET, OPERATION PANEL | FAX-L200/L280(CHN) |
| | HB1-5530-000 | | 1 | SHEET, OPERATION PANEL | FAX-L240/L290(EC UK) |
| | HB1-5531-000 | | 1 | SHEET, OPERATION PANEL | FAX-L240/L290(GER) |
| | HB1-5532-000 | | 1 | SHEET, OPERATION PANEL | FAX-L240/L290(FRN) |
| | HB1-5594-000 | | 1 | SHEET, OPERATION PANEL | FAX-L200(KOR) |
| 4 | HB1-4838-000 | N | 1 | FRAME, ADF UPPER | |
| 5 | HB1-4839-000 | | 1 | ARM, DETECTION (DS) | |
| 6 | HB1-4840-000 | | 2 | GUIDE, DOCUMENT EJECT | |
| 7 | HB1-2863-000 | | 1 | STOPPER, DOCUMENT | |
| 8 | HB1-2864-000 | | 1 | ROLLER, BACK UP | |
| 9 | HB1-2866-000 | | 2 | PLATE, PRESSURE | |
| 10 | HB1-3257-000 | | 1 | STOPPER, OPERATION PANEL | |
| 11 | HB1-4072-000 | | 1 | BRUSH, STATIC DISCHARGE | |
| 12 | HB1-4310-000 | | 1 | ARM, DETECTION (DES) | |
| 13 | HS5-2078-000 | | 1 | SPRING | |
| 14 | HS5-2129-000 | | 1 | SPRING, WHITE SHEET | |
| 15 | HS5-6023-030 | | 1 | ROLLER, BACK UP | |
| 16 | HS5-6069-000 | | 1 | ROLLER, DELIVERY | |
| 17 | XB4-7300-807 | | 2 | SCREW, TAP TIGHT, BINDING HEAD | |
| 18 | HF5-0399-000 | | 1 | WHITE SHEET UNIT | |
| 19 | HG5-2556-000 | | 1 | SEPARATION GUIDE ASS'Y | |
| 20 | HB1-4853-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L200/L280(UK AUS AE) |
| | HB1-4860-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L200/L280(GER) |
| | HB1-4862-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L200/L280(FRN) |
| | HB1-5071-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L200/L280(CHN) |
| | HB1-5529-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L240/L290(EC UK) |
| | HB1-5533-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L240/L290(GER) |
| | HB1-5534-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L240/L290(FRN) |
| | HB1-5595-000 | | 1 | SHEET, ONE TOUCH DIAL | FAX-L200(KOR) |


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|------------------------------|--|
| 8 - 21 | HB1-4822-000 | | 1 | COVER, OPERATION | FAX-L280(UK GER FRN AUS AE CHN) |
| | HB1-4855-000 | | 1 | COVER, OPERATION | FAX-L200(UK GER FRN AUS AE CHN KOR) |
| | HB1-5515-000 | | 1 | COVER, OPERATION | FAX-L290(EC) |
| | HB1-5516-000 | | 1 | COVER, OPERATION | FAX-L240(EC) |
| 22 23 | HB1-5535-000 | | 1 | COVER, OPERATION | FAX-L290(UK GER FRN) |
| | HB1-5536-000 | | 1 | COVER, OPERATION | FAX-L240(UK GER FRN) |
| | HB1-5058-000 | | 1 | PLATE, GROUNDING | |
| | XB4-7301-009 | | 2 | SCREW, BINDING HEAD SELF-TPG | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 9 OPERATION PANEL ASS'Y

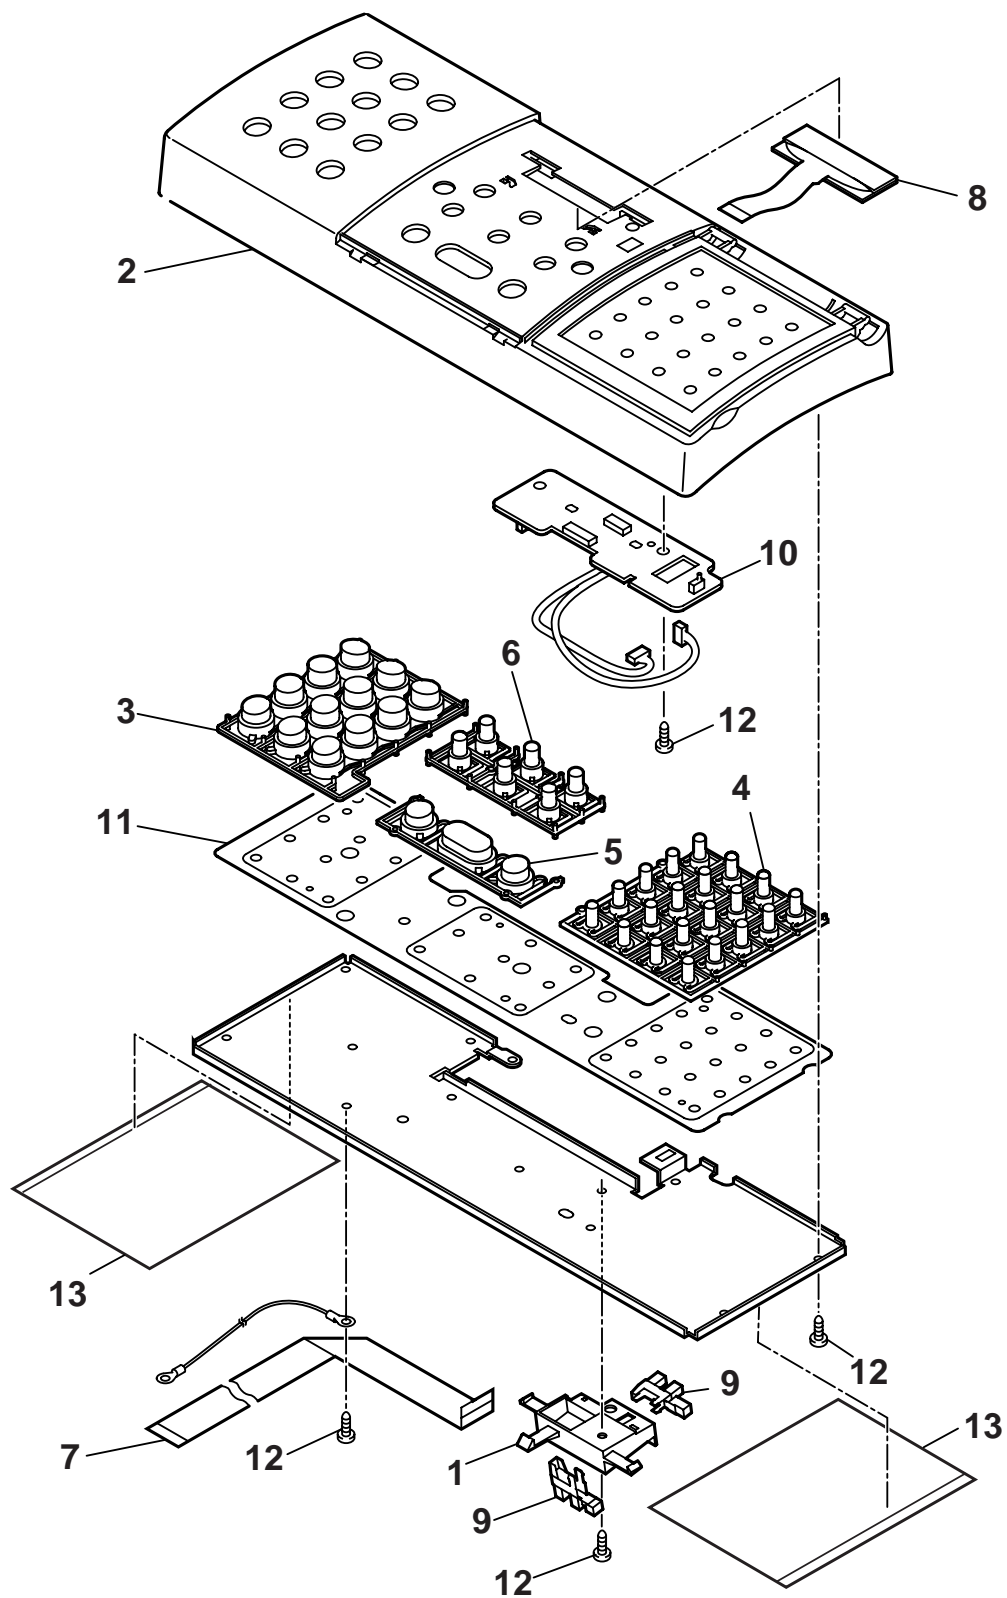

| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|------------------------------|---------------|
| 9- 1 | HB1-4837-000 | | 1 | HOLDER, SENSOR | |
| 2 | HB1-4842-000 | | 1 | COVER, OPERATION PANEL | FAX-L200/L280 |
| | HB1-5528-000 | | 1 | COVER, OPERATION PANEL | FAX-L240/L290 |
| 3 | HB1-4843-000 | | 1 | KEY TOP, DIAL | |
| 4 | HB1-4844-000 | | 1 | KEY TOP, ONE TOUCH DIAL | |
| 5 | HB1-4845-000 | | 1 | KEY TOP, MAIN | FAX-L200/L280 |
| | HB1-5526-000 | | 1 | KEY TOP, MAIN | FAX-L240/L290 |
| 6 | HB1-4846-000 | | 1 | KEY TOP, FUNCTION | FAX-L200/L280 |
| | HB1-5527-000 | | 1 | KEY TOP, FUNCTION | FAX-L240/L290 |
| 7 | HH2-3055-000 | | 1 | CABLE, FLAT, 20P | FAX-L200/L280 |
| | HH2-3203-000 | | 1 | CABLE, FLAT, 15P | FAX-L240/L290 |
| 8 | HH7-2521-000 | | 1 | LCD UNIT | FAX-L200/L280 |
| | HH7-2679-000 | | 1 | LCD UNIT | FAX-L240/L290 |
| 9 | WG8-5362-000 | | 2 | PHOTO-INTERRUPTER, TLP1241 | |
| 10 | HG5-2564-000 | | 1 | OPCNT BOARD ASS'Y | FAX-L200/L280 |
| | HG5-2970-000 | | 1 | OPCNT BOARD ASS'Y | FAX-L240/L290 |
| 11 | HH7-2529-000 | | 1 | MEMBRANE UNIT | |
| 12 | XB4-7301-009 | | 12 | SCREW, BINDING HEAD SELF-TPG | |
| 13 | HB1-5538-000 | | 2 | SHEET | FAX-L240/L290 |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 
FIGURE 10 ADF LOWER

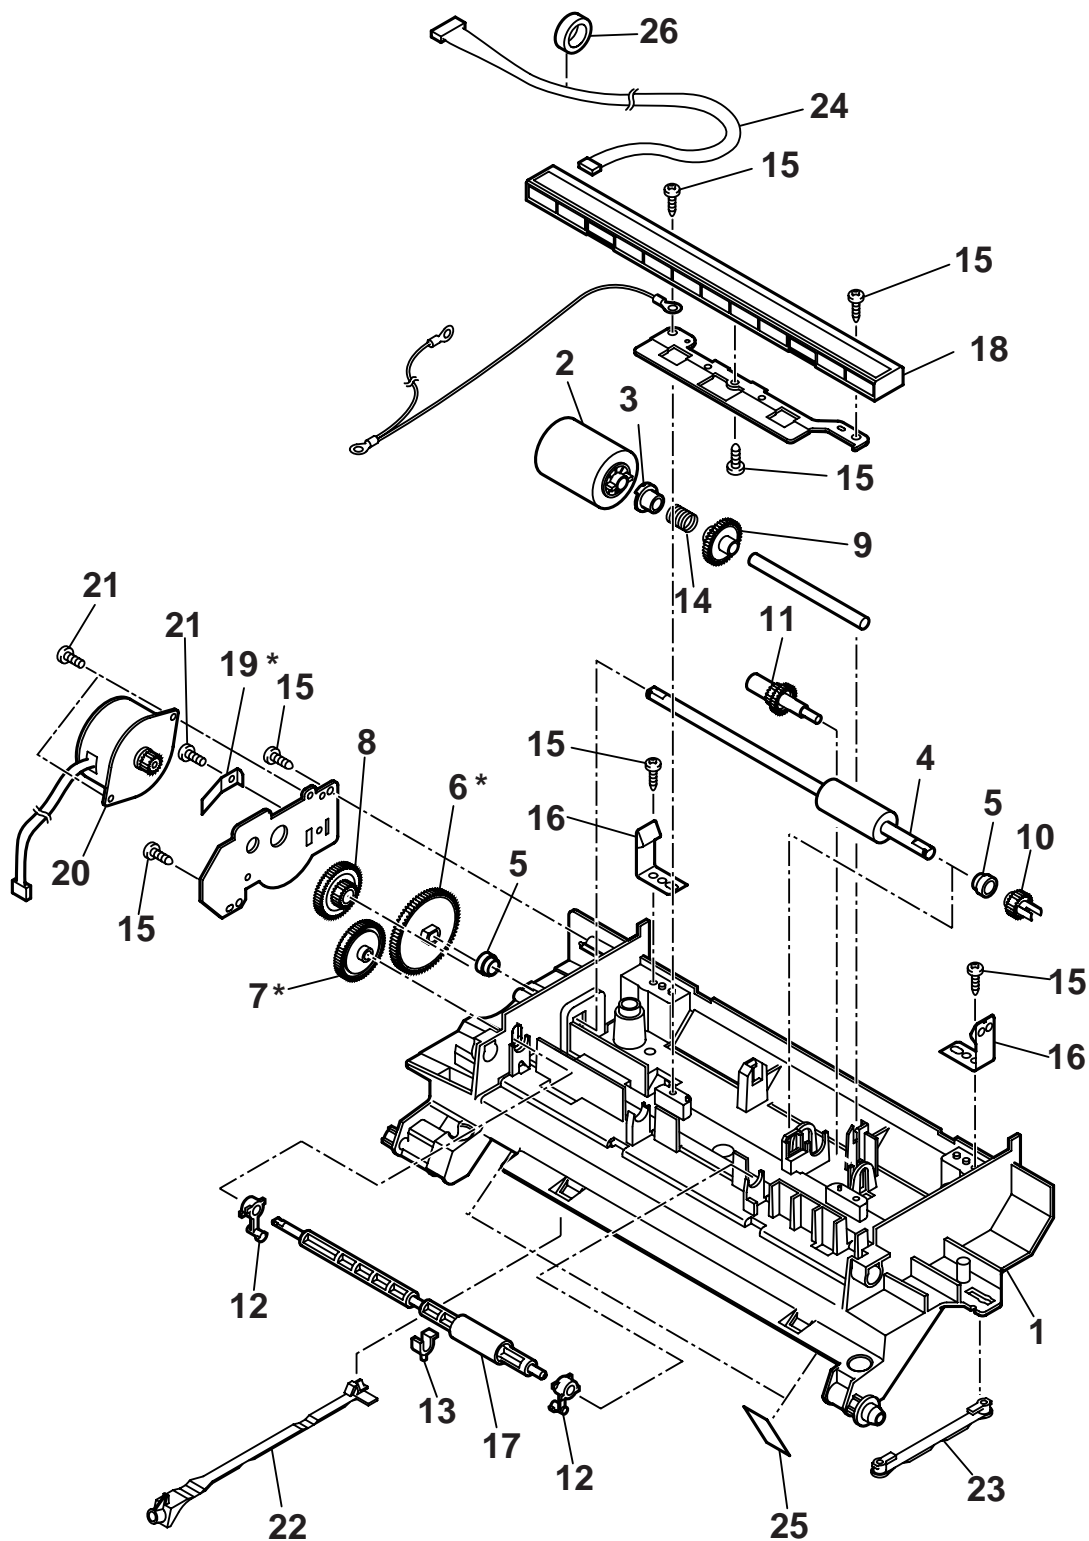

* = Lubrication
See page 4-2


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|--------------------------------|----------------|
| 10- 1 | HB1-4850-000 | N | 1 | FRAME, ADF LOWER | |
| 2 | HB1-4856-000 | | 1 | ROLLER, SEPARATION | |
| 3 | HB1-1779-000 | | 1 | SPACER | |
| 4 | HB1-4307-000 | | 1 | ROLLER, DOCUMENT FEED | |
| 5 | HS1-1063-000 | | 2 | BUSHING | |
| 6 | HS5-0311-000 | | 1 | GEAR, Z82D | |
| 7 | HS5-0312-000 | | 1 | GEAR, Z59D | |
| 8 | HS5-0313-000 | | 1 | GEAR, Z21/Z54 | |
| 9 | HS5-0314-000 | | 1 | GEAR, Z40D | |
| 10 | HS5-0315-000 | | 1 | GEAR, Z21D | |
| 11 | HS5-0316-000 | | 1 | GEAR, Z21/28B | |
| 12 | HS5-1070-030 | | 2 | BUSHING | |
| 13 | HS5-1090-000 | | 1 | BUSHING | |
| 14 | HS5-2077-000 | | 1 | SPRING, CLUTCH | |
| 15 | XB4-7300-807 | | 7 | SCREW, TAP TIGHT, BINDING HEAD | |
| 16 | HF5-0375-000 | | 2 | LOCK, OPERATION PANEL | |
| 17 | HF5-0543-000 | | 1 | ROLLER, DOCUMENT EJECT | |
| 18 | HH7-2520-000 | | 1 | IC,IA2008-MB21B,CONTACT SENSOR | |
| 19 | HB1-3036-000 | | 1 | PLATE, GROUNDING | |
| 20 | HH7-2522-000 | | 1 | MOTOR, DOCUMENT FEED | |
| 21 | XB1-2300-407 | | 3 | SCREW, BH3X4 (S) | |
| 22 | HB1-3109-020 | | 1 | STOPPER, CRG | |
| 23 | HB1-3257-000 | | 1 | STOPPER, OPERATION PANEL | |
| 24 | HG5-2583-000 | | 1 | CABLE WITH CONNECTOR, 7P | FAX-L200/L280 |
| | HG5-2979-000 | | 1 | CABLE WITH CONNECTOR, 7P | FAX-L240/L290 |
| 25 | HB1-4261-000 | | 2 | SHEET | |
| 26 | RH7-9033-000 | | 1 | RING, CORE | |
| | | | | | |

 FIGURE 11 SCANNER ASS'Y

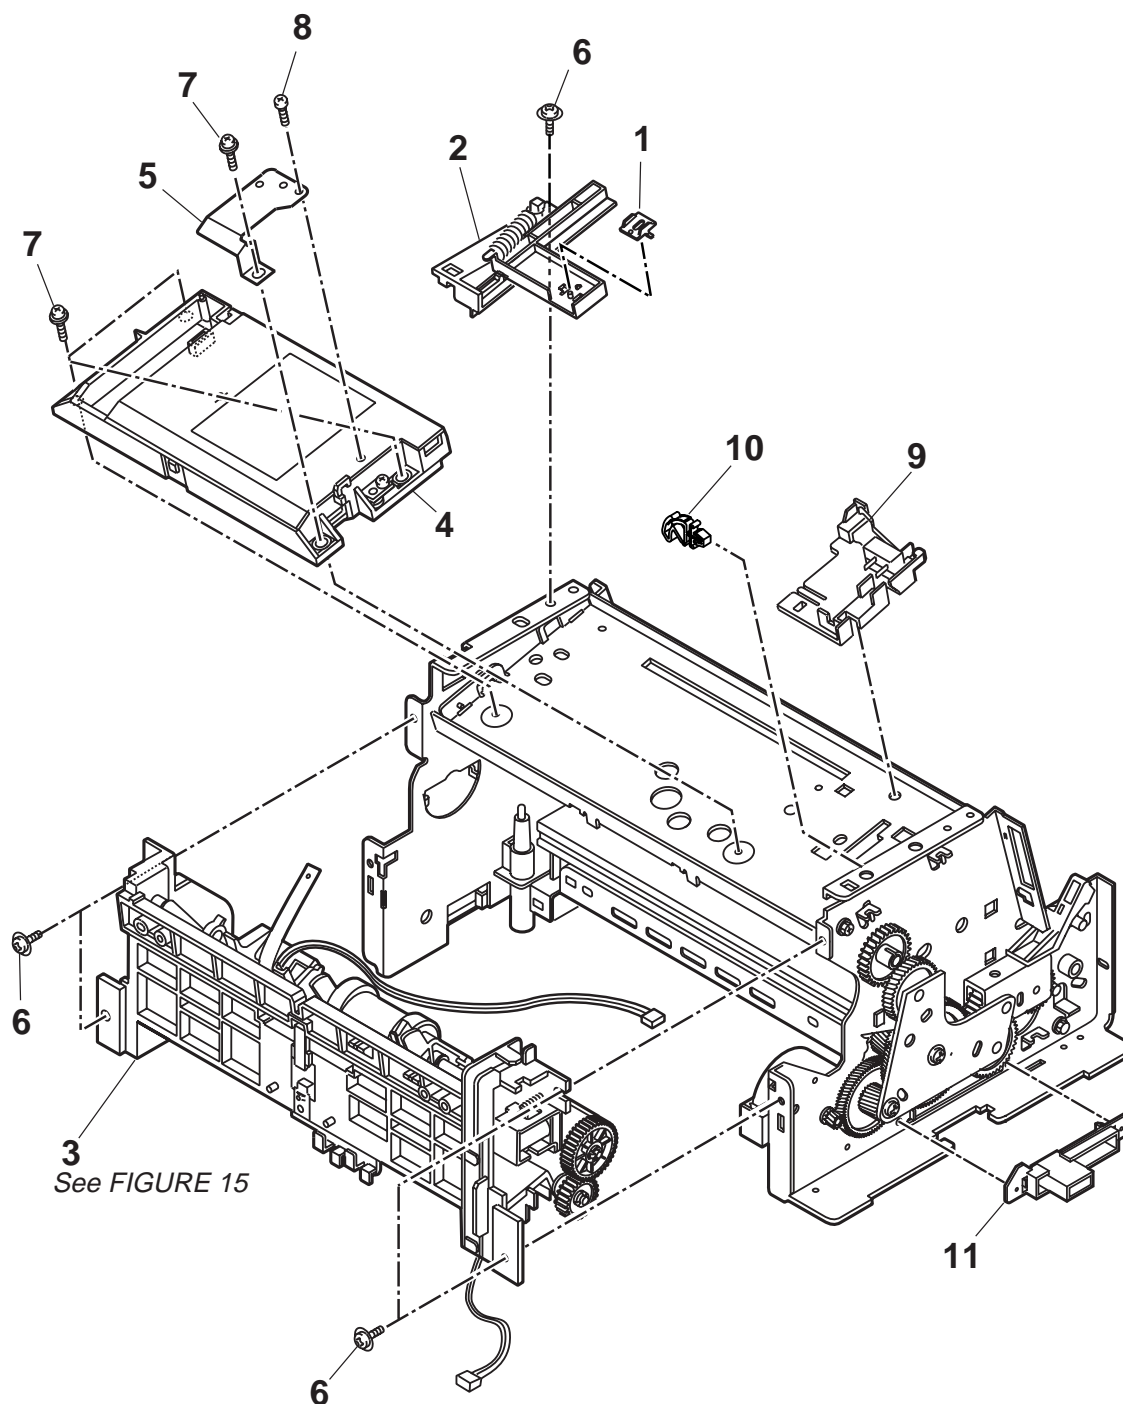


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------------|---------|
| 11 - 1 | HB1-3018-000 | | 1 | STOPPER, TAPE | |
| 2 | HG5-1290-000 | | 1 | ACTUATOR UNIT | |
| 3 | NPN | | 1 | PAPER FEED UNIT | |
| 4 | RG5-5473-000 | | 1 | SCANNER ASS'Y | |
| 5 | HB1-3418-000 | | 1 | PLATE, GROUNDING | |
| 6 | XB3-6300-800 | | 5 | SCREW, RS, M3X8 | |
| 7 | XB6-7300-807 | | 4 | SCREW, TP, M3X8 | |
| 8 | XB4-7300-807 | | 1 | SCREW, TAP TIGHT, BINDING HEAD | |
| 9 | RF5-3256-000 | | 1 | MOUNT, SENSING LEVER | |
| 10 | WT2-5134-000 | | 1 | CLAMP, CABLE | |
| 11 | HB1-5513-000 | | 1 | COVER, CABLE | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 12 FIXING SECTION 1

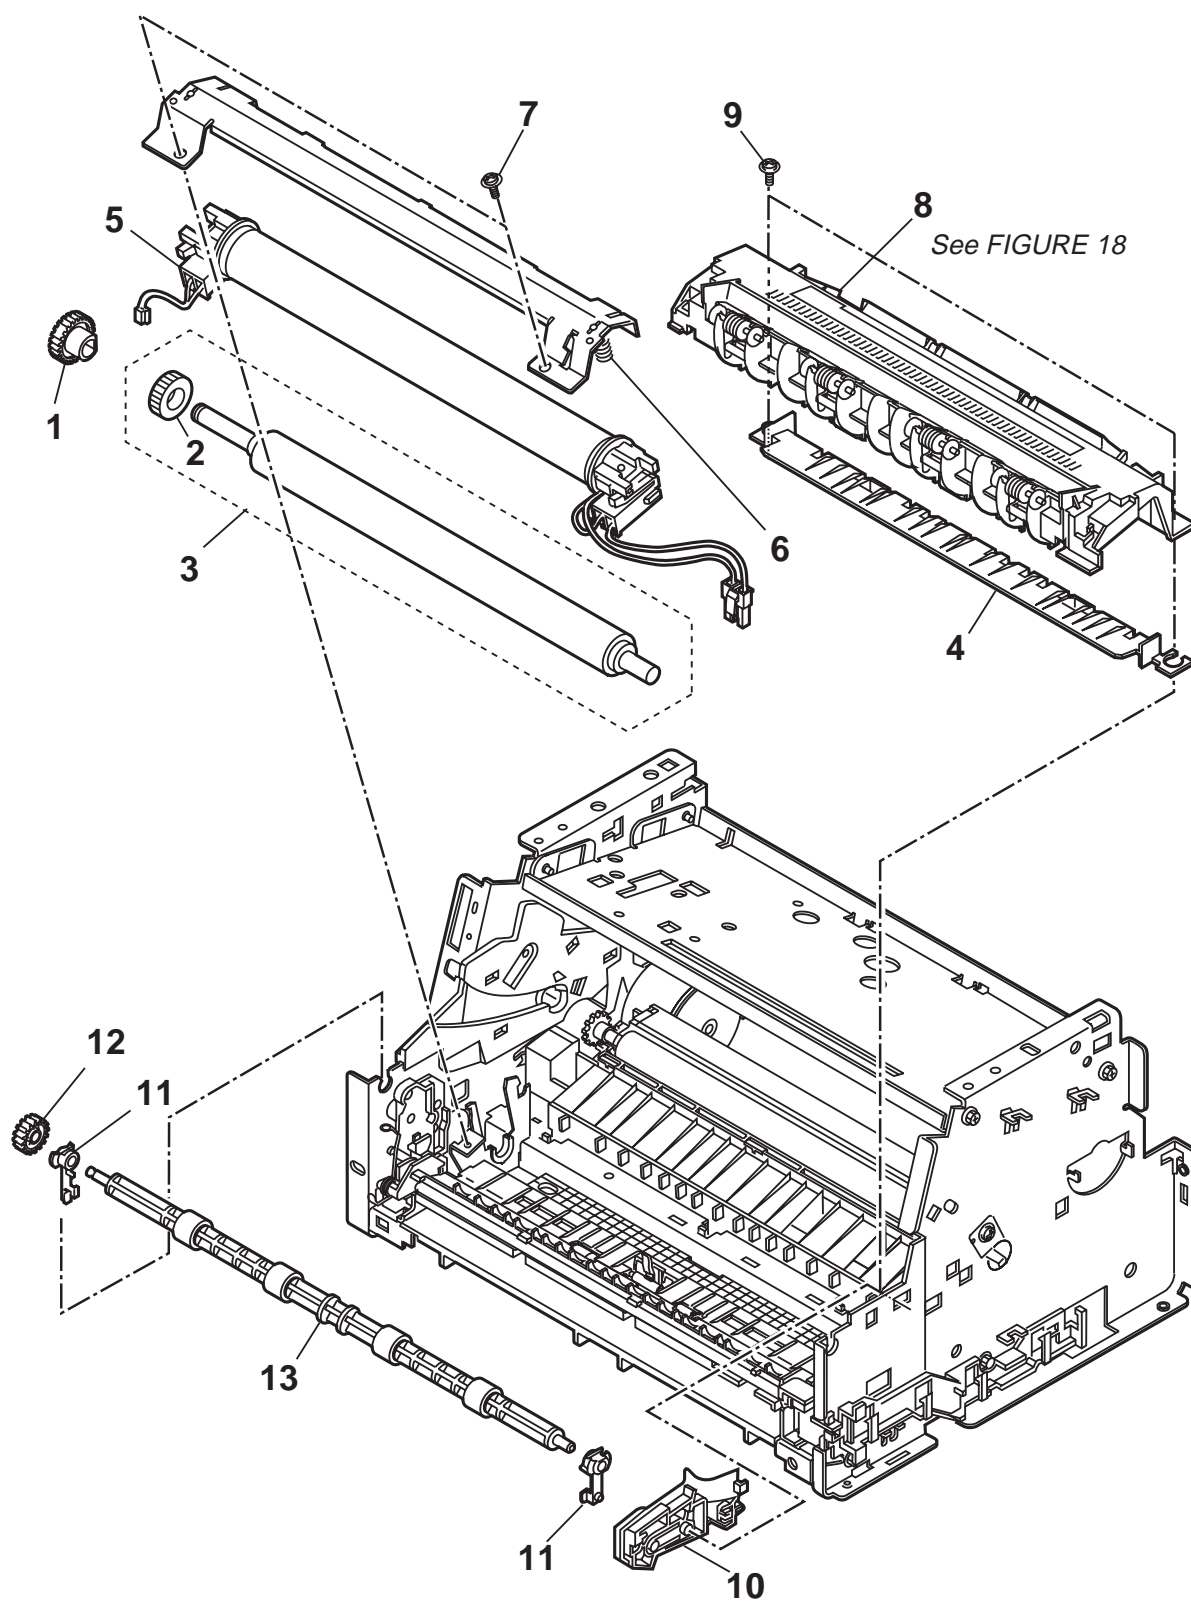


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|------------------------------|----------------|
| 12- 1 | RS5-0796-000 | | 1 | GEAR, 27T | |
| 2 | RB2-1668-000 | | 1 | RUBBER, CONTINUITY | |
| 3 | RF5-5479-000 | | 1 | ROLLER, PRESSURE | |
| 4 | RB1-7247-000 | | 1 | GUIDE, PAPER | |
| 5 | HG5-2408-000 | | 1 | FIXING ASS'Y | |
| 6 | RS5-2508-000 | | 2 | SPRING, COMPRESSION | |
| 7 | XB6-7300-807 | | 2 | SCREW, TP, M3X8 | |
| 8 | RG5-5482-000 | | 1 | DELIVERY ASS'Y | |
| 9 | XB3-6300-800 | | 2 | SCREW, RS, M3X8 | |
| 10 | RB1-7341-030 | | 1 | GUIDE, SUB, CARTRIDGE, RIGHT | |
| 11 | RB1-7288-020 | | 2 | BUSHING | |
| 12 | RS5-0797-000 | | 1 | GEAR, 18T | |
| 13 | RF5-2367-000 | | 1 | ROLLER, FEEDER | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 13 DRIVE GEARS

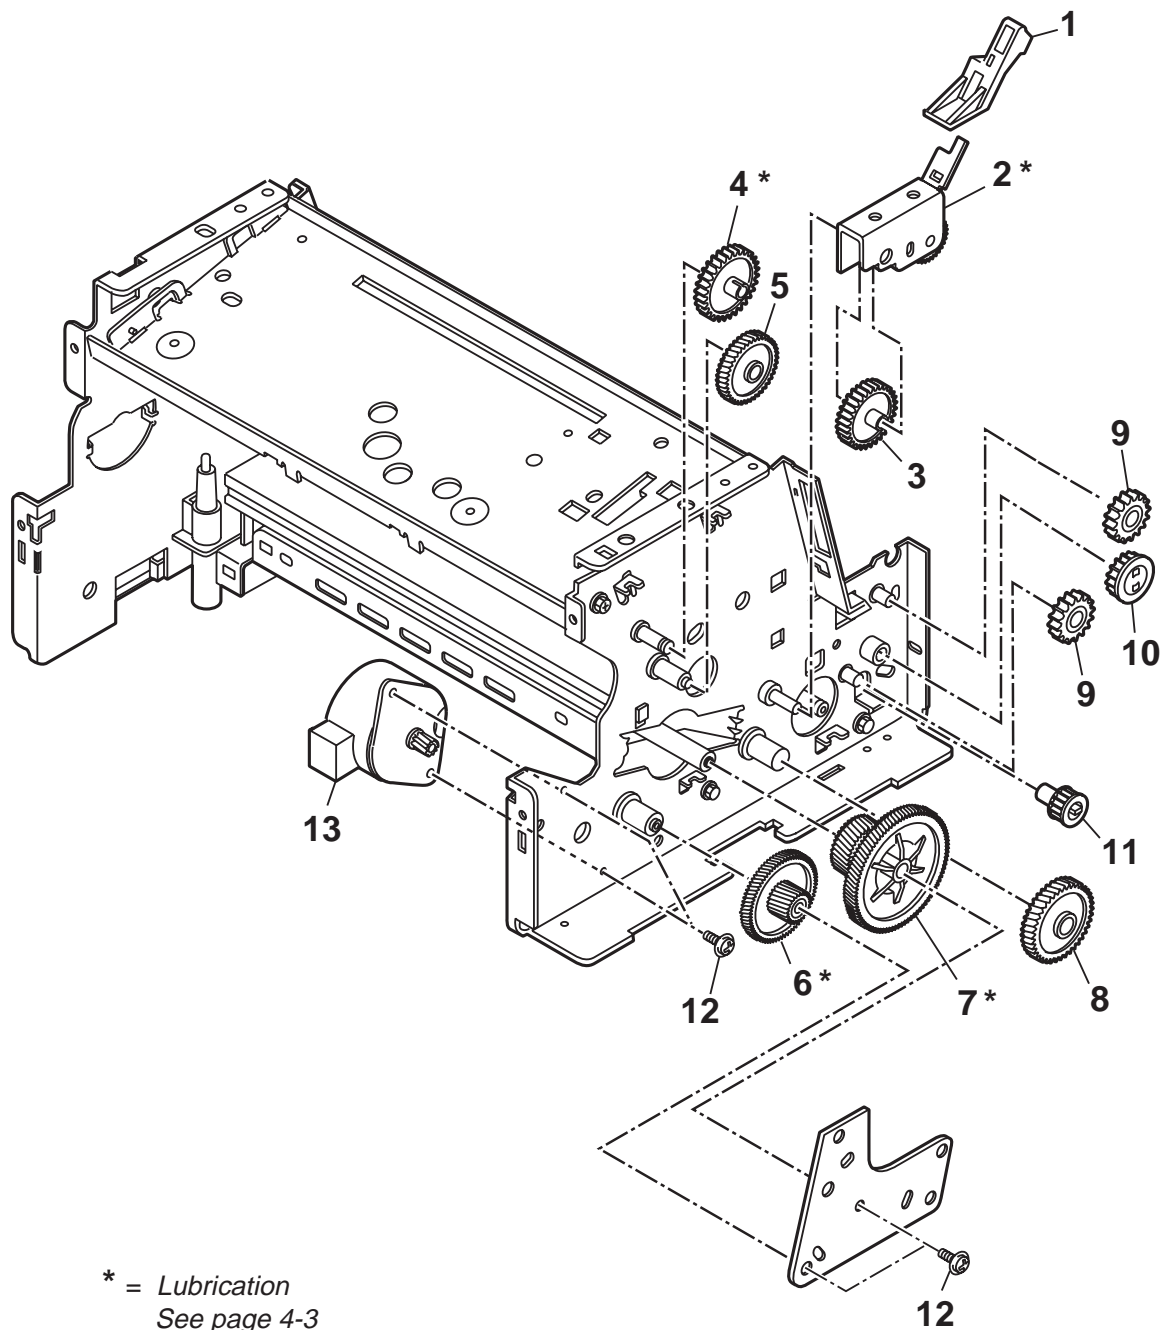


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|--------------------------|----------------|
| 13- 1 | RB1-8170-000 | | 1 | LEVER, RELEASE, D | |
| 2 | RF5-1513-000 | | 1 | ARM, SWING | |
| 3 | RS5-0791-000 | | 1 | GEAR, 36T | |
| 4 | RS5-0789-000 | | 1 | GEAR, 37T | |
| 5 | RS5-0799-000 | | 1 | GEAR, 51T/17T | |
| 6 | RS6-0380-000 | | 1 | GEAR, 23T/98T | |
| 7 | RS5-0788-000 | | 1 | GEAR, 32T/93T | |
| 8 | RS5-0790-000 | | 1 | GEAR, 54T/19T | |
| 9 | RS5-0793-000 | | 2 | GEAR, 22T | |
| 10 | RS5-0794-000 | | 1 | GEAR, 24T | |
| 11 | RS5-0798-000 | | 1 | GEAR, 15T | |
| 12 | XB6-7300-607 | | 4 | SCREW, TP, M3X6 | |
| 13 | RH7-1450-000 | | 1 | MOTOR, STEPPING, DC 4.8W | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 14 FIXING SECTION 2

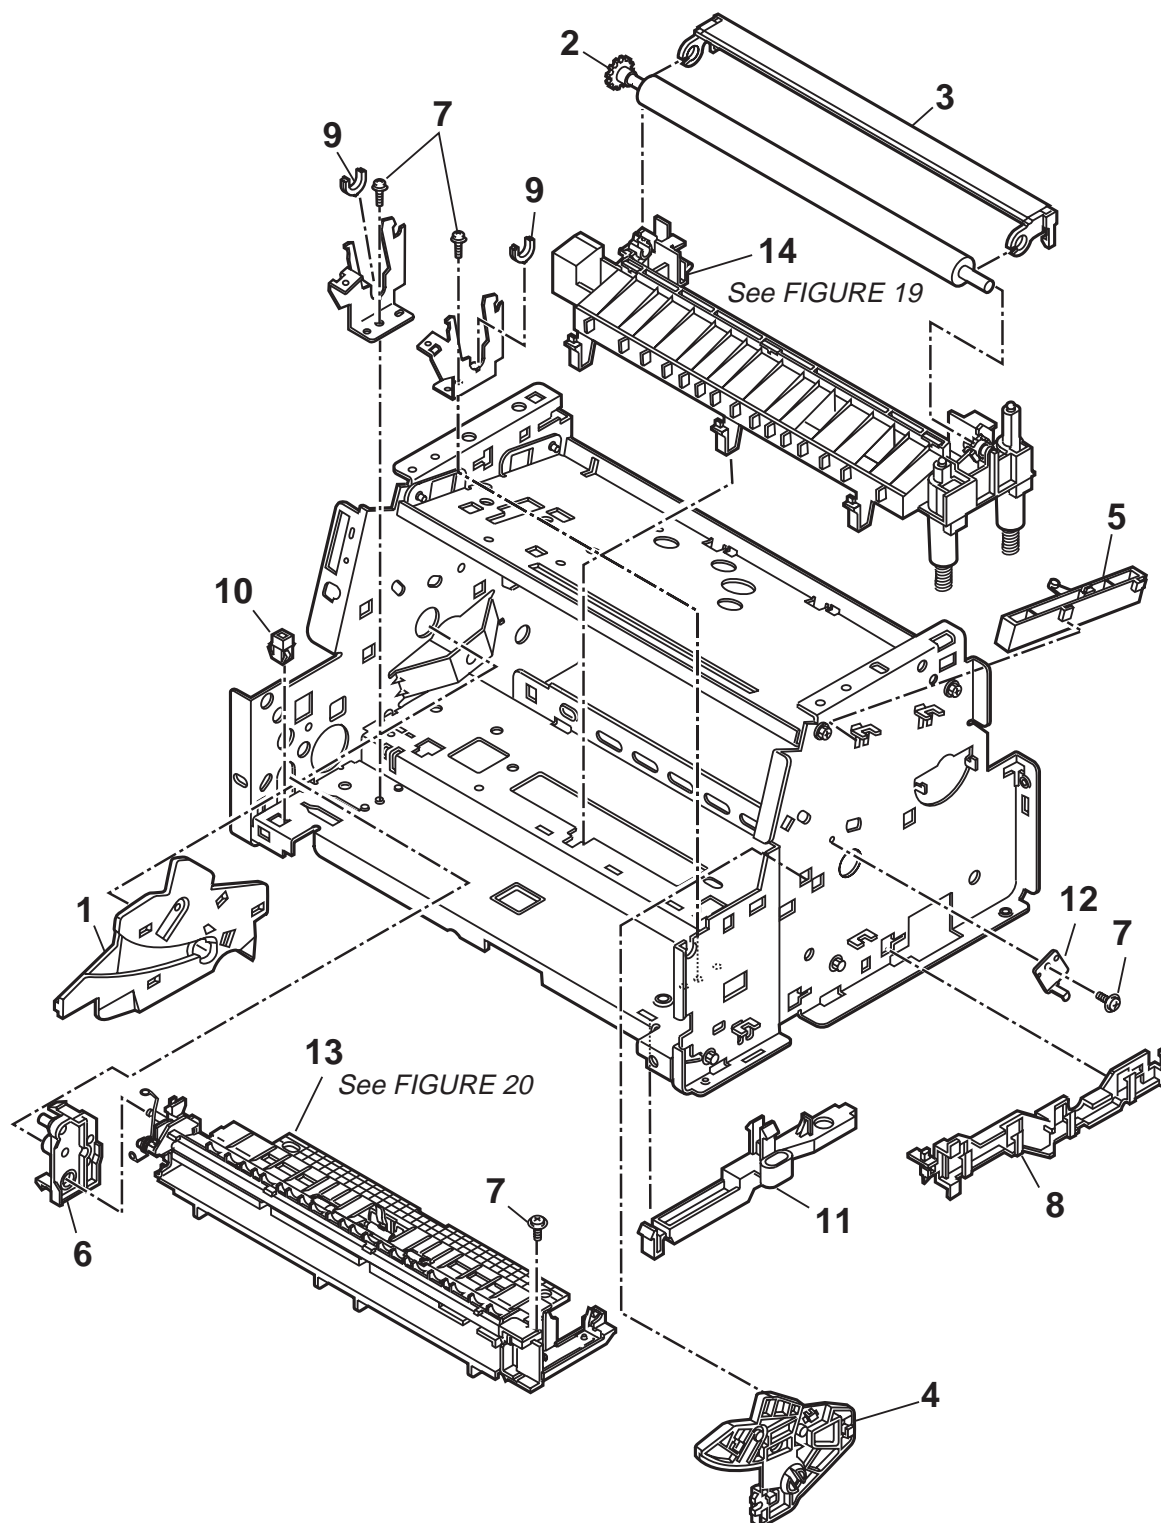


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|------------------------|---------|
| 14- 1 | RF5-1514-020 | | 1 | GUIDE, CARTRIDGE,LEFT | |
| 2 | RF5-1534-000 | | 1 | ROLLER, TRANSFER | |
| 3 | RF5-2358-000 | | 1 | GUIDE, TRANSFER | |
| 4 | RF5-1515-020 | | 1 | GUIDE, CARTRIDGE | |
| 5 | HB1-3019-000 | | 1 | STOPPER, CARTRIDGE | |
| 6 | RB1-7107-000 | | 1 | HOLDER, GEAR | |
| 7 | XA9-0724-000 | | 4 | SCREW, M3X8 | |
| 8 | RB1-7130-020 | | 1 | GUIDE, CABLE | |
| 9 | RB1-7246-000 | | 2 | BUSHING | |
| 10 | VS1-5057-002 | | 1 | CONNECTOR, 2P | |
| 11 | RF5-1533-000 | | 1 | PLATE, CONTINUITY | |
| 12 | RB1-7129-000 | | 1 | SPRING, GROUNDING | |
| 13 | RG5-3475-040 | | 1 | SEPARATION GUIDE ASS'Y | |
| 14 | RG5-5481-000 | | 1 | TRANSFER BLOCK ASS'Y | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 15 PAPER FEED SECTION

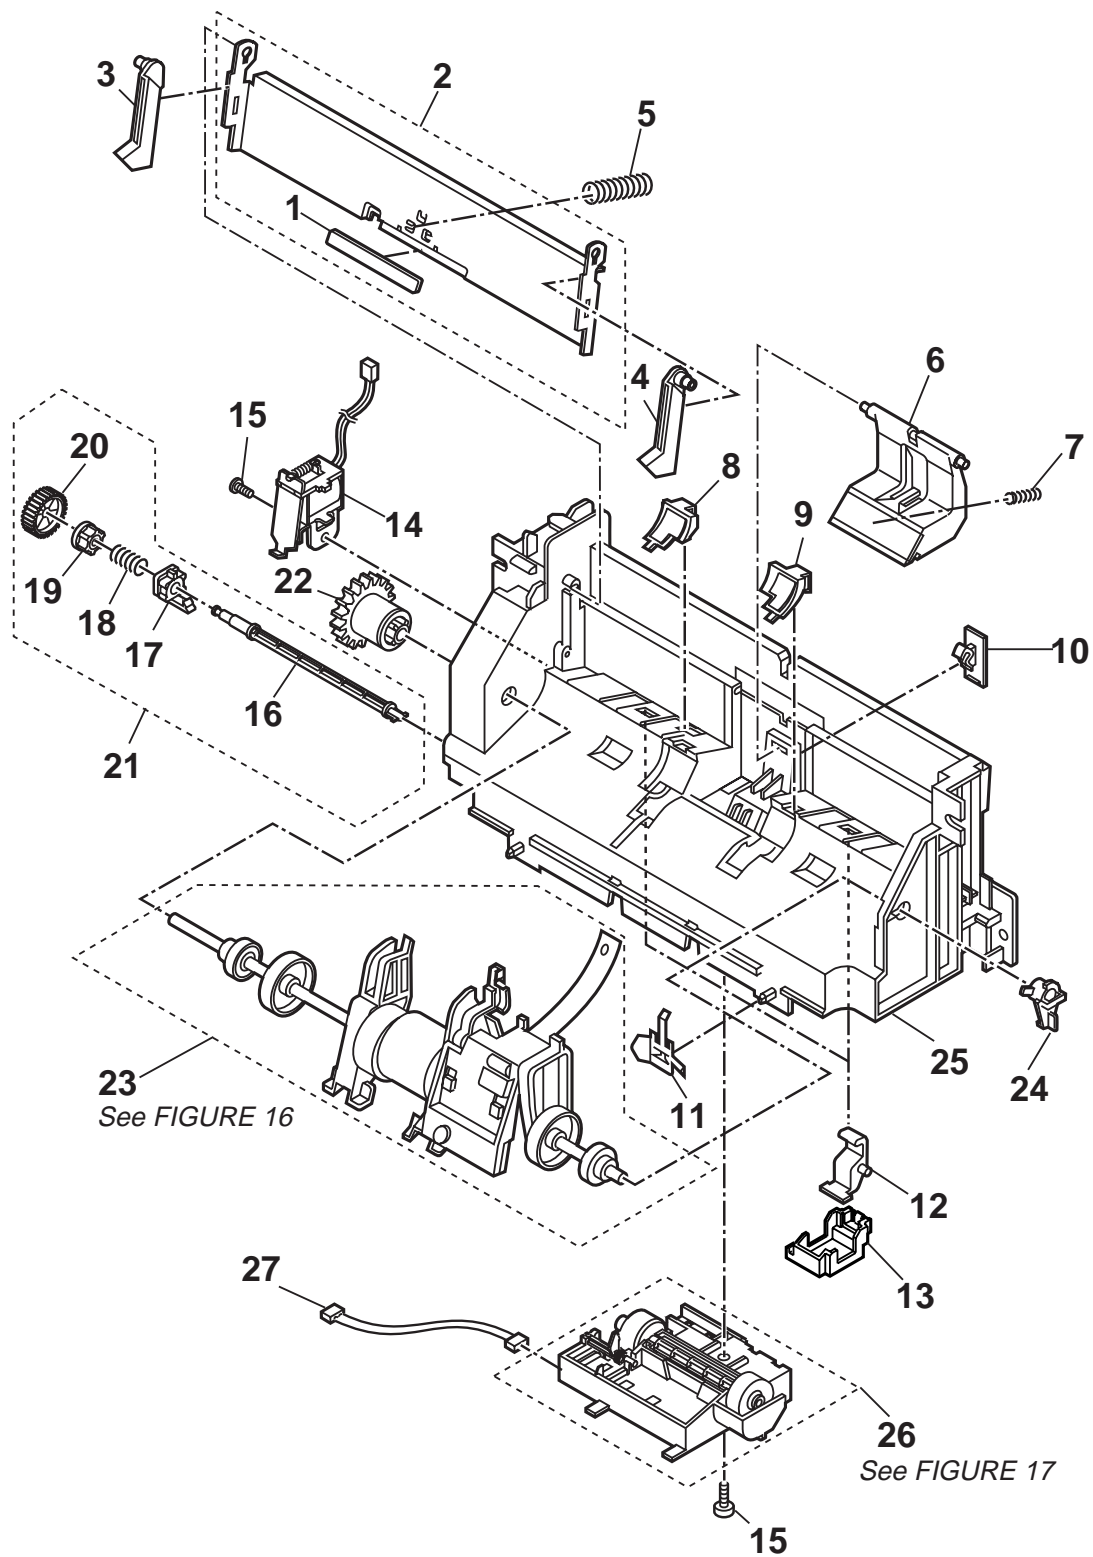


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|------------------------------|----------------|
| 15- 1 | RB2-1706-000 | | 1 | SHEET, SEPARATION | |
| 2 | RF5-2372-000 | | 1 | PLATE, MIDDLE | |
| 3 | RB1-7185-000 | | 1 | ARM, PLATE, LEFT | |
| 4 | RB1-7186-000 | | 1 | ARM, PLATE, RIGHT | |
| 5 | RS5-2501-000 | | 1 | SPRING, COMPRESSION | |
| 6 | RB2-6221-000 | | 1 | ARM, SEPARATION | |
| 7 | RS5-2502-000 | | 1 | SPRING, COMPRESSION | |
| 8 | RF5-1492-000 | | 1 | PAD, LEFT | |
| 9 | RF5-1493-000 | | 1 | PAD, RIGHT | |
| 10 | RB1-7206-000 | | 1 | HOLDER, ARM | |
| 11 | RB1-7172-000 | | 1 | SPRING, GROUNDING | |
| 12 | RB1-7219-000 | | 2 | STOPPER | |
| 13 | HB1-4825-000 | | 2 | HOLDER, STOPPER | |
| 14 | RH7-5265-000 | | 1 | SOLENOID | |
| 15 | XB4-7401-007 | | 2 | SCREW, PAN HEAD SELF-TAPPING | |
| 16 | RB1-7221-000 | | 1 | SHAFT, DRIVE | |
| 17 | RB1-7222-000 | | 1 | BUSHING | |
| 18 | RS5-2510-000 | | 1 | SPRING, COMPRESSION | |
| 19 | RB1-7224-000 | | 1 | RATCHET | |
| 20 | RS5-0786-000 | | 1 | GEAR, 24T | |
| 21 | RG5-1947-000 | | 1 | FEEDER DRIVE ASS'Y | |
| 22 | RB1-7197-020 | | 1 | CLUTCH | |
| 23 | HG5-2546-000 | | 1 | PICKUP ROLLER ASS'Y | |
| 24 | RB1-7184-000 | | 1 | BUSHING | |
| 25 | RB1-7177-000 | N | 1 | FRAME, PAPER FEED | |
| 26 | HG5-2548-000 | | 1 | FEEDER ASS'Y | |
| 27 | HG5-2568-000 | | 1 | CABLE WITH CONNECTOR, 3P | FAX-L200/L280 |
| | HG5-2980-000 | | 1 | CABLE WITH CONNECTOR, 5P | FAX-L240/L290 |
| | | | | | |

 FIGURE 16 PICK-UP ROLLER ASS'Y

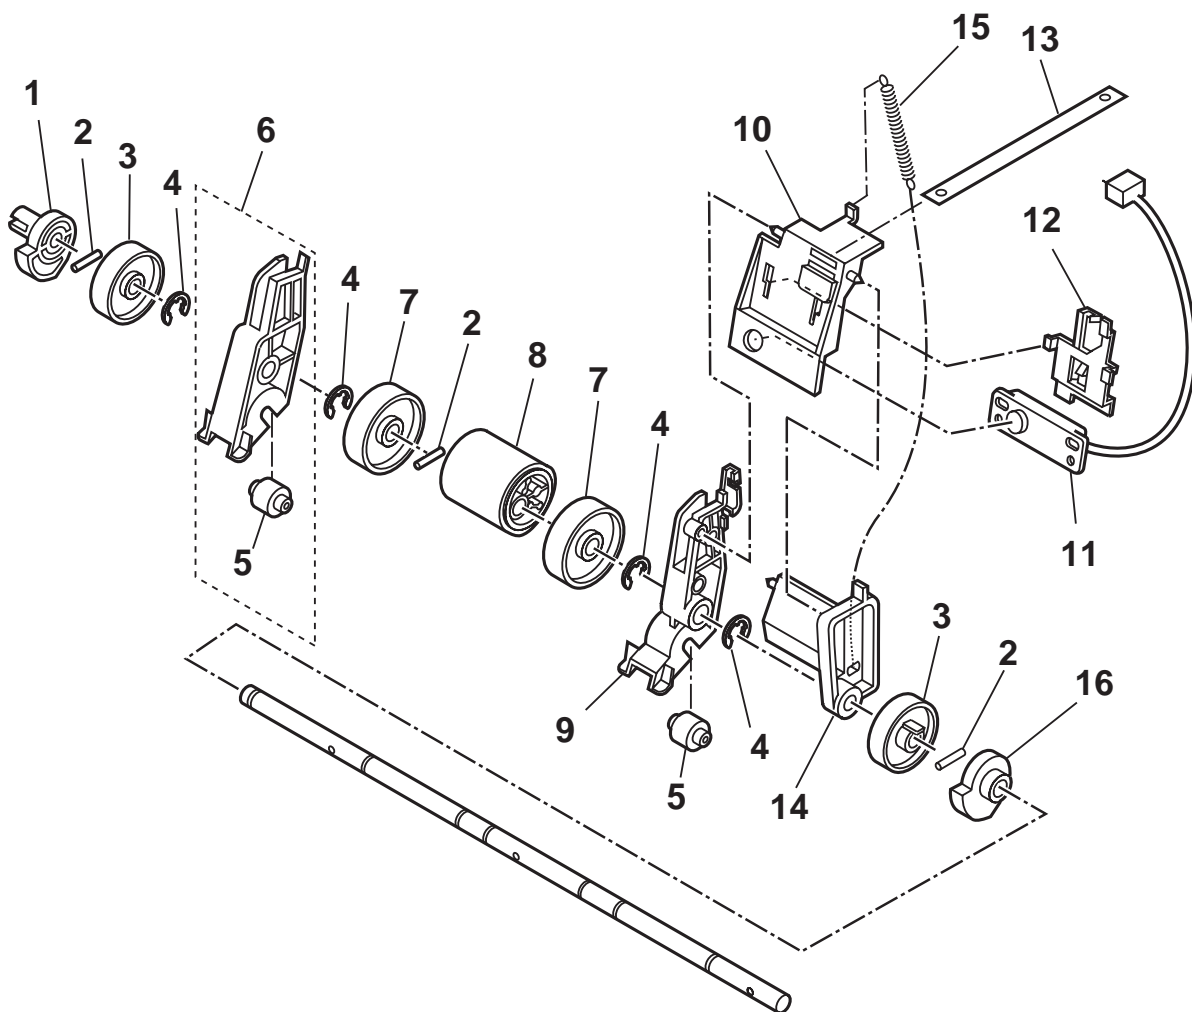

| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|-------------------------|----------------|
| 16- 1 | RB1-7193-000 | | 1 | CAM, LEFT | |
| 2 | XD9-0159-000 | | 3 | PIN, DOWEL | |
| 3 | RB2-1703-000 | | 2 | ROLLER, SUB | |
| 4 | XD9-0131-000 | | 4 | RING,E | |
| 5 | RB2-1701-000 | | 2 | ROLLER, FEED | |
| 6 | RG5-3492-000 | | 1 | FEED ROLLER ASS'Y, LEFT | |
| 7 | RB2-1633-000 | | 2 | ROLLER, SUB | |
| 8 | RB2-6223-000 | | 1 | ROLLER, PAPER PICK-UP | |
| 9 | HB1-3013-000 | | 1 | HOLDER, ROLLER | |
| 10 | HB1-3011-040 | | 1 | HOLDER, TONER SENSOR | |
| 11 | HH7-2423-000 | | 1 | TONER SENSOR ASS'Y | FAX-L200/L280 |
| | HH7-2723-000 | | 1 | TONER SENSOR ASS'Y | FAX-L240/L290 |
| 12 | HB1-3012-000 | | 1 | SUPPORTER, TONER SENSOR | |
| 13 | HB1-3015-000 | | 1 | BELT, TONER SENSOR | |
| 14 | HB1-3014-000 | | 1 | SUB HOLDER, ROLLER | |
| 15 | HS5-2139-000 | | 1 | SPRING, TONER SENSOR | |
| 16 | RB1-7194-000 | | 1 | CAM, RIGHT | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 17 FEEDER ASS'Y

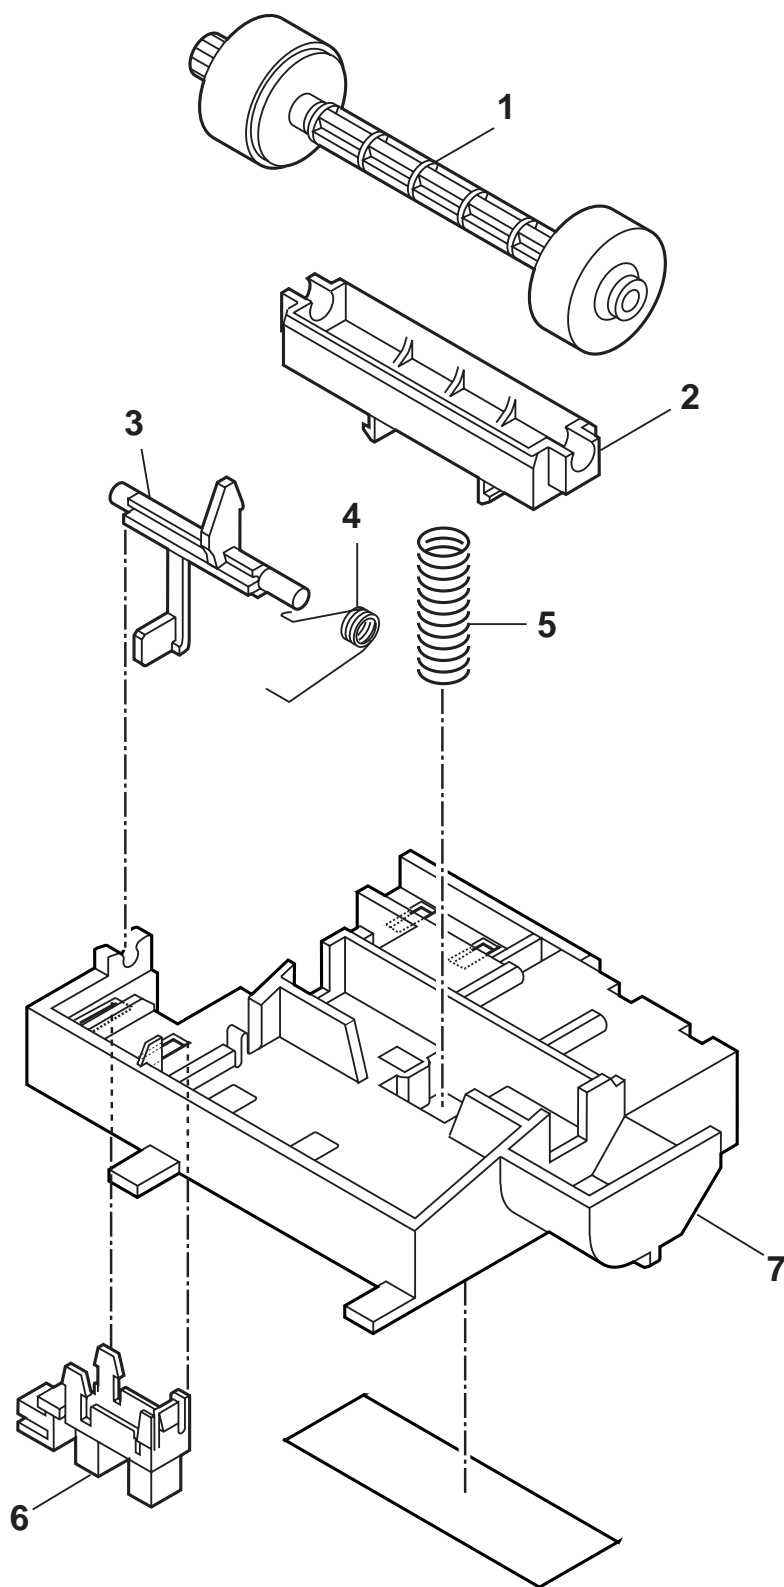

[illegible]

FIGURE 18 DELIEVRY ASS'Y



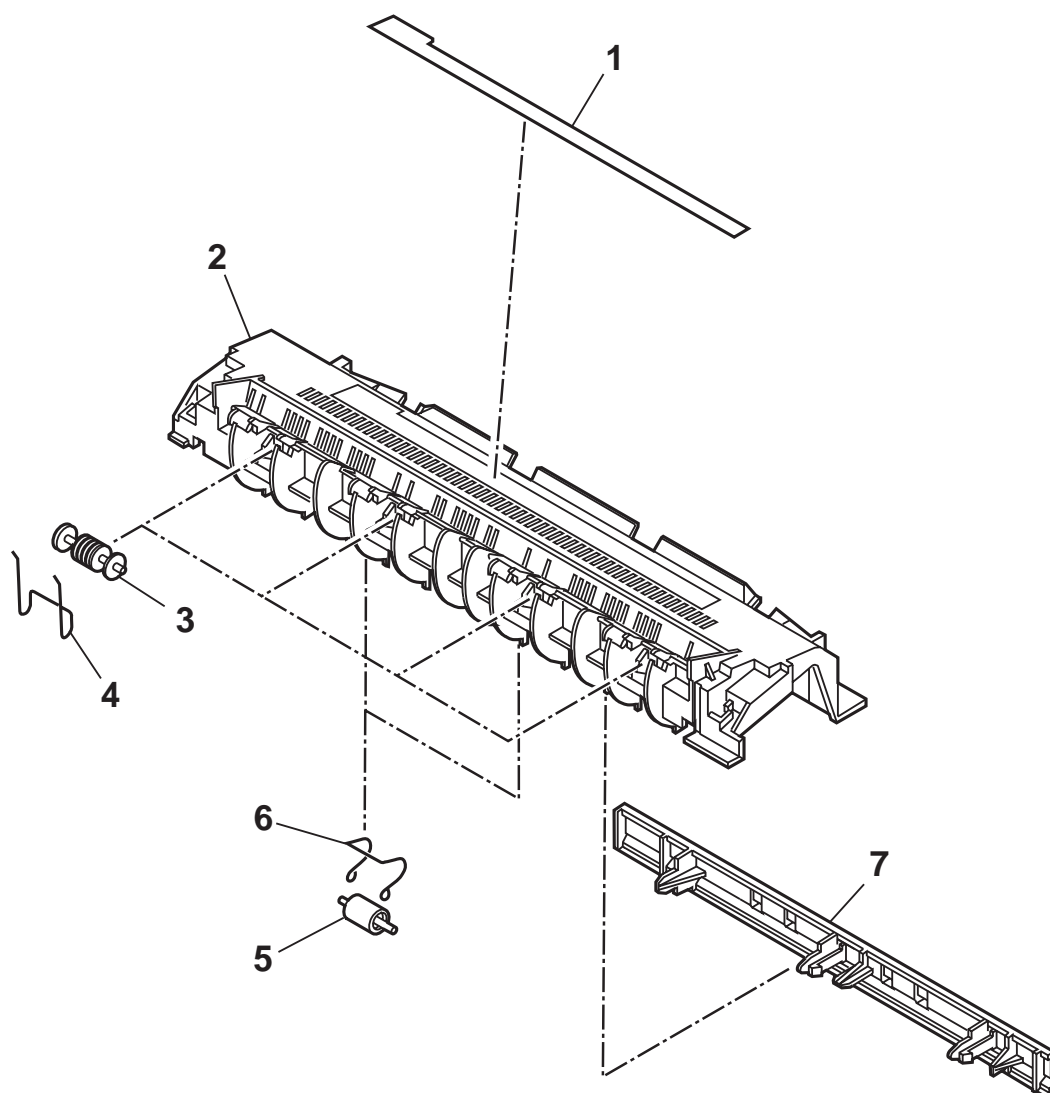 


FIGURE 19 TRANSFER BLOCK ASS'Y

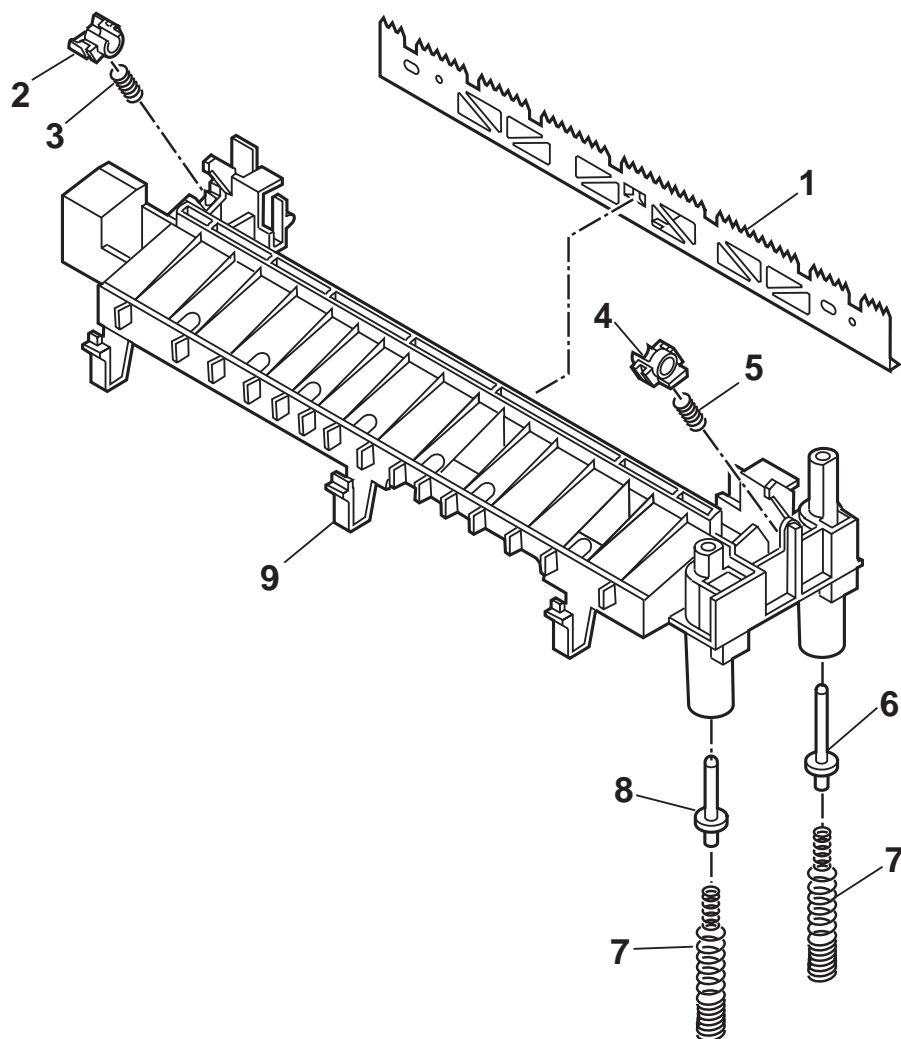 


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|---------------------------|----------------|
| 19- 1 | RB2-1657-000 | | 1 | ELIMINATOR, STATIC CHARGE | |
| 2 | RB2-1655-000 | | 1 | BUSHING | |
| 3 | RS5-2504-000 | | 1 | SPRING, COMPRESSION | |
| 4 | RB2-6214-000 | | 1 | BUSHING | |
| 5 | RS5-2505-000 | | 1 | SPRING, COMPRESSION | |
| 6 | RB1-7237-000 | | 1 | PIN, CONTACT | |
| 7 | RS5-2512-000 | | 2 | SPRING, COMPRESSION | |
| 8 | RB1-7236-000 | | 1 | PIN, CONTACT | |
| 9 | RB2-1654-000 | | 1 | BLOCK, TRANSFER | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 20 SEPARATION GUIDE ASS'Y (RECORDING)

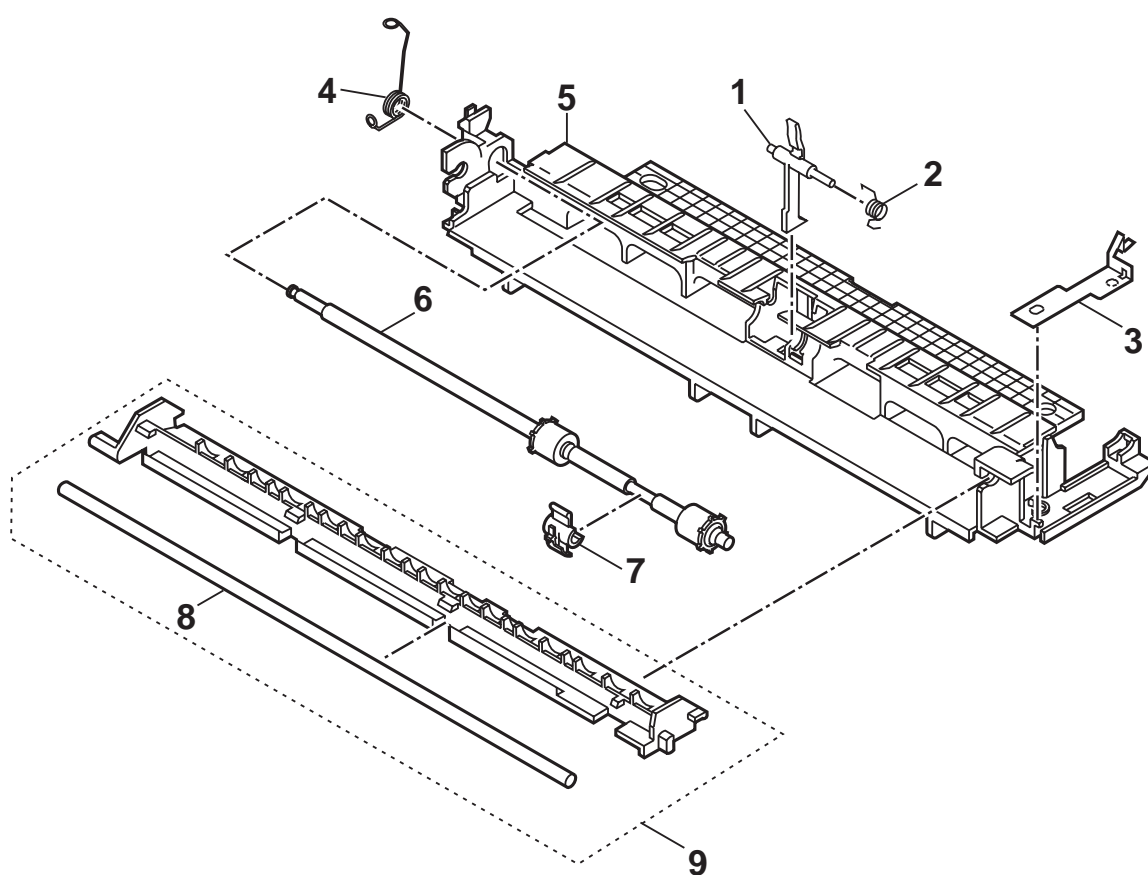

| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------|---------|
| 20- 1 | RB1-7293-030 | | 1 | LEVER, SENSOR | |
| 2 | RB1-7294-000 | | 1 | SPRING, TORSION | |
| 3 | RB2-1691-000 | | 1 | SPRING, LEAF | |
| 4 | RB1-7277-000 | | 1 | SPRING, TORSION | |
| 5 | RB2-1687-000 | | 1 | GUIDE, SEPARATION | |
| 6 | RF5-2368-000 | | 1 | ROLLER, FACE UP | |
| 7 | RB2-1690-000 | | 1 | BUSHING | |
| 8 | RB2-1689-000 | | 1 | ROD, REINFORCEMENT | |
| 9 | RG5-3476-030 | | 1 | FLAPPER | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 21 SCNT BOARD ASS'Y (FAX-L200)

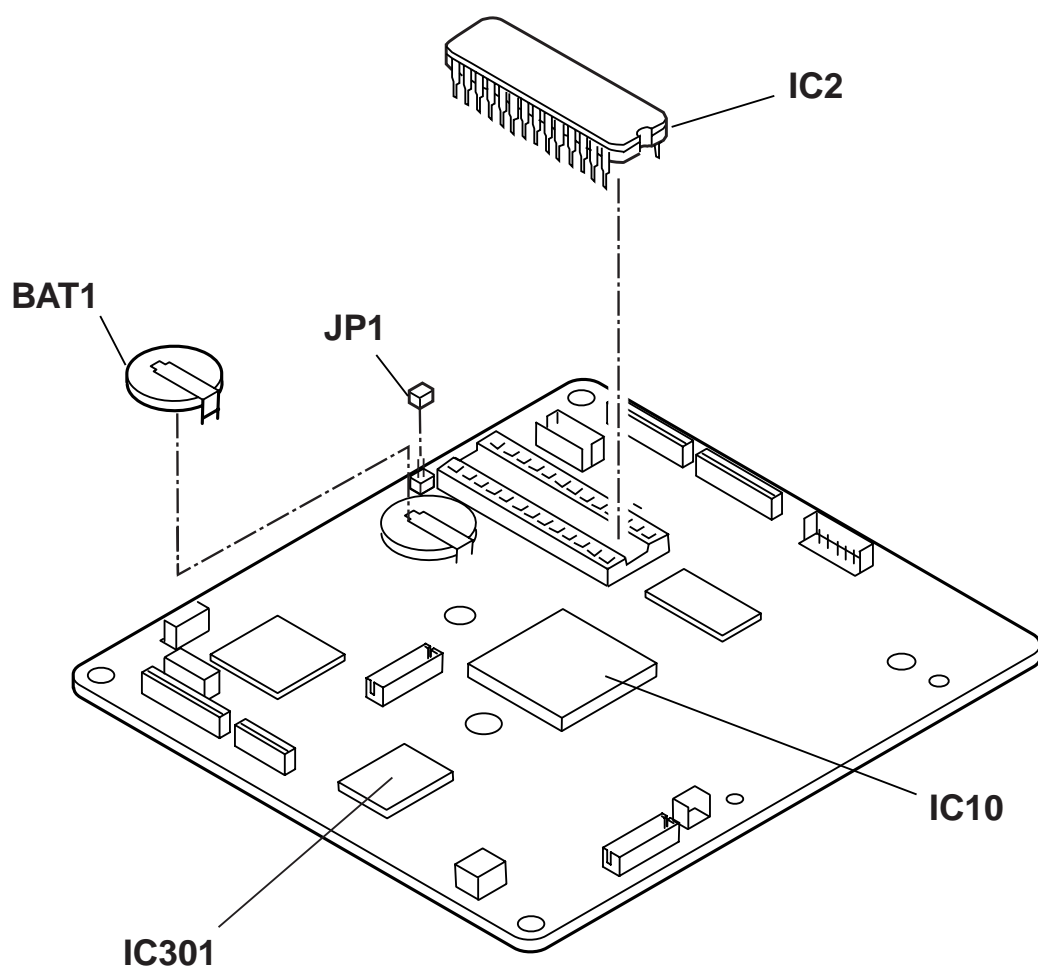

[illegible]

FIGURE 22A SCNT BOARD ASS'Y (FAX-L280)

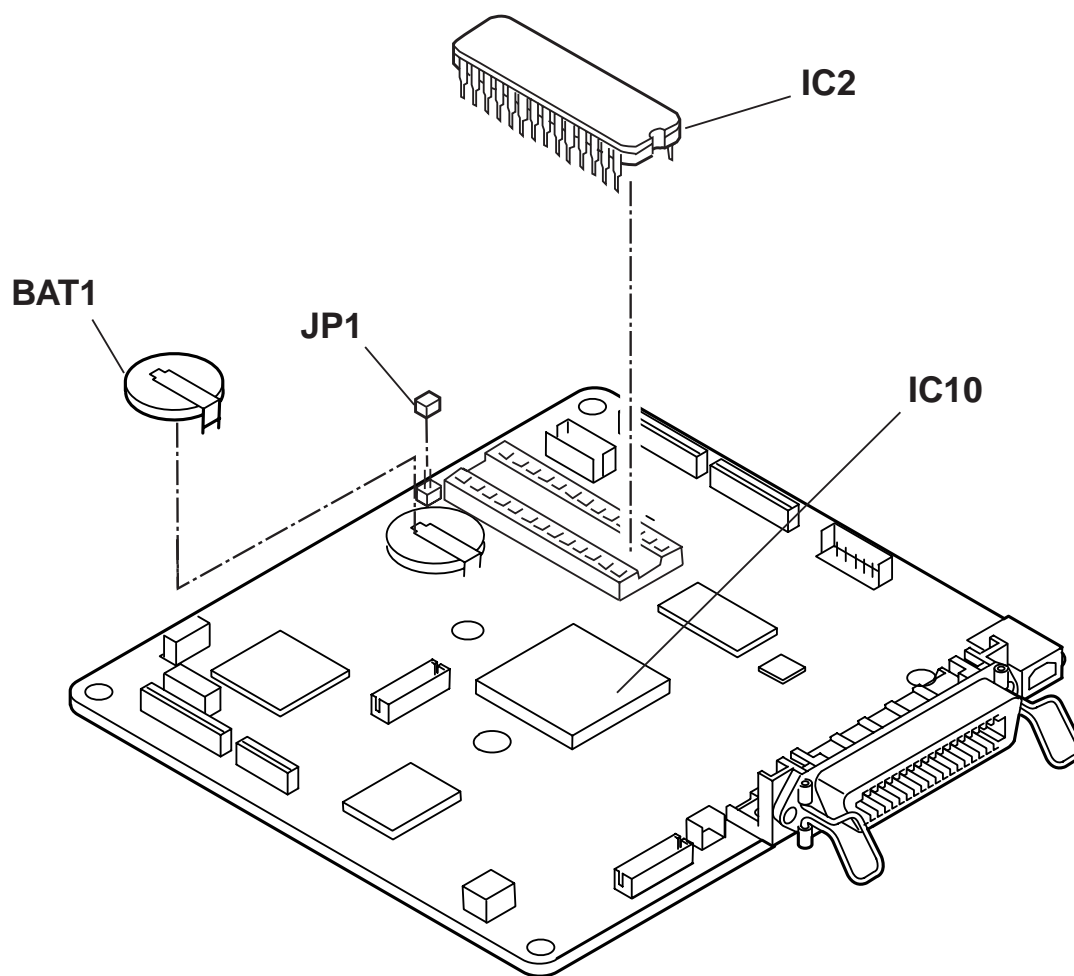 


FIGURE 22B SCNT BOARD ASS'Y (FAX-L240/L290)



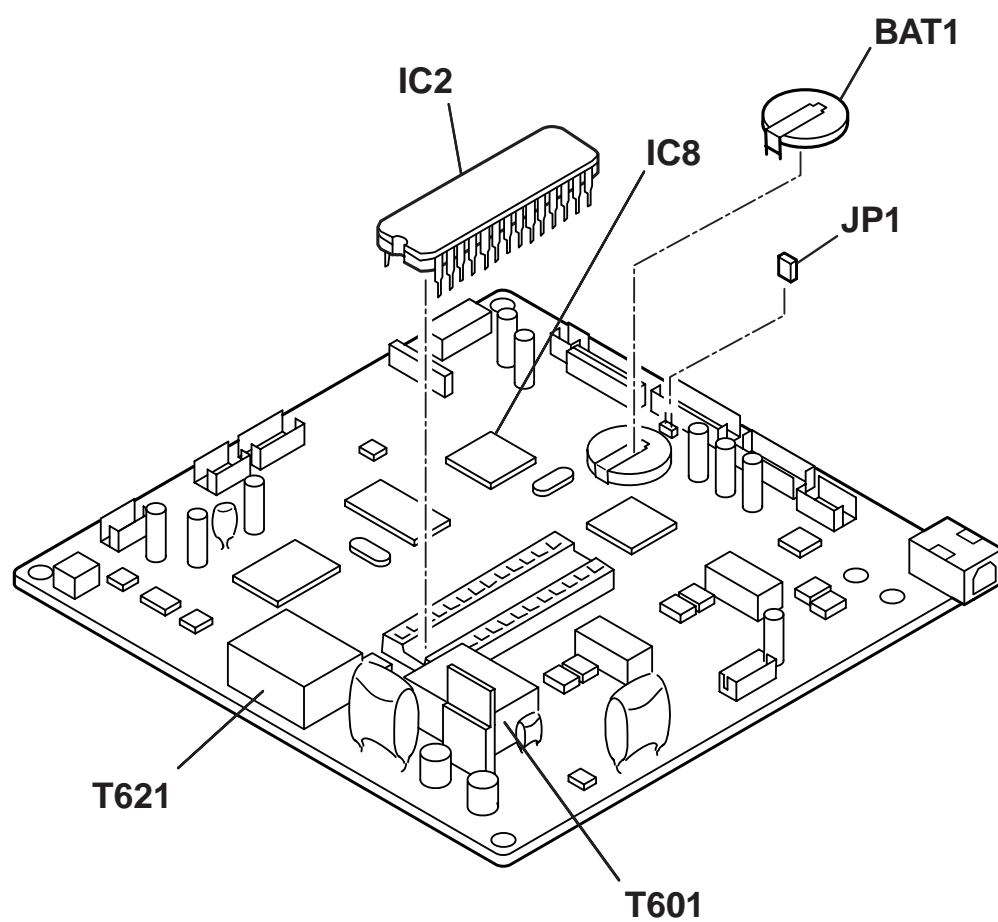 


FIGURE 23A PCNT BOARD ASS'Y (FAX-L200/L280)

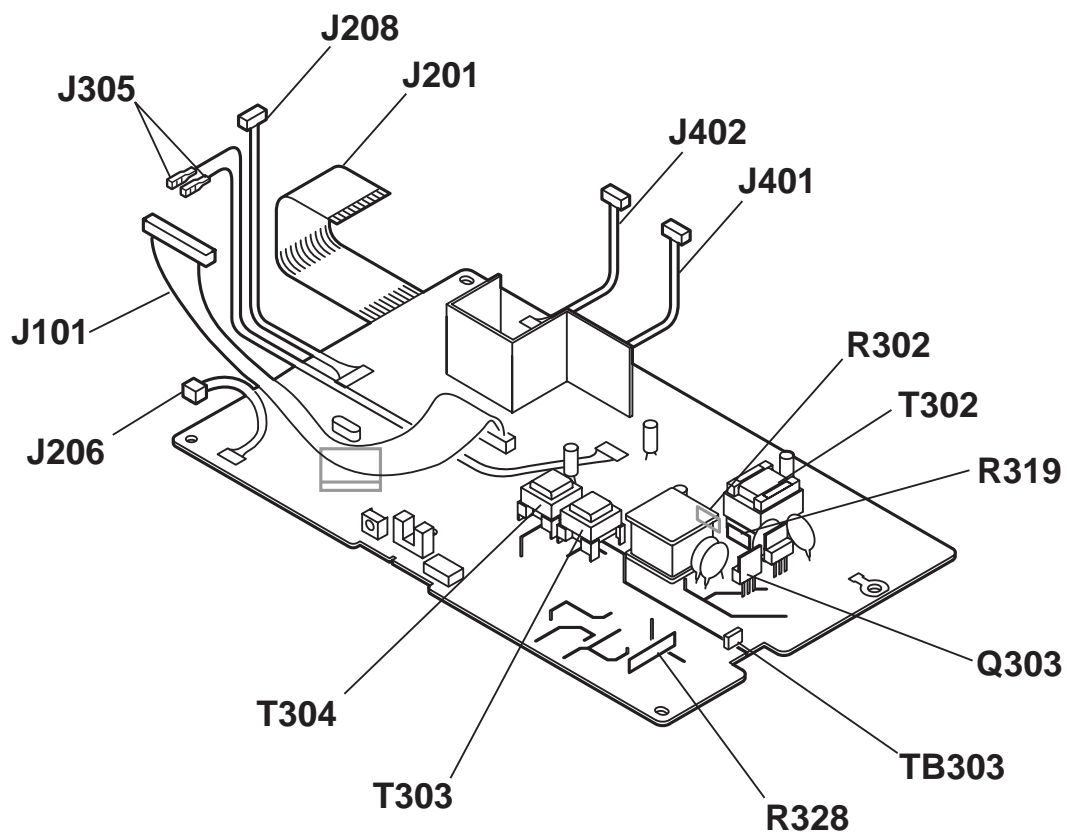 


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|---------------------------|----------------|
| 23A - J101 | HG5-2581-000 | | 1 | CABLE WITH CONNECTOR, 13P | |
| J201 | HH2-3083-000 | | 1 | CABLE, FLAT, 19P | |
| J206 | HG5-2577-000 | | 1 | CABLE WITH CONNECTOR, 2P | |
| J208 | HG5-2576-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| J305 | HG5-2580-000 | | 1 | CABLE WITH CONNECTOR, 2P | |
| J401 | HG5-2579-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| J402 | HG5-2578-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| Q303 | RH6-0119-000 | | 1 | TRANSISTOR, 2SC5273-01 | |
| R302 | RH6-3857-000 | | 1 | RESISTOR, 10MOHM, 0.4W | |
| R319 | RH6-3857-000 | | 1 | RESISTOR, 10MOHM, 0.4W | |
| R328 | RH6-3860-000 | | 1 | RESISTOR, 100MOHM, 0.4W | |
| T302 | RH3-0248-000 | | 1 | TRANSFORMER, 500VA UNDER | |
| T303 | RH3-5016-000 | | 1 | TRANSFORMER, 500VA UNDER | |
| T304 | RH3-5016-000 | | 1 | TRANSFORMER, 500VA UNDER | |
| TB303 | RH2-5330-000 | | 1 | CONNECTOR, 2P | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 23B PCNT BOARD ASS'Y (FAX-L240/L290)

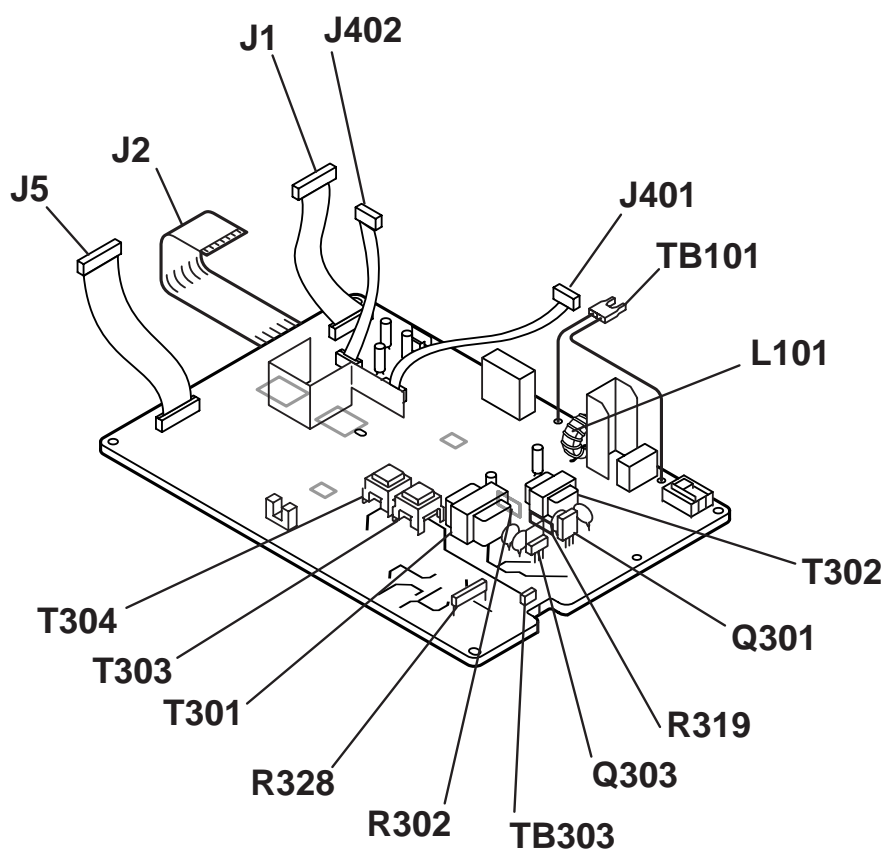


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|-------------------------------------|-----------------|----------------------------|----------------------|---------------------------|----------------|
| 23B- J1 | HG5-2977-000 | | 1 | CABLE WITH CONNECTOR, 6P | |
| J2 | HH2-3202-000 | | 1 | CABLE, FLAT, 15P | |
| J5 | HG5-2974-000 | | 1 | CABLE WITH CONNECTOR, 10P | |
| J401 | HG5-2975-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| J402 | HG5-2976-000 | | 1 | CABLE WITH CONNECTOR, 4P | |
| L101 | RH3-0193-000 | | 1 | INDUCTOR, SK-08MD-4ZY | |
| Q301 | RH6-3859-000 | | 1 | TRANSISTOR, 2SC5460 | |
| Q303 | RH6-0119-000 | | 1 | TRANSISTOR, 2SC5273-01 | |
| R302 | RH6-3857-000 | | 1 | RESISTOR, 10MOHM, 0.4W | |
| R319 | RH6-3857-000 | | 1 | RESISTOR, 10MOHM, 0.4W | |
| R328 | RH6-3860-000 | | 1 | RESISTOR, 100MOHM, 0.4W | |
| T301 | RH3-0251-000 | | 1 | TRANSFORMER, 500VA | |
| T302 | RH3-0284-000 | | 1 | TRANSFORMER, 500VA | |
| T303 | RH3-0250-000 | | 1 | TRANSFORMER, 500VA | |
| T304 | RH3-0250-000 | | 1 | TRANSFORMER, 500VA | |
| TB101 | HG5-2978-000 | | 1 | CABLE WITH CONNECTOR, 2P | |
| TB303 | RH2-5330-000 | | 1 | CONNECTOR, 2P | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 24 NCU BOARD ASS'Y (FAX-L200/L280)

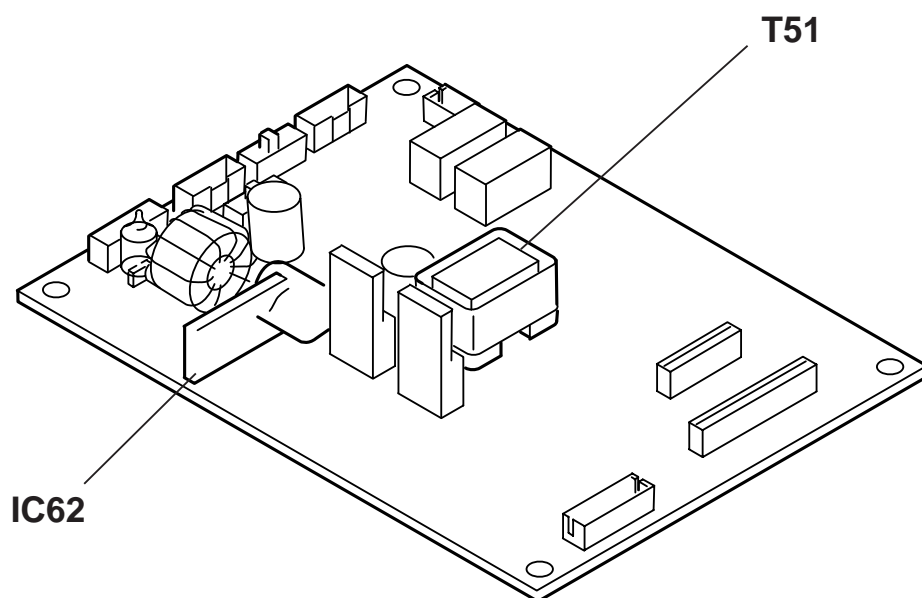


[illegible]

 FIGURE 25A MODULAR BOARD ASS'Y (FAX-L200/L280)

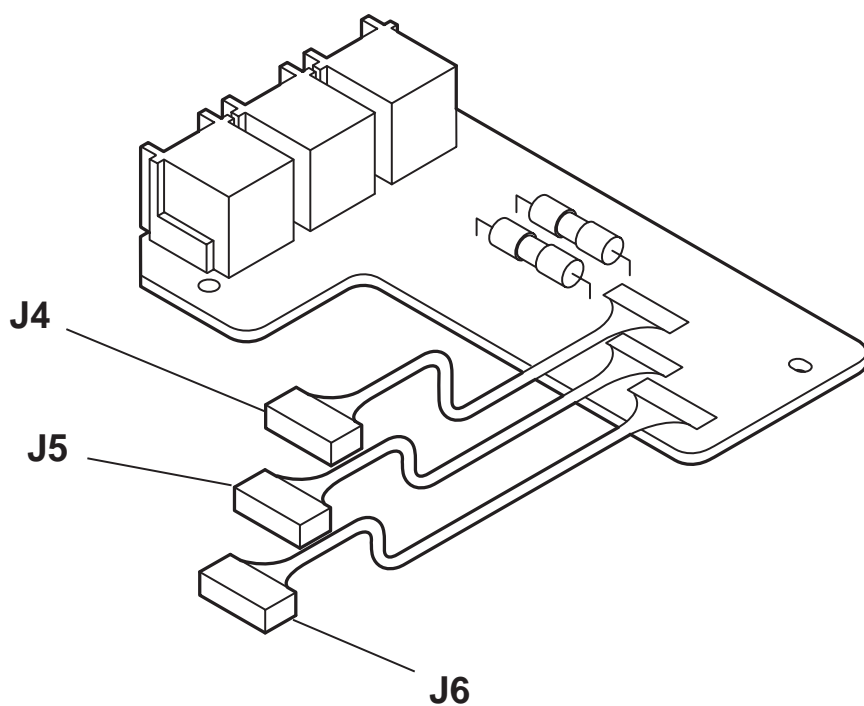


[illegible]

 FIGURE 25B MODULAR BOARD ASS'Y (FAX-L240/L290)

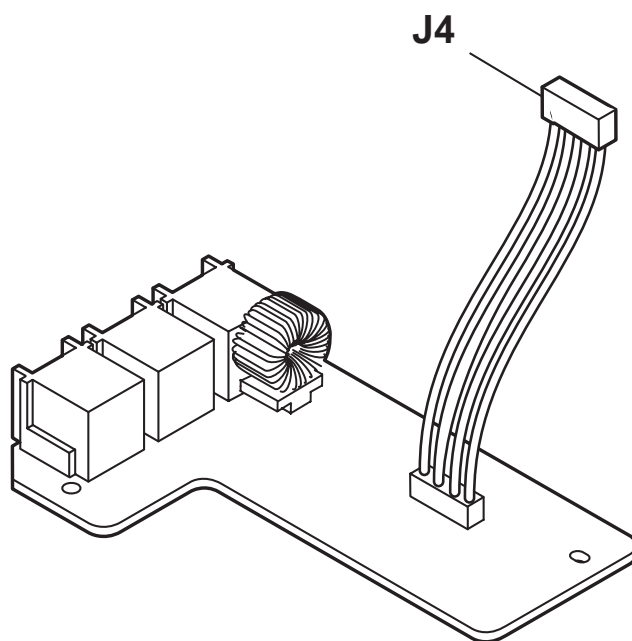


| FIGURE & KEY No. | PART No. | R A N K | Q T Y | DESCRIPTION | REMARKS |
|------------------------|--------------|------------------|-------------|--------------------------|---------|
| 25B- J4 | HG5-2973-000 | | 1 | CABLE WITH CONNECTOR, 5P | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

 FIGURE 26 OPCNT BOARD ASS'Y

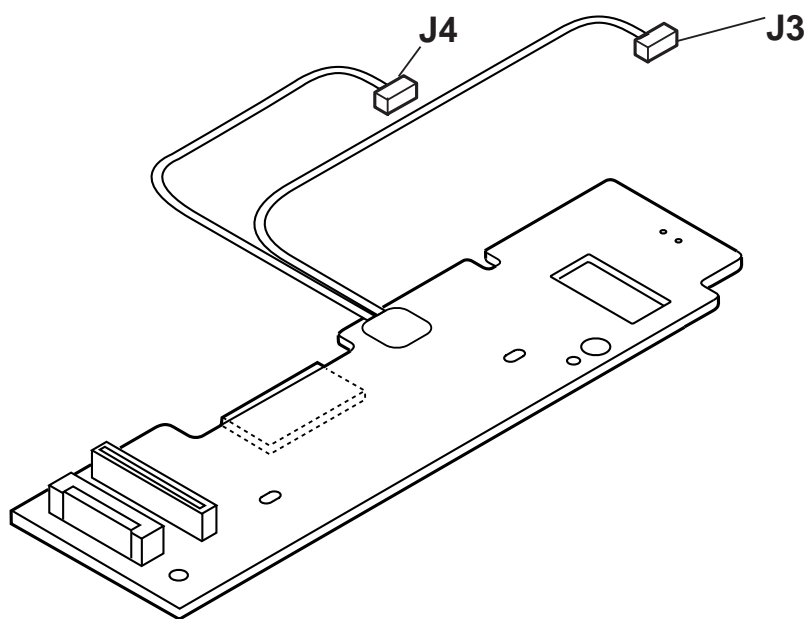

[illegible]

 
**FIGURE 27 HANDSET KIT 3
TELEPHONE 6 KIT**

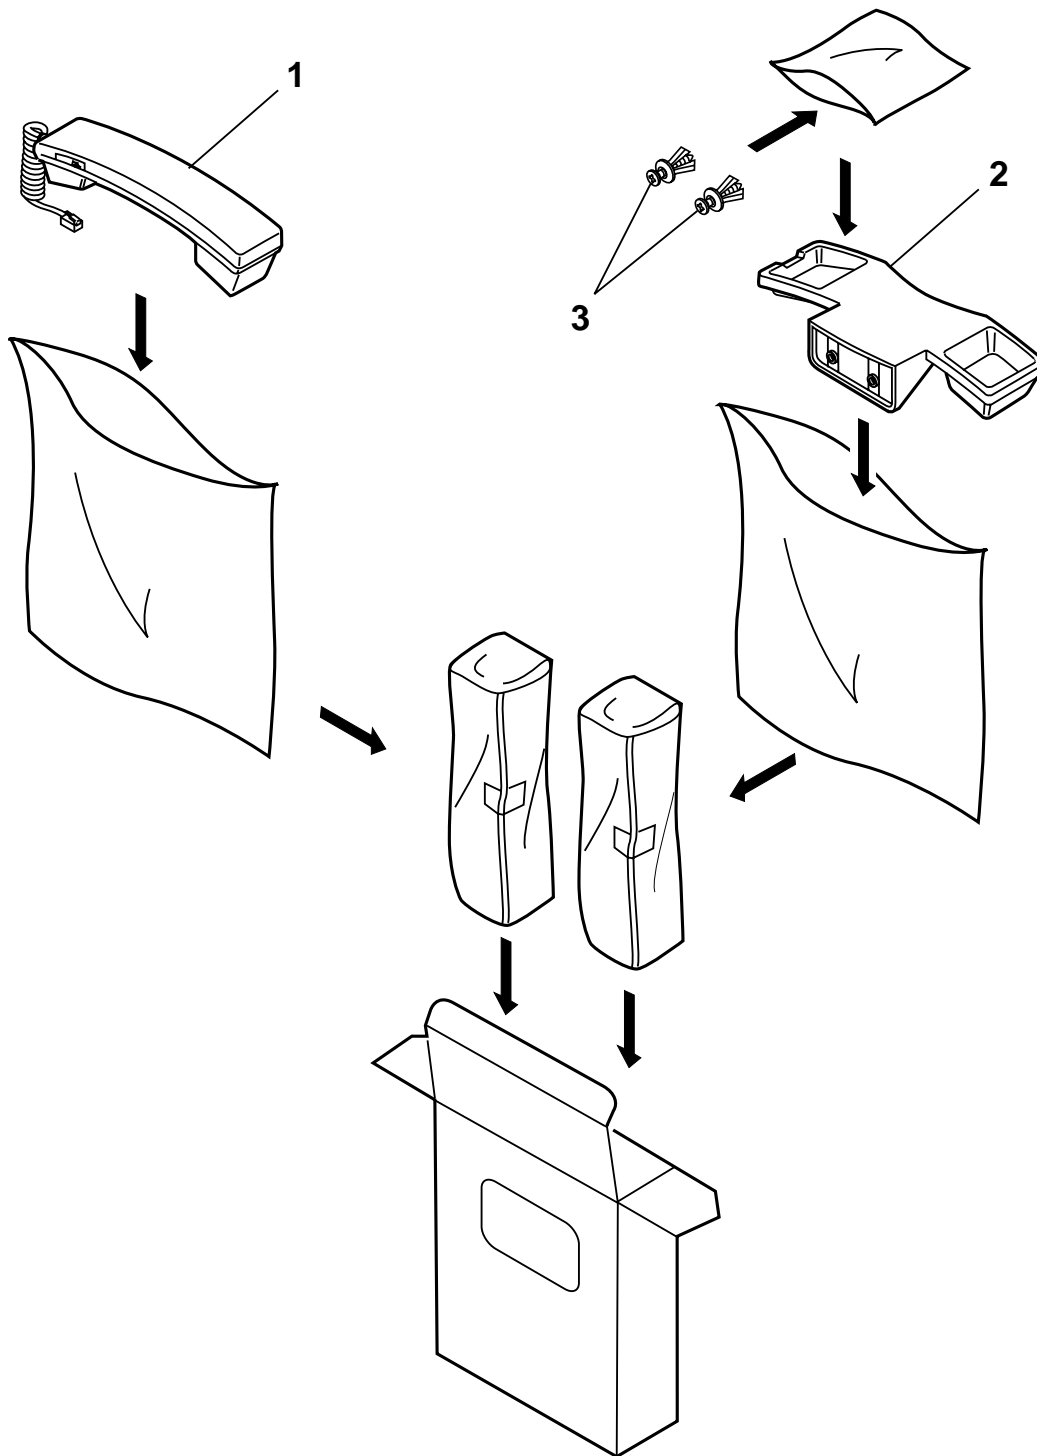

[illegible]

3. TOOL

 FIGURE 28 TOOLS

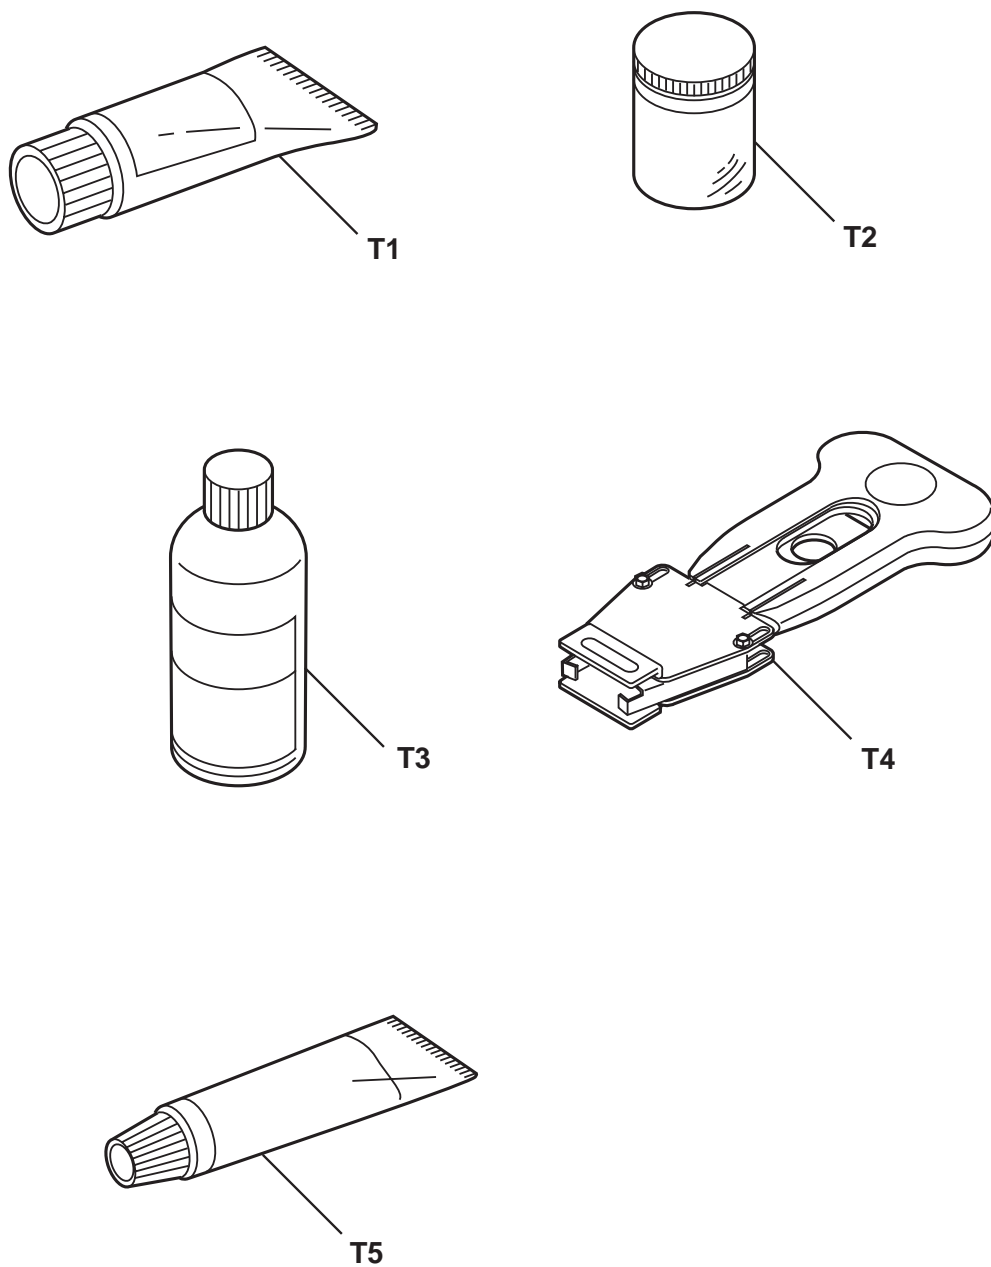


[illegible]

4. LUBRICATIONS

4.1 Locations


Some parts are lubricated with grease to ensure smooth operation and to increase conductivity. If lubricated parts are replaced or grease is removed, grease must be reapplied.

 4.1.1 ADF UPPER

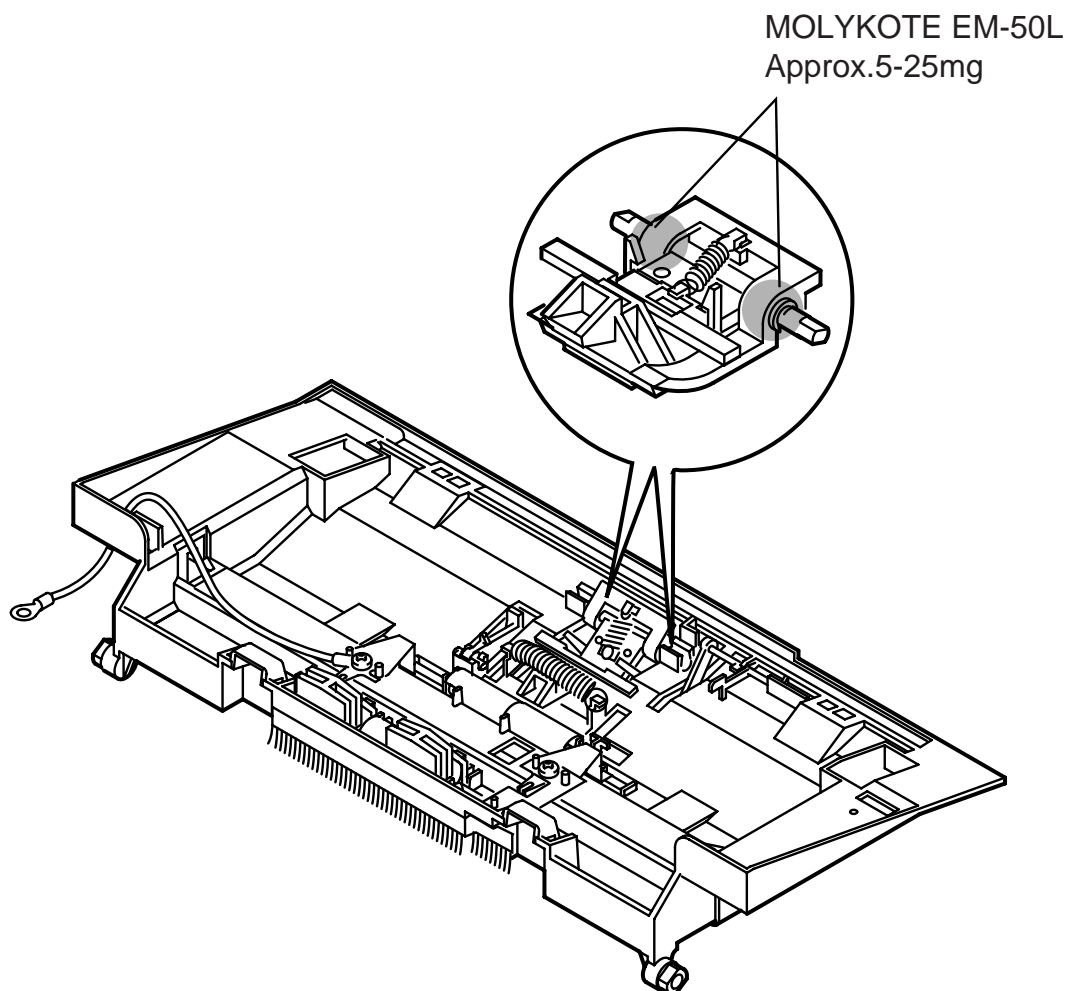


See FIGURE 8 for the disassembly

 4.1.2 ADF LOWER

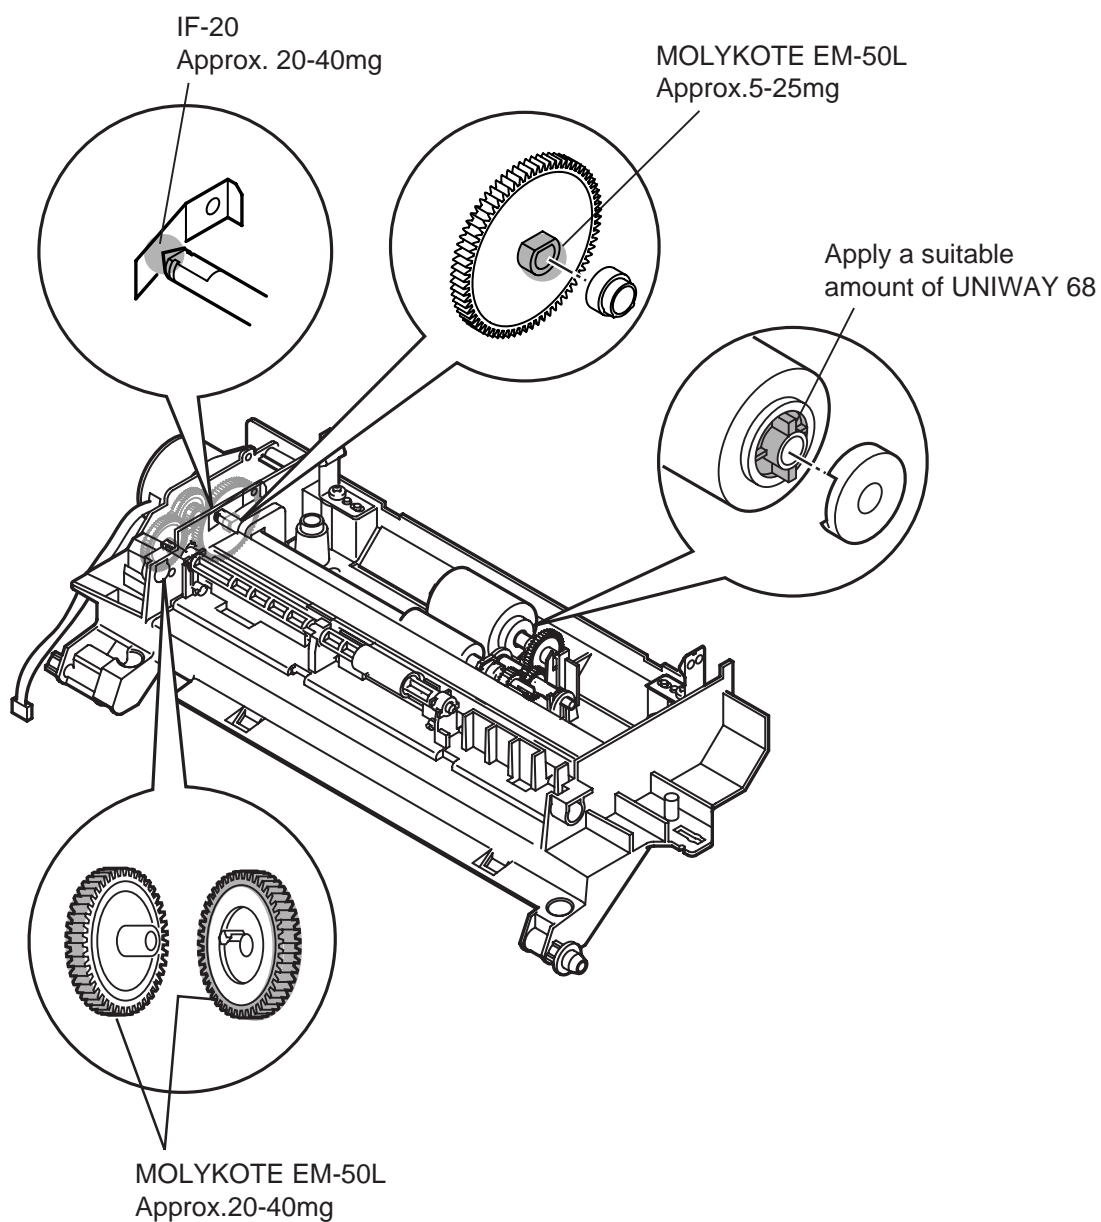

See FIGURE 10 for the disassembly

 4.1.3 DRIVE GEARS

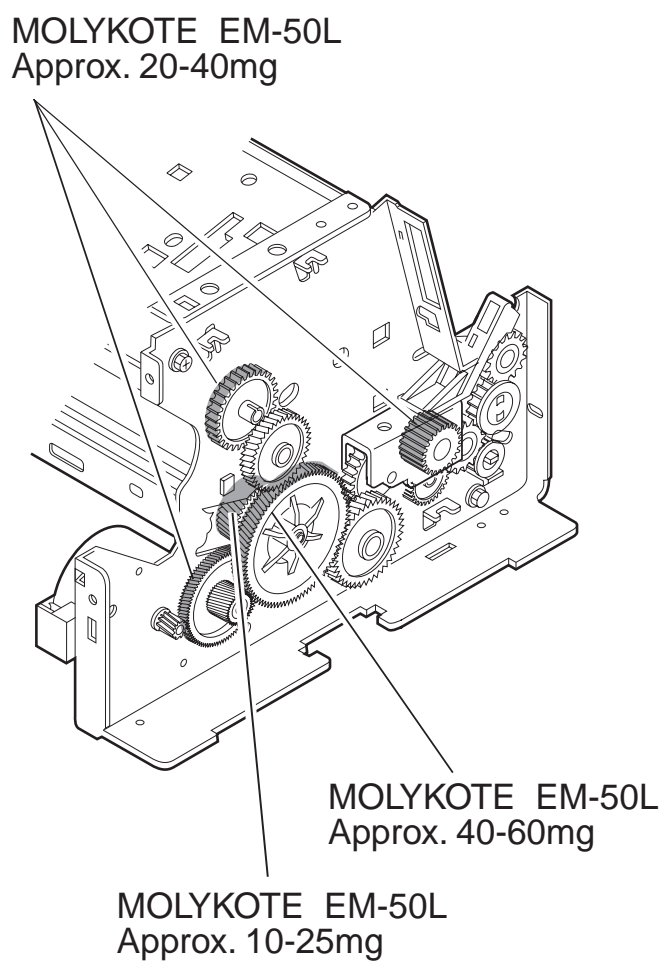

See FIGURE 13 for the disassembly

5. NUMERICAL INDEX

| PART NUMBER | FIGURE & KEY No. | DESCRIPTION | PART NUMBER | FIGURE & KEY No. | DESCRIPTION |
|----------------|---------------------|----------------------------|----------------|---------------------|-------------------------------|
| CK-0451-000 | 28 - T3 | LUBE, UNIWAY 68, OIL | HB1-4826-000 | 2 - 5 | TRAY, AUTO PAPER FEED |
| CK-8006-000 | 28 - T2 | ELECTRICITY GREASE (IF-20) | HB1-4827-000 | 2 - 3 | GUIDE, AUTO PAPER FEED, LEFT |
| HA2-0868-000 | 1A - 7 | LABEL, MERCURY | HB1-4828-000 | 2 - 4 | GUIDE, AUTO PAPER FEED, RIGHT |
| HB1-1779-000 | 10 - 3 | SPACER | HB1-4830-000 | 6 - 2 | GUIDE, FACE DOWN |
| HB1-2863-000 | 8 - 7 | STOPPER, DOCUMENT | HB1-4831-000 | 7 - 2 | COVER, CARTRIDGE |
| HB1-2864-000 | 8 - 8 | ROLLER, BACK UP | HB1-4832-000 | 6 - 4 | GUIDE, PAPER EJECT |
| HB1-2866-000 | 8 - 9 | PLATE, PRESSURE | HB1-4833-000 | 7 - 3 | GUIDE, DOCUMENT FEED, LEFT |
| HB1-2991-000 | 3A - 1 | PIN, TAPER | HB1-4834-000 | 7 - 4 | GUIDE, DOCUMENT FEED, RIGHT |
| | 3B - 1 | | HB1-4835-000 | 6 - 3 | DUCT, AIR |
| HB1-3008-000 | 2 - 6 | RACK | HB1-4836-000 | 6 - 5 | LEVER, ADF RELEASE |
| HB1-3011-040 | 16 - 10 | HOLDER, TONER SENSOR | HB1-4837-000 | 9 - 1 | HOLDER, SENSOR |
| HB1-3012-000 | 16 - 12 | SUPPORTER, TONER SENSOR | HB1-4838-000 | 8 - 4 | FRAME, ADF UPPER |
| HB1-3013-000 | 16 - 9 | HOLDER, ROLLER | HB1-4839-000 | 8 - 5 | ARM, DETECTION (DS) |
| HB1-3014-000 | 16 - 14 | SUB HOLDER, ROLLER | HB1-4840-000 | 8 - 6 | GUIDE, DOCUMENT EJECT |
| HB1-3015-000 | 16 - 13 | BELT, TONER SENSOR | HB1-4842-000 | 9 - 2 | COVER, OPERATION PANEL |
| HB1-3018-000 | 11 - 1 | STOPPER, TAPE | HB1-4843-000 | 9 - 3 | KEY TOP, DIAL |
| HB1-3019-000 | 14 - 5 | STOPPER, CARTRIDGE | HB1-4844-000 | 9 - 4 | KEY TOP, ONE TOUCH DIAL |
| HB1-3023-000 | 5A - 8 | HOLDER, SPEAKER | HB1-4845-000 | 9 - 5 | KEY TOP, MAIN |
| | 5B - 8 | | HB1-4846-000 | 9 - 6 | KEY TOP, FUNCTION |
| HB1-3036-000 | 10 - 19 | PLATE, GROUNDING | HB1-4848-000 | 8 - 1 | COVER, ONE TOUCH DIAL |
| HB1-3109-020 | 10 - 22 | STOPPER, CRG | HB1-4850-000 | 10 - 1 | FRAME, ADF LOWER |
| HB1-3257-000 | 8 - 10 | STOPPER, OPERATION PANEL | HB1-4852-000 | 8 - 3 | SHEET, OPERATION PANEL |
| | 10 - 23 | | HB1-4853-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |
| HB1-3418-000 | 11 - 5 | PLATE, GROUNDING | HB1-4854-000 | 1A - 11 | LABEL, WARNING |
| HB1-4072-000 | 8 - 11 | BRUSH, STATIC DISCHARGE | | 1B - 9 | |
| HB1-4261-000 | 10 - 25 | SHEET | HB1-4855-000 | 1A - 5 | COVER, OPERATION |
| HB1-4307-000 | 10 - 4 | ROLLER, DOCUMENT FEED | | 8 - 21 | |
| HB1-4310-000 | 8 - 12 | ARM, DETECTION (DES) | HB1-4856-000 | 10 - 2 | ROLLER, SEPARATION |
| HB1-4324-000 | 6 - 1 | DUCT, AIR | HB1-4859-000 | 8 - 3 | SHEET, OPERATION PANEL |
| HB1-4361-000 | 4A - 9 | SPACER | HB1-4860-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |
| | 4B - 7 | | HB1-4861-000 | 8 - 3 | SHEET, OPERATION PANEL |
| | 5A - 12 | | HB1-4862-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |
| | 5B - 12 | | HB1-4978-000 | 1A - 14 | HOLDER, HANDSET CRADLE |
| HB1-4813-000 | 2 - 1 | COVER, MAIN | | 27 - 2 | |
| HB1-4814-000 | 2 - 1 | COVER, MAIN | HB1-5058-000 | 8 - 22 | PLATE, GROUNDING |
| HB1-4815-000 | 5A - 16 | COVER, FRONT | HB1-5069-000 | 5A - 13 | FOOT, PRINTER |
| | 5B - 16 | | | 5B - 13 | |
| HB1-4816-000 | 2 - 12 | COVER, CONNECTOR | HB1-5070-000 | 8 - 3 | SHEET, OPERATION PANEL |
| HB1-4817-000 | 5A - 15 | LEVER, FLAPPER | HB1-5071-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |
| | 5B - 15 | | HB1-5127-000 | 1A - 6 | LABEL, DESTINATION |
| HB1-4818-000 | 1A - 1 | TRAY, SUPPORT | | 1B - 5 | |
| | 1B - 1 | | HB1-5513-000 | 11 - 11 | COVER, CABLE |
| HB1-4819-000 | 1A - 2 | TRAY, MULTI-PURPOSE | HB1-5514-000 | 2 - 12 | COVER, CONNECTOR |
| | 1B - 2 | | HB1-5515-000 | 8 - 21 | COVER, OPERATION |
| HB1-4820-000 | 1A - 3 | COVER, MULTI-PURPOSE TRAY | HB1-5516-000 | 8 - 21 | COVER, OPERATION |
| | 1B - 3 | | HB1-5526-000 | 9 - 5 | KEY TOP, MAIN |
| HB1-4821-000 | 1A - 4 | SUPPORT, DOCUMENT | HB1-5527-000 | 9 - 6 | KEY TOP, FUNCTION |
| | 1B - 4 | | HB1-5528-000 | 9 - 2 | COVER, OPERATION PANEL |
| HB1-4822-000 | 1A - 5 | COVER, OPERATION | HB1-5529-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |
| | 8 - 21 | | HB1-5530-000 | 8 - 3 | SHEET, OPERATION PANEL |
| HB1-4824-000 | 5A - 10 | GUIDE, CABLE | HB1-5531-000 | 8 - 3 | SHEET, OPERATION PANEL |
| | 5B - 10 | | HB1-5532-000 | 8 - 3 | SHEET, OPERATION PANEL |
| HB1-4825-000 | 15 - 13 | HOLDER, STOPPER | HB1-5533-000 | 8 - 20 | SHEET, ONE TOUCH DIAL |

| PART NUMBER | FIGURE & KEY No. | DESCRIPTION | PART NUMBER | FIGURE & KEY No. | DESCRIPTION |
|------------------------|---------------------------------|---------------------------|------------------------|---------------------------------|----------------------------------|
| HB1-5534-000 | 8 - 20 | SHEET, ONE TOUCH DIAL | HG5-2974-000 | 23B - J5 | CABLE WITH CONNECTOR, 10P |
| HB1-5535-000 | 8 - 21 | COVER, OPERATION | HG5-2975-000 | 23B - J401 | CABLE WITH CONNECTOR, 4P |
| HB1-5536-000 | 8 - 21 | COVER, OPERATION | HG5-2976-000 | 23B - J402 | CABLE WITH CONNECTOR, 4P |
| HB1-5538-000 | 9 - 13 | SHEET | HG5-2977-000 | 23B - J1 | CABLE WITH CONNECTOR, 6P |
| HB1-5594-000 | 8 - 3 | SHEET, OPERATION PANEL | HG5-2978-000 | 23B - TB101 | CABLE WITH CONNECTOR, 2P |
| HB1-5595-000 | 8 - 20 | SHEET, ONE TOUCH DIAL | HG5-2979-000 | 10 - 24 | CABLE WITH CONNECTOR, 7P |
| HF5-0375-000 | 10 - 16 | LOCK, OPERATION PANEL | HG5-2980-000 | 15 - 27 | CABLE WITH CONNECTOR, 5P |
| HF5-0399-000 | 8 - 18 | WHITE SHEET UNIT | HG5-2981-000 | 5B - 5 | CABLE WITH CONNECTOR, 9P |
| HF5-0543-000 | 10 - 17 | ROLLER, DOCUMENT EJECT | HG5-2982-000 | 4B - 1 | CABLE WITH CONNECTOR, 6P |
| HG5-1290-000 | 11 - 2 | ACTUATOR UNIT | HG5-2983-000 | 4B - 2 | CABLE WITH CONNECTOR, 4P |
| HG5-2408-000 | 12 - 5 | FIXING ASS'Y | HG5-2984-000 | 5B - 19 | CABLE WITH CONNECTOR, 3P |
| HG5-2546-000 | 15 - 23 | PICKUP ROLLER ASS'Y | HG5-2986-000 | 5B - 9 | SPEAKER UNIT |
| HG5-2548-000 | 15 - 26 | FEEDER ASS'Y | HG5-2989-000 | 8 - 2 | OPERATION PANEL ASS'Y |
| HG5-2549-000 | 2 - 2 | AUTO PAPER FEED ASS'Y | HG9-0757-000 | 4A - 4 | SCNT BOARD ASS'Y |
| HG5-2556-000 | 8 - 19 | SEPARATION GUIDE ASS'Y | HH2-1914-000 | 1A - 9 | MODULAR CORD, 6P |
| HG5-2557-000 | 8 - 2 | OPERATION PANEL ASS'Y | | 1B - 7 | |
| HG5-2561-000 | 5A - 9 | SPEAKER UNIT | HH2-2074-000 | 1A - 9 | MODULAR CORD (GERM) |
| HG5-2562-000 | 5A - 17 | MODULAR BOARD ASS'Y | | 1B - 7 | |
| HG5-2563-000 | 5A - 2 | PCNT BOARD ASS'Y | HH2-2219-000 | 1A - 9 | MODULAR CORD |
| HG5-2564-000 | 9 - 10 | OPCNT BOARD ASS'Y | | 1B - 7 | |
| HG5-2565-030 | 4A - 4 | SCNT BOARD ASS'Y | HH2-2478-000 | 1A - 9 | MODULAR CORD, 2P |
| HG5-2566-050 | 4A - 4 | SCNT BOARD ASS'Y | HH2-2824-000 | 1A - 9 | MODULAR CORD, 2P |
| HG5-2567-000 | 5A - 5 | CABLE WITH CONNECTOR, 7P | HH2-3055-000 | 9 - 7 | CABLE, FLAT, 20P |
| HG5-2568-000 | 15 - 27 | CABLE WITH CONNECTOR, 3P | HH2-3056-000 | 4A - 1 | CABLE, FLAT, 14P |
| HG5-2573-000 | 4A - 8 | CABLE WITH CONNECTOR, 6P | HH2-3057-000 | 4A - 2 | CABLE, FLAT, 23P |
| HG5-2576-000 | 23A - J208 | CABLE WITH CONNECTOR, 4P | HH2-3083-000 | 23A - J201 | CABLE, FLAT, 19P |
| HG5-2577-000 | 23A - J206 | CABLE WITH CONNECTOR, 2P | HH2-3202-000 | 23B - J2 | CABLE, FLAT, 15P |
| HG5-2578-000 | 23A - J402 | CABLE WITH CONNECTOR, 4P | HH2-3203-000 | 9 - 7 | CABLE, FLAT, 15P |
| HG5-2579-000 | 23A - J401 | CABLE WITH CONNECTOR, 4P | HH3-5365-000 | 5A - 3 | POWER SUPPLY UNIT |
| HG5-2580-000 | 23A - J305 | CABLE WITH CONNECTOR, 2P | HH3-5371-000 | 5A - 3 | POWER SUPPLY UNIT |
| HG5-2581-000 | 23A - J101 | CABLE WITH CONNECTOR, 13P | HH3-5380-000 | 5A - 3 | POWER SUPPLY UNIT |
| HG5-2582-000 | 5A - 4 | CABLE WITH CONNECTOR, 2P | HH3-5389-000 | 5B - 3 | POWER SUPPLY UNIT |
| HG5-2583-000 | 10 - 24 | CABLE WITH CONNECTOR, 7P | HH4-3236-000 | 21 - IC10 | IC, HG73C051FD, GATE-ARRAY |
| HG5-2584-000 | 26 - J3 | CABLE WITH CONNECTOR, 3P | | 22A - IC10 | |
| HG5-2585-000 | 26 - J4 | CABLE WITH CONNECTOR, 3P | HH4-3451-040 | 21 - IC2 | IC, MR27V1652D-A2RA, OTP-ROM |
| HG5-2587-000 | 4A - 3 | NCU BOARD ASS'Y | HH4-3453-030 | 22A - IC2 | IC, MR27V1652D-A1RA, OTP-ROM |
| HG5-2588-000 | 25A - J4 | CABLE WITH CONNECTOR, 6P | HH4-3476-000 | 21 - IC301 | IC, CX06829-11, MODEM |
| HG5-2589-000 | 25A - J5 | CABLE WITH CONNECTOR, 4P | HH4-3660-000 | 1A - 12 | CD-ROM, DRIVER SOFTWARE |
| HG5-2590-000 | 25A - J6 | CABLE WITH CONNECTOR, 5P | HH4-3661-000 | 1A - 12 | CD-ROM, DRIVER SOFTWARE |
| HG5-2592-000 | 25A - J4 | CABLE WITH CONNECTOR, 6P | HH4-3664-000 | 22B - IC8 | IC, HG73C123, GATE-ARRAY |
| HG5-2593-000 | 25A - J5 | CABLE WITH CONNECTOR, 4P | HH4-3680-000 | 22B - IC2 | IC, MR27V1652ERA, OTP-ROM |
| HG5-2594-000 | 25A - J6 | CABLE WITH CONNECTOR, 5P | HH4-3721-000 | 1B - 10 | CD-ROM, DRIVER SOFTWARE |
| HG5-2597-000 | 5A - 17 | MODULAR BOARD ASS'Y | HH7-2423-000 | 16 - 11 | TONER SENSOR ASS'Y |
| HG5-2598-000 | 4A - 3 | NCU BOARD ASS'Y | HH7-2427-000 | 24 - T51 | TRANSFORMER, AUDIO |
| HG5-2699-000 | 4A - 7 | CABLE WITH CONNECTOR, 6P | HH7-2520-000 | 10 - 18 | IC, IA2008-MB21B, CONTACT SENSOR |
| HG5-2966-000 | 4B - 3 | SCNT BOARD ASS'Y | HH7-2521-000 | 9 - 8 | LCD UNIT |
| HG5-2967-000 | 4B - 3 | SCNT BOARD ASS'Y | HH7-2522-000 | 10 - 20 | MOTOR, DOCUMENT FEED |
| HG5-2968-000 | 5B - 2 | PCNT BOARD ASS'Y | HH7-2528-000 | 24 - IC62 | IC, THS-65, HYBRID |
| HG5-2969-000 | 5B - 17 | MODULAR BOARD ASS'Y | HH7-2529-000 | 9 - 11 | MEMBRANE UNIT |
| HG5-2970-000 | 9 - 10 | OPCNT BOARD ASS'Y | HH7-2547-000 | 27 - 1 | HANDSET UNIT |
| HG5-2971-000 | 26 - J3 | CABLE WITH CONNECTOR, 3P | HH7-2591-000 | 27 - 1 | HANDSET UNIT |
| HG5-2972-000 | 26 - J4 | CABLE WITH CONNECTOR, 3P | HH7-2593-000 | 1A - 13 | HANDSET UNIT |
| HG5-2973-000 | 25B - J4 | CABLE WITH CONNECTOR, 5P | HH7-2634-000 | 27 - 1 | HANDSET UNIT (EU, CW) |

| PART NUMBER | FIGURE & KEY No. | DESCRIPTION | PART NUMBER | FIGURE & KEY No. | DESCRIPTION |
|------------------------|---------------------------------|--------------------------------|------------------------|---------------------------------|------------------------------|
| HH7-2635-000 | 27 - 1 | HANDSET UNIT (UK, CW) | RB1-7224-000 | 15 - 19 | RATCHET |
| HH7-2679-000 | 9 - 8 | LCD UNIT | RB1-7236-000 | 19 - 8 | PIN, CONTACT |
| HH7-2680-000 | 22B - T621 | TRANSFORMER | RB1-7237-000 | 19 - 6 | PIN, CONTACT |
| HH7-2681-000 | 22B - T601 | TRANSFORMER | RB1-7246-000 | 14 - 9 | BUSHING |
| HH7-2723-000 | 16 - 11 | TONER SENSOR ASS'Y | RB1-7247-000 | 12 - 4 | GUIDE, PAPER |
| HH9-0271-000 | 21 - IC2 | IC, MR27V1652D-D0RA, OTP-ROM | RB1-7277-000 | 20 - 4 | SPRING, TORSION |
| HS1-1063-000 | 10 - 5 | BUSHING | RB1-7284-020 | 18 - 3 | ROLLER, FACE DOWN |
| HS5-0254-000 | 2 - 8 | GEAR, Z16 | RB1-7286-000 | 18 - 4 | SPRING, WIRE |
| | 7 - 6 | | RB1-7287-000 | 18 - 6 | SPRING, WIRE |
| HS5-0311-000 | 10 - 6 | GEAR, Z82D | RB1-7288-020 | 12 - 11 | BUSHING |
| HS5-0312-000 | 10 - 7 | GEAR, Z59D | RB1-7293-030 | 20 - 1 | LEVER, SENSOR |
| HS5-0313-000 | 10 - 8 | GEAR, Z21/Z54 | RB1-7294-000 | 20 - 2 | SPRING, TORSION |
| HS5-0314-000 | 10 - 9 | GEAR, Z40D | RB1-7334-000 | 18 - 7 | GUIDE, JAMMED PAPER REMOVAL |
| HS5-0315-000 | 10 - 10 | GEAR, Z21D | RB1-7341-030 | 12 - 10 | GUIDE, SUB, CARTRIDGE, RIGHT |
| HS5-0316-000 | 10 - 11 | GEAR, Z21/28B | RB1-7344-020 | 5A - 1 | COVER, AC CABLE |
| HS5-1070-030 | 10 - 12 | BUSHING | | 5B - 1 | |
| HS5-1090-000 | 10 - 13 | BUSHING | RB1-8170-000 | 13 - 1 | LEVER, RELEASE, D |
| HS5-2077-000 | 10 - 14 | SPRING, CLUTCH | RB2-1633-000 | 16 - 7 | ROLLER, SUB |
| HS5-2078-000 | 8 - 13 | SPRING | RB2-1654-000 | 19 - 9 | BLOCK, TRANSFER |
| HS5-2129-000 | 8 - 14 | SPRING, WHITE SHEET | RB2-1655-000 | 19 - 2 | BUSHING |
| HS5-2139-000 | 16 - 15 | SPRING, TONER SENSOR | RB2-1657-000 | 19 - 1 | ELIMINATOR, STATIC CHARGE |
| HS5-2141-020 | 2 - 7 | SPRING, SLIDER | RB2-1668-000 | 12 - 2 | RUBBER, CONTINUITY |
| | 7 - 5 | | RB2-1685-000 | 18 - 5 | ROLLER, FACE UP |
| HS5-6023-030 | 8 - 15 | ROLLER, BACK UP | RB2-1686-020 | 18 - 2 | FRAME |
| HS5-6069-000 | 8 - 16 | ROLLER, DELIVERY | RB2-1687-000 | 20 - 5 | GUIDE, SEPARATION |
| HT1-2166-000 | 1A - 10 | USER'S GUIDE (ENGLISH) | RB2-1689-000 | 20 - 8 | ROD, REINFORCEMENT |
| HT1-2194-000 | 1B - 8 | USER'S GUIDE (ENGLISH) | RB2-1690-000 | 20 - 7 | BUSHING |
| HT1-3099-000 | 1A - 10 | USER'S GUIDE (MODELE FRANCE) | RB2-1691-000 | 20 - 3 | SPRING, LEAF |
| HT1-3104-000 | 1B - 8 | USER'S GUIDE (MODELE FRANCE) | RB2-1699-000 | 17 - 1 | ROLLER |
| HT1-5075-000 | 1A - 10 | USER'S GUIDE (DEUTSCH) | RB2-1700-030 | 17 - 3 | LEVER, REGISTRATION SENSOR |
| HT1-5080-000 | 1B - 8 | USER'S GUIDE (DEUTSCH) | RB2-1701-000 | 16 - 5 | ROLLER, FEED |
| HT1-6044-000 | 1A - 10 | USER'S GUIDE (CHINESE) | RB2-1703-000 | 16 - 3 | ROLLER, SUB |
| HY9-0007-000 | 28 - T1 | LUBE, MOLYKOTE EM-50L, GREASE | RB2-1706-000 | 15 - 1 | SHEET, SEPARATION |
| HY9-0022-000 | 28 - T4 | IC-REMOVING TOOL (24-64P) | RB2-6214-000 | 19 - 4 | BUSHING |
| HY9-0023-000 | 28 - T5 | LUBE, MOLYKOTE EMD-110, GREASE | RB2-6220-000 | 5A - 6 | COVER, WATERPROOF |
| RB1-7107-000 | 14 - 6 | HOLDER, GEAR | | 5B - 6 | |
| RB1-7129-000 | 14 - 12 | SPRING, GROUNDING | RB2-6221-000 | 15 - 6 | ARM, SEPARATION |
| RB1-7130-020 | 14 - 8 | GUIDE, CABLE | RB2-6223-000 | 16 - 8 | ROLLER, PAPER PICK-UP |
| RB1-7172-000 | 15 - 11 | SPRING, GROUNDING | RF5-1492-000 | 15 - 8 | PAD, LEFT |
| RB1-7177-000 | 15 - 25 | FRAME, PAPER FEED | RF5-1493-000 | 15 - 9 | PAD, RIGHT |
| RB1-7184-000 | 15 - 24 | BUSHING | RF5-1513-000 | 13 - 2 | ARM, SWING |
| RB1-7185-000 | 15 - 3 | ARM, PLATE, LEFT | RF5-1514-020 | 14 - 1 | GUIDE, CARTRIDGE, LEFT |
| RB1-7186-000 | 15 - 4 | ARM, PLATE, RIGHT | RF5-1515-020 | 14 - 4 | GUIDE, CARTRIDGE |
| RB1-7193-000 | 16 - 1 | CAM, LEFT | RF5-1533-000 | 14 - 11 | PLATE, CONTINUITY |
| RB1-7194-000 | 16 - 16 | CAM, RIGHT | RF5-1534-000 | 14 - 2 | ROLLER, TRANSFER |
| RB1-7197-020 | 15 - 22 | CLUTCH | RF5-2358-000 | 14 - 3 | GUIDE, TRANSFER |
| RB1-7200-030 | 17 - 7 | HOLDER | RF5-2367-000 | 12 - 13 | ROLLER, FEEDER |
| RB1-7203-000 | 17 - 2 | ARM, PRESSURE | RF5-2368-000 | 20 - 6 | ROLLER, FACE UP |
| RB1-7205-000 | 17 - 4 | SPRING, TORSION | RF5-2372-000 | 15 - 2 | PLATE, MIDDLE |
| RB1-7206-000 | 15 - 10 | HOLDER, ARM | RF5-3256-000 | 11 - 9 | MOUNT, SENSING LEVER |
| RB1-7219-000 | 15 - 12 | STOPPER | RF5-5479-000 | 12 - 3 | ROLLER, PRESSURE |
| RB1-7221-000 | 15 - 16 | SHAFT, DRIVE | RG5-1947-000 | 15 - 21 | FEEDER DRIVE ASS'Y |
| RB1-7222-000 | 15 - 17 | BUSHING | RG5-3475-040 | 14 - 13 | SEPARATION GUIDE ASS'Y |

| PART NUMBER | FIGURE & KEY No. | DESCRIPTION | PART NUMBER | FIGURE & KEY No. | DESCRIPTION |
|------------------------|---------------------------------|----------------------------|------------------------|---------------------------------|--------------------------------|
| RG5-3476-030 | 20 - 9 | FLAPPER | WK1-5130-000 | 21 - BAT1 | BATTERY, LITHIUM, CR2032/1HS |
| RG5-3492-000 | 16 - 6 | FEED ROLLER ASS'Y, LEFT | | 22A - BAT1 | |
| RG5-5473-000 | 11 - 4 | SCANNER ASS'Y | | 22B - BAT1 | |
| RG5-5481-000 | 14 - 14 | TRANSFER BLOCK ASS'Y | WS1-5397-000 | 21 - JP1 | PLUG, JUMPER |
| RG5-5482-000 | 12 - 8 | DELIVERY ASS'Y | | 22A - JP1 | |
| RH2-5330-000 | 23A - TB303 | CONNECTOR, 2P | | 22B - JP1 | |
| | 23B - TB303 | | WT2-0317-000 | 4A - 5 | CLIP, CABLE |
| RH2-5344-000 | 1A - 8 | POWER SUPPLY CORD | | 4B - 9 | |
| RH3-0193-000 | 23B - L101 | INDUCTOR, SK-08MD-4ZY | | 5A - 11 | |
| RH3-0248-000 | 23A - T302 | TRANSFORMER, 500VA UNDER | | 5B - 11 | |
| RH3-0250-000 | 23B - T303 | TRANSFORMER, 500VA | WT2-5026-000 | 4A - 6 | CLIP, CABLE |
| | 23B - T304 | | WT2-5134-000 | 11 - 10 | CLAMP, CABLE |
| RH3-0251-000 | 23B - T301 | TRANSFORMER, 500VA | WT2-5465-000 | 1A - 15 | RIVET |
| RH3-0284-000 | 23B - T302 | TRANSFORMER, 500VA | | 27 - 3 | |
| RH3-5016-000 | 23A - T303 | TRANSFORMER, 500VA UNDER | WT2-5694-000 | 4B - 6 | CLIP, CABLE |
| | 23A - T304 | | | 5B - 4 | |
| RH6-0119-000 | 23A - Q303 | TRANSISTOR, 2SC5273-01 | WT2-5719-000 | 4B - 8 | CLIP, CABLE |
| | 23B - Q303 | | WT3-5020-000 | 1A - 8 | CORD, POWER |
| RH6-3857-000 | 23A - R302 | RESISTOR, 10MOHM, 0.4W | | 1B - 6 | |
| | 23A - R319 | | WT3-5023-000 | 1A - 8 | CORD, POWER |
| | 23B - R302 | | WT3-5058-000 | 1A - 8 | CORD, POWER |
| | 23B - R319 | | | 1B - 6 | |
| RH6-3859-000 | 23B - Q301 | TRANSISTOR, 2SC5460 | XA9-0724-000 | 14 - 7 | SCREW, M3X8 |
| RH6-3860-000 | 23A - R328 | RESISTOR, 100MOHM, 0.4W | XA9-0863-000 | 3A - 3 | SCREW, TAP M3X6 |
| | 23B - R328 | | | 3B - 3 | |
| RH7-1450-000 | 13 - 13 | MOTOR, STEPPING, DC 4.8W | | 4A - 11 | |
| RH7-5265-000 | 15 - 14 | SOLENOID | | 4B - 5 | |
| RH7-9033-000 | 10 - 26 | RING, CORE | | 5A - 18 | |
| RS5-0786-000 | 15 - 20 | GEAR, 24T | | 5B - 18 | |
| RS5-0788-000 | 13 - 7 | GEAR, 32T/93T | XA9-0931-000 | 2 - 10 | SCREW, RS, M3X12 |
| RS5-0789-000 | 13 - 4 | GEAR, 37T | XA9-1238-000 | 5B - 7 | SCREW W/WASHER, M3X8 |
| RS5-0790-000 | 13 - 8 | GEAR, 54T/19T | XB1-2300-407 | 10 - 21 | SCREW, BH3X4 (S) |
| RS5-0791-000 | 13 - 3 | GEAR, 36T | XB1-2300-807 | 3A - 2 | SCREW, CROSS-RECESS, FCH |
| RS5-0793-000 | 13 - 9 | GEAR, 22T | | 3B - 2 | |
| RS5-0794-000 | 13 - 10 | GEAR, 24T | | 4A - 10 | |
| RS5-0796-000 | 12 - 1 | GEAR, 27T | | 4B - 4 | |
| RS5-0797-000 | 12 - 12 | GEAR, 18T | | 7 - 7 | |
| RS5-0798-000 | 13 - 11 | GEAR, 15T | XB2-7300-607 | 5A - 7 | SCREW, M3X6 |
| RS5-0799-000 | 13 - 5 | GEAR, 51T/17T | XB3-6300-800 | 5A - 14 | SCREW, RS, M3X8 |
| RS5-2501-000 | 15 - 5 | SPRING, COMPRESSION | | 5B - 14 | |
| RS5-2502-000 | 15 - 7 | SPRING, COMPRESSION | | 11 - 6 | |
| RS5-2503-000 | 17 - 5 | SPRING, COMPRESSION | | 12 - 9 | |
| RS5-2504-000 | 19 - 3 | SPRING, COMPRESSION | XB4-7300-807 | 2 - 9 | SCREW, TAP TIGHT, BINDING HEAD |
| RS5-2505-000 | 19 - 5 | SPRING, COMPRESSION | | 8 - 17 | |
| RS5-2508-000 | 12 - 6 | SPRING, COMPRESSION | | 10 - 15 | |
| RS5-2510-000 | 15 - 18 | SPRING, COMPRESSION | | 11 - 8 | |
| RS5-2512-000 | 19 - 7 | SPRING, COMPRESSION | XB4-7301-009 | 8 - 23 | SCREW, BINDING HEAD SELF-TPG |
| RS5-8543-020 | 18 - 1 | LABEL, "WARNING HIGH TEMP" | | 9 - 12 | |
| RS6-0380-000 | 13 - 6 | GEAR, 23T/98T | XB4-7301-409 | 2 - 11 | SCREW, TAPPING M3X14 |
| VS1-5057-002 | 14 - 10 | CONNECTOR, 2P | XB4-7401-007 | 6 - 6 | SCREW, PAN HEAD SELF-TAPPING |
| WE8-5885-000 | 3B - 4 | CORE, FERRITE | | 7 - 8 | |
| WG8-5362-000 | 9 - 9 | PHOTO-INTERRUPTER, TLP1241 | | 15 - 15 | |
| | 17 - 6 | | XB6-7300-607 | 13 - 12 | SCREW, TP, M3X6 |

| PART NUMBER | FIGURE & KEY No. | DESCRIPTION |
|----------------|---------------------|-----------------|
| XB6-7300-807 | 11 - 7 | SCREW, TP, M3X8 |
| | 12 - 7 | |
| XD9-0131-000 | 16 - 4 | RING,E |
| XD9-0159-000 | 16 - 2 | PIN, DOWEL |

Canon